

ASSEMBLY INSTRUCTIONS

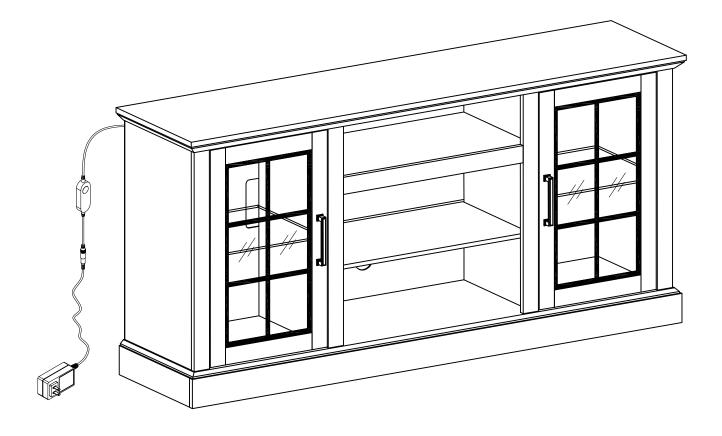


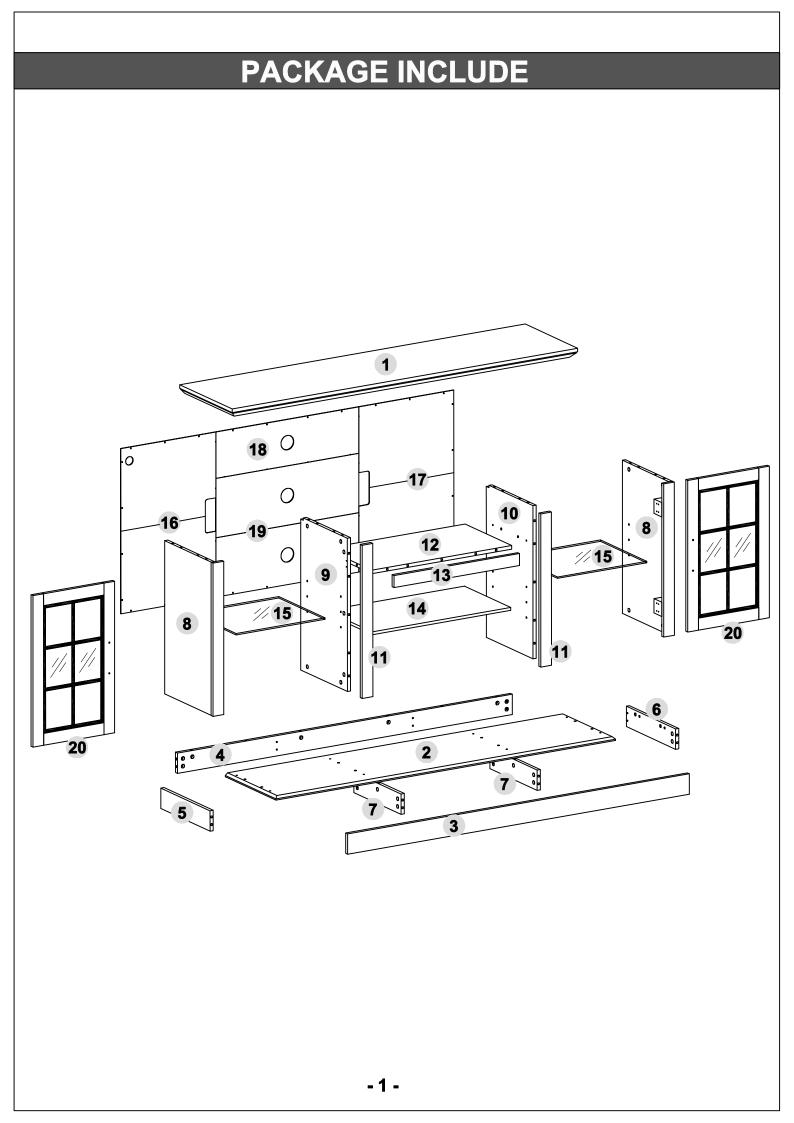

PART IDENTICATION

CODE	DESRIPTION	QTY
1	Top panel	1
2	Bottom panel	1
3	Base front leg	1
4	Base hind leg	1
5	Base left leg	1
6	Base right leg	1
7	Base support	2
8	Side panel	2
9	Left partition panel	1
10	Right partition panel	1
11	Partition baffle plate	2
12	Middle shelf	1
13	Middle shelf molding	1
14	Large adjustable shelf	1
15	Small adjustable shelf	2
16	Left side back panel	1
17	Right side back panel	1
18	Upper middle back panel	1
19	Lower middle back panel	1
20	Door	2

PACKAGE CONTENT Ø15x11MM Ø8x30MM Ð A B C D 51x+1 28x+1 51x+1 **8x** Ø3.5x14MM Ø3x14MM M6x12MM (2)))))))) MM B B G 8 16x 28x+1 **2**x 40x+1 Ø35MM 128MM K 0 J 0 12x 1x **4**x **2x** M4x18MM AND M 0 **4**x **1x 2x**

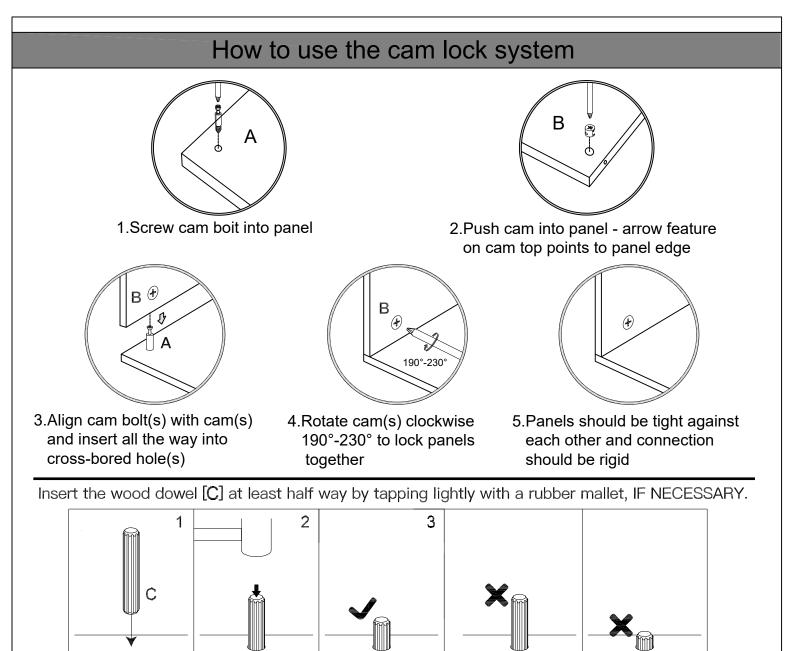

- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall by using the tip restraint.
- . Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.

X

- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.


Ready to assemble the TV Stand

It is divided into three parts in total:

- 1. Install the base part Base
- 2. Install the middle part Body
- 3. Install the top part Top plate





We recommend using a power drill to assemble.

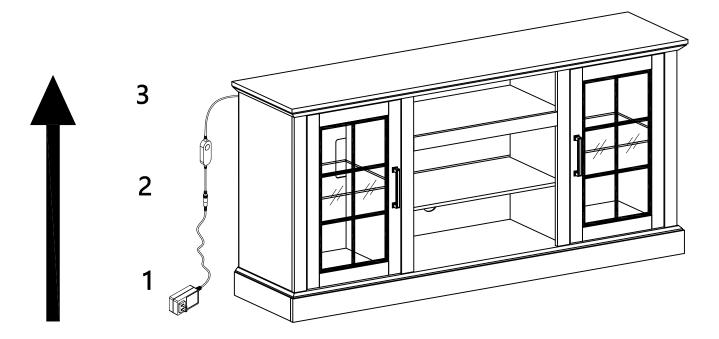



Warm Tips:

 
Start the installation from the base to the top.

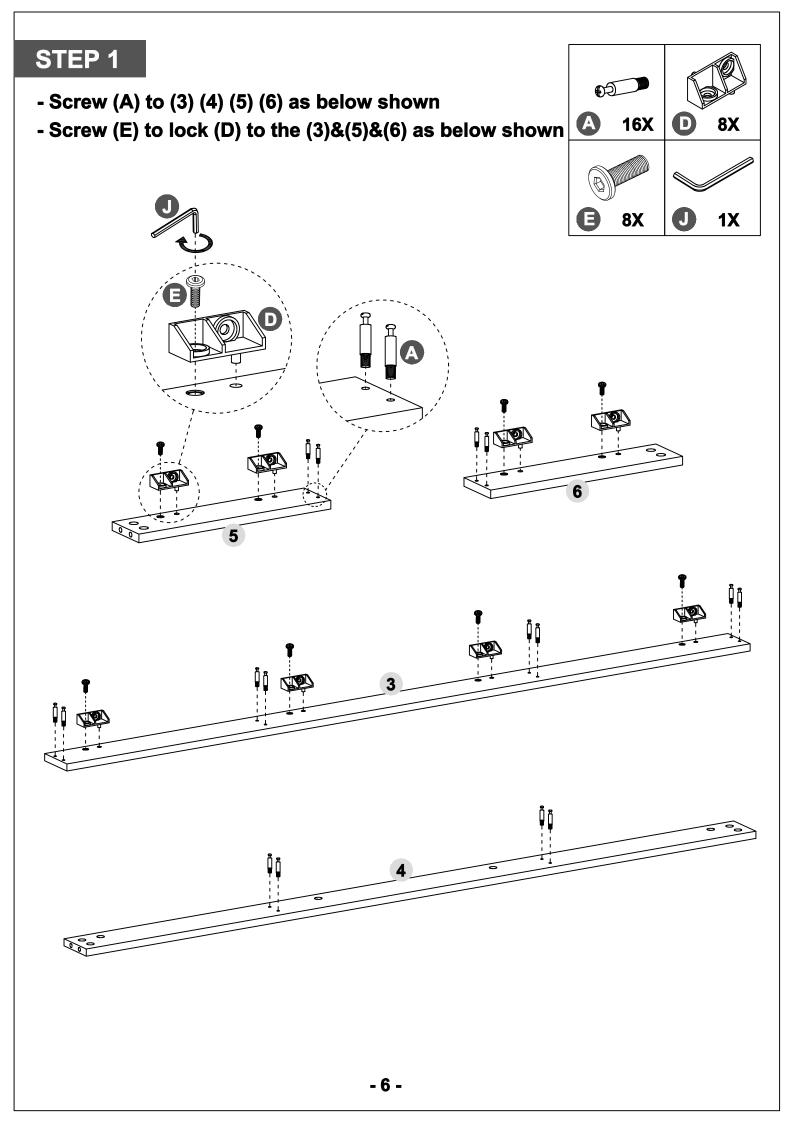

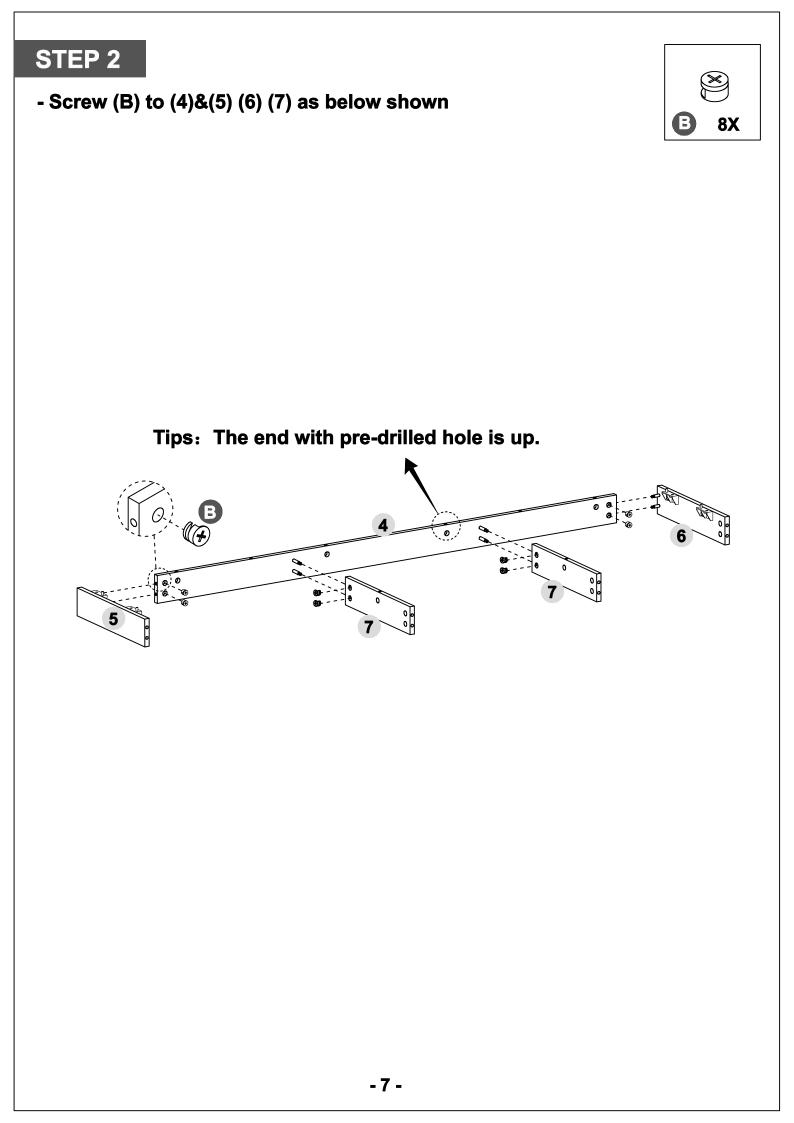


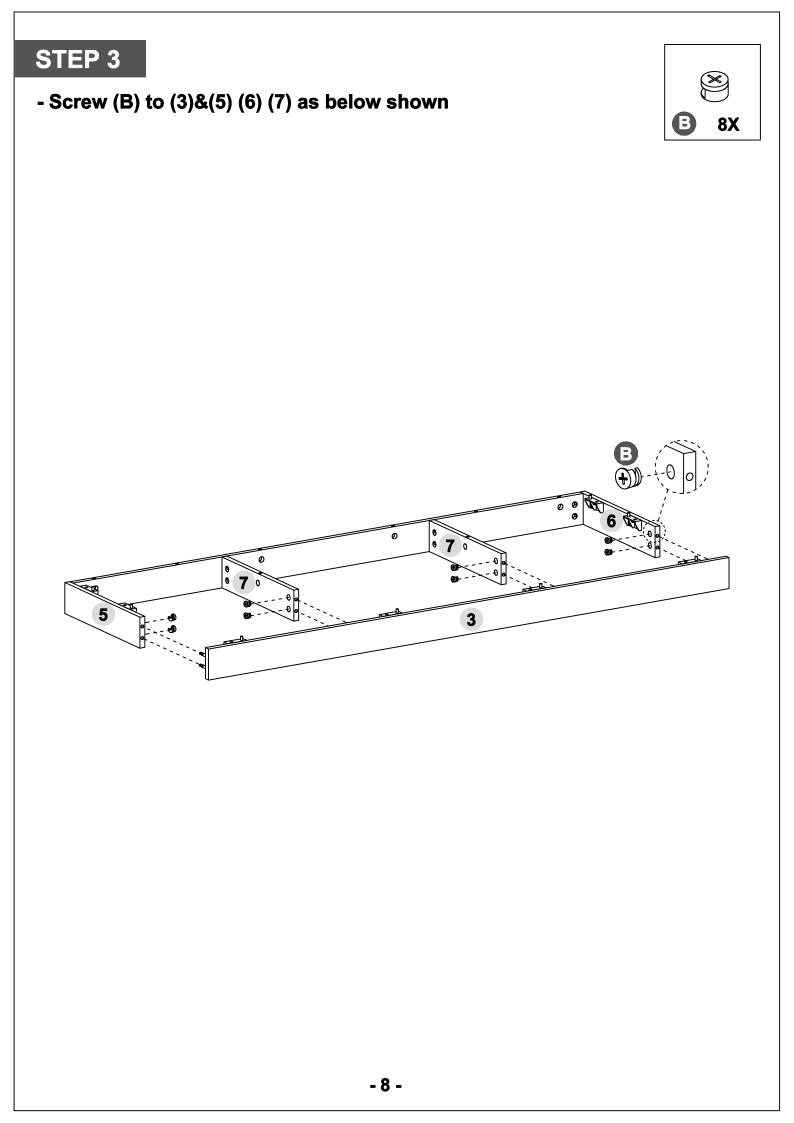


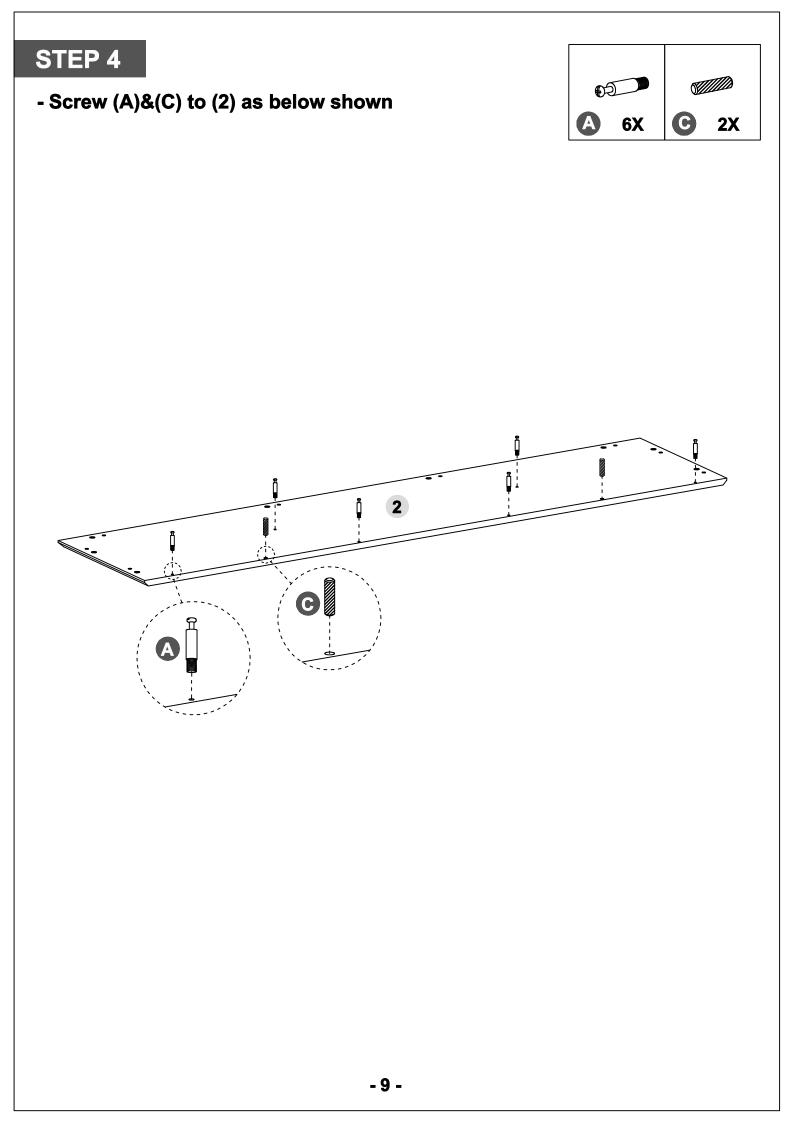





 
- Attach (2) to (3) (4) (5) (6) (7) as below shown
- Screw (B) to (2)&(4) (7) as below shown
- Screw (E) to lock (D) to the (2) as below shown

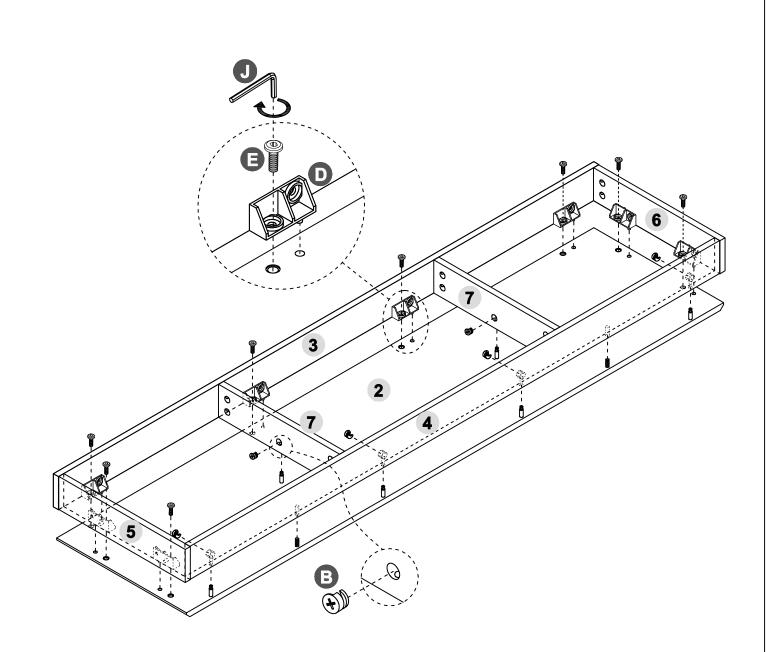

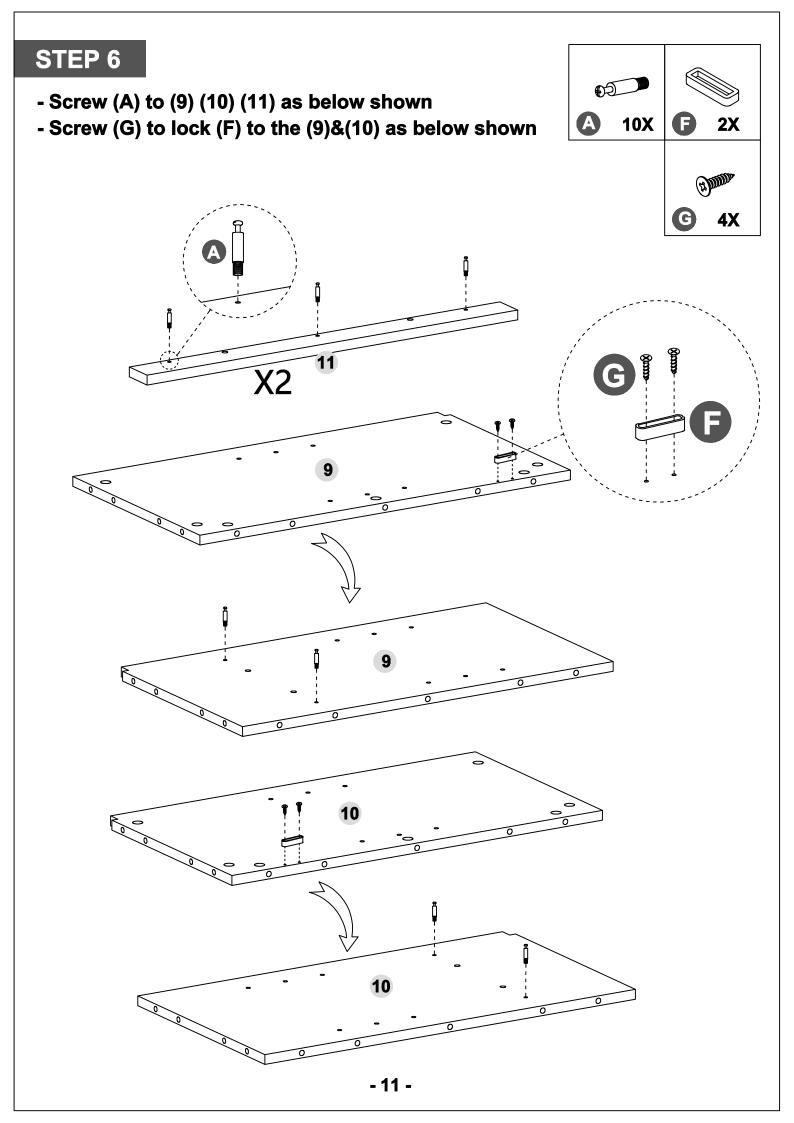


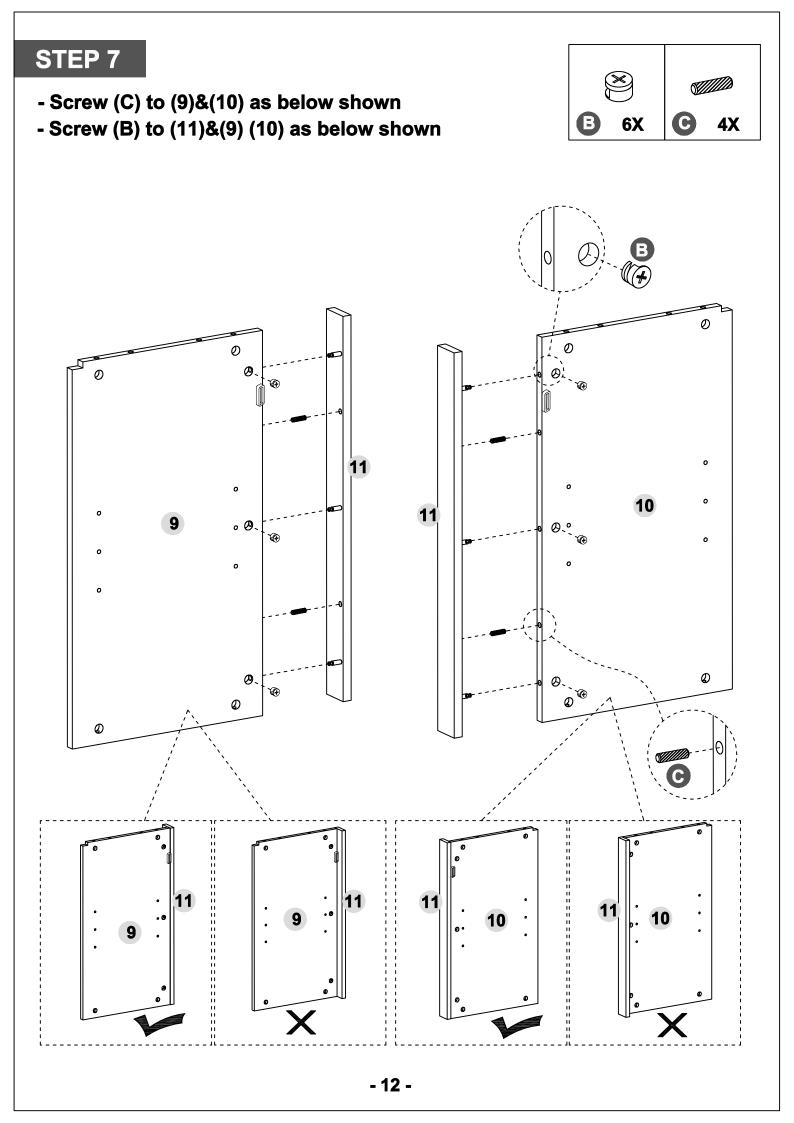


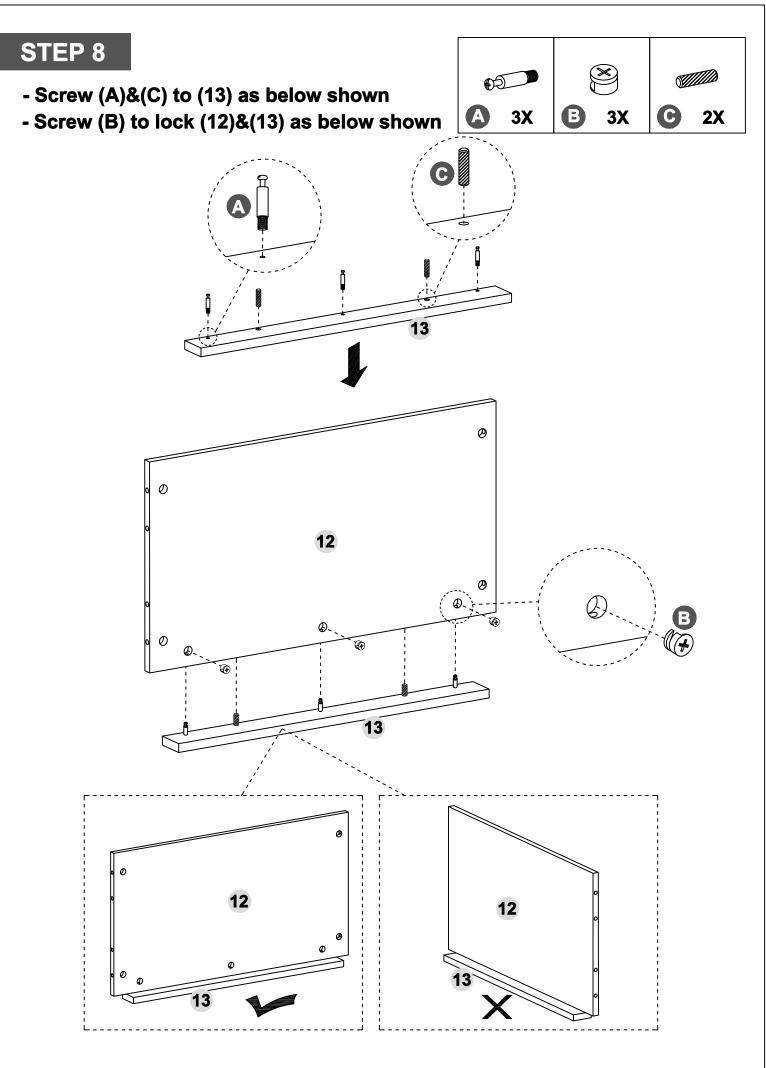




- Screw (C) to (12) as below shown
- Screw (B) to lock (12)&(9) (10) as below shown

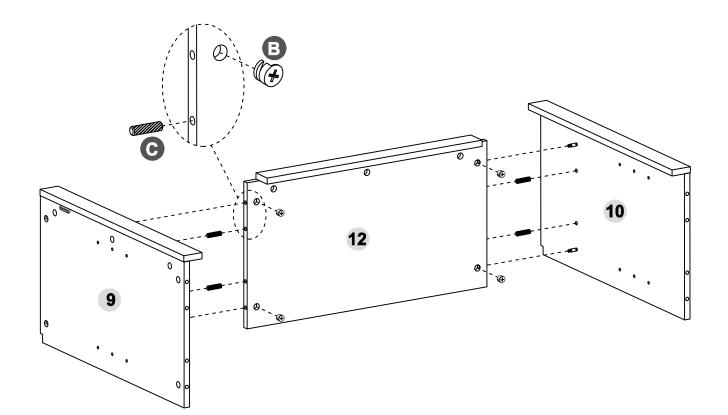


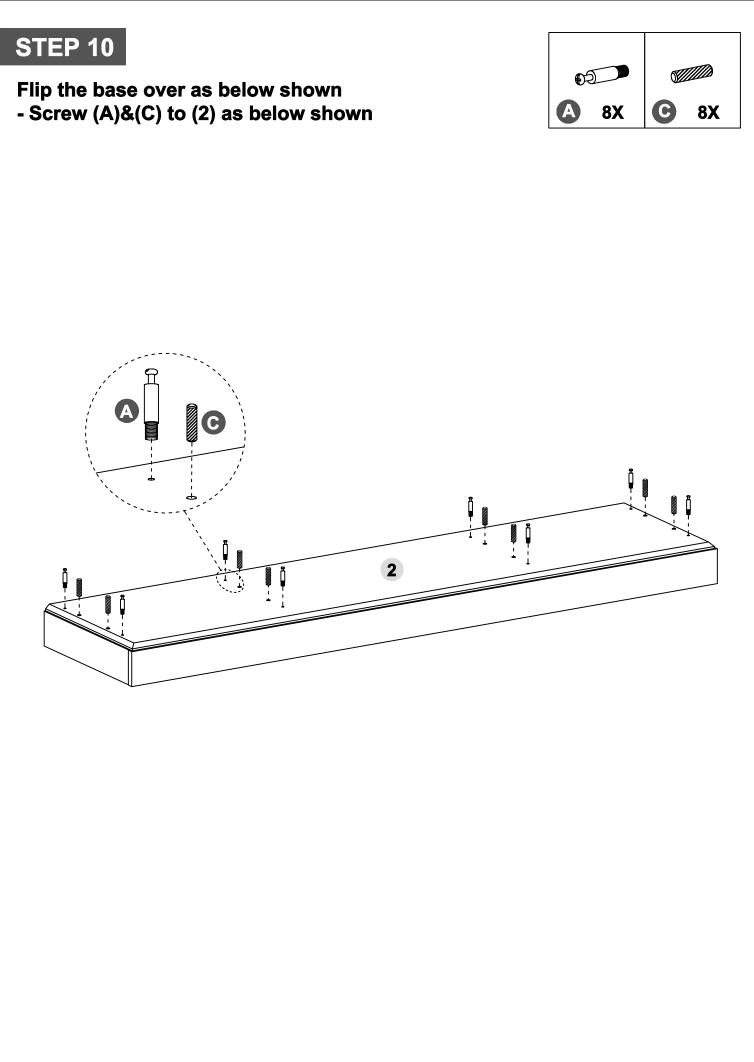


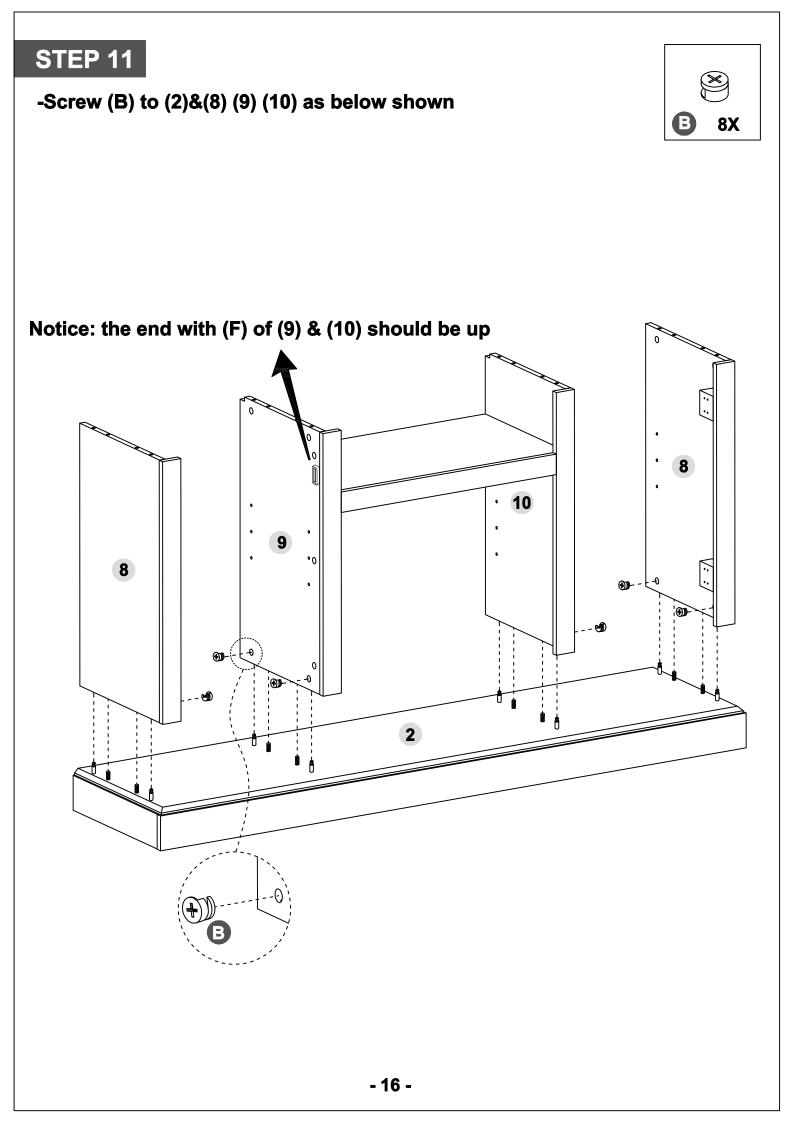

-Install the light (N) to the board (1): 1x light & 2x screws



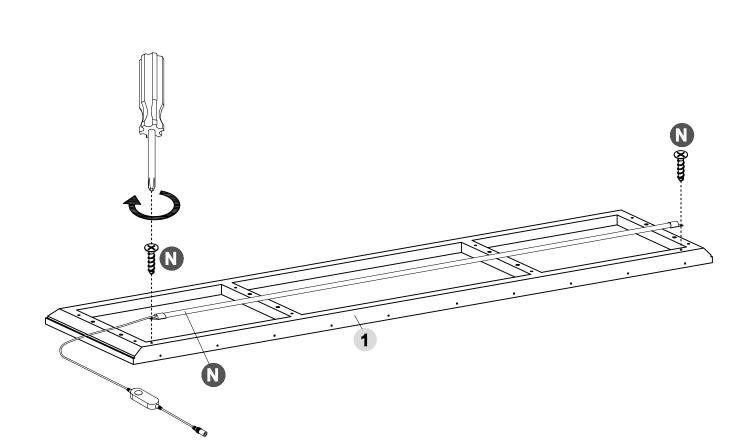

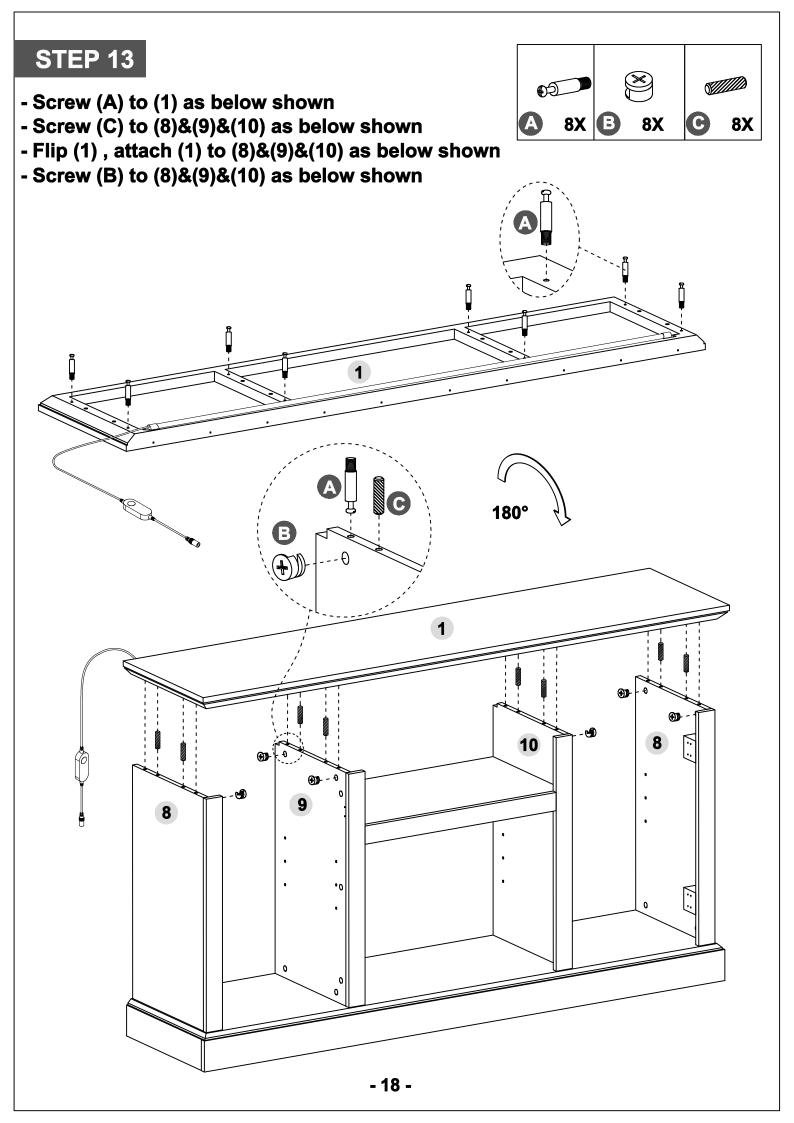


If you intended to use this product as a TV stand, continue the assembly instruction on page 19.

If you intended to use this product as a fireplace mantel, continue the assembly instruction on page 24.


TV STAND ASSEMBLY


STEP 14 Om P - Screw (H) to Back panel (16)&(17)&(18)&(19) as below shown. - Stick (O) to (1)&(16) (17), use (H) locked N **40X 1X ATTENTION:** For installing the back panel easier, we should lay down the stand body, let the front face the ground and the back should Ο **2X** be up, then ready to assemble the back panel (16), (17), (18) and (19). We suggest use a power drill to install the back panel. 16 1 (, 18 ()N ()

- 19 -

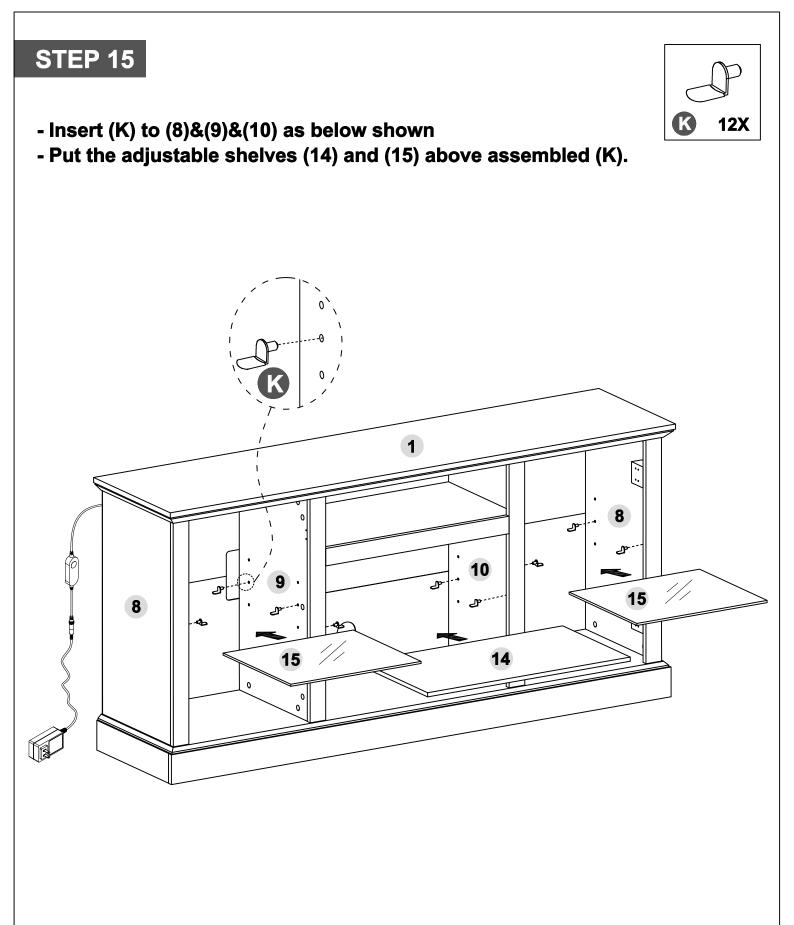

STEP 16 AMM G **8X 4X** - Start to install the sliding doors U - Screw (G) to install (I) on the board (20) as below shown G G 0 20 0 X2

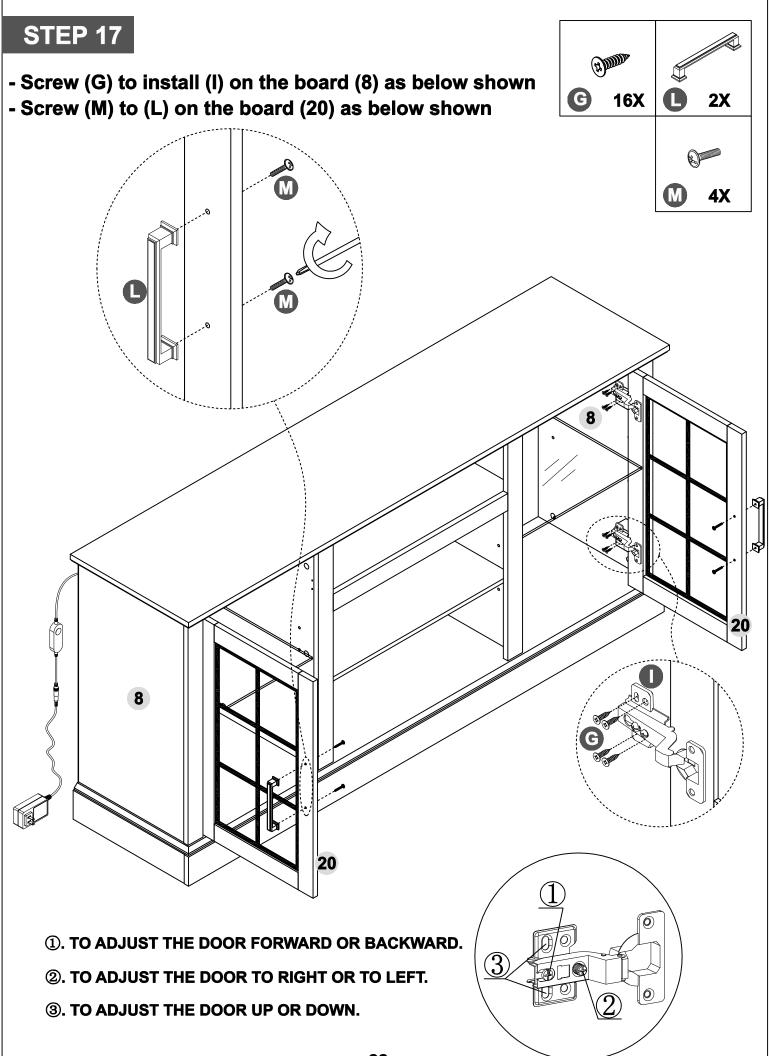

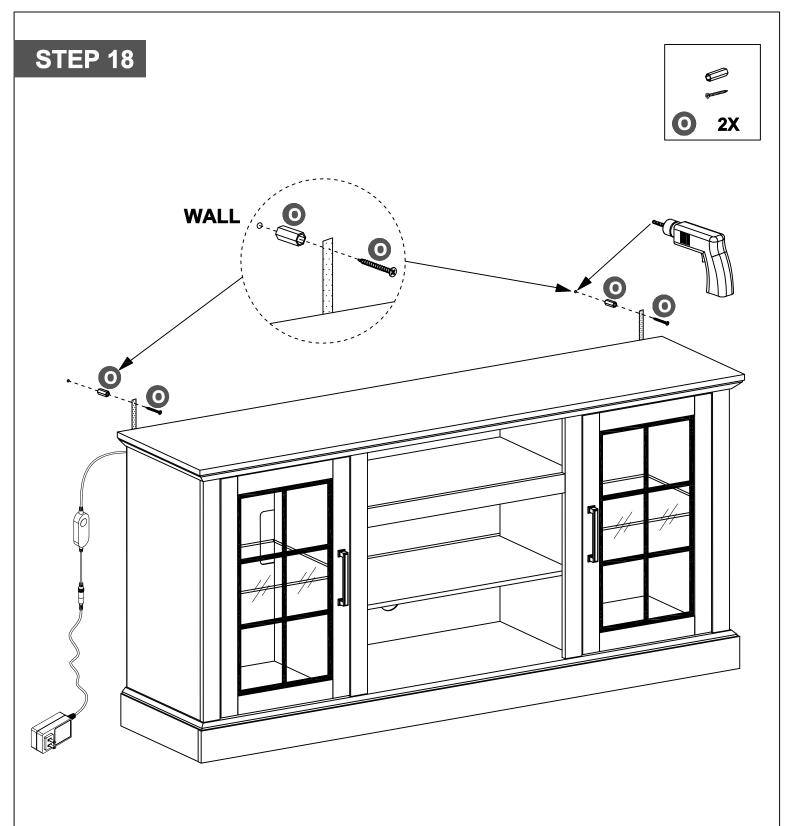

/!\ Warning/Avertissement/Advertencia

Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping to cause any accidents or damage.

Los ni-os peque-os pueden sufir graves por muebles que se caen. Debe instalar el herraje para restricci) n de movimiento con la unidad en servicio evitar que la unidad se vuelque, provocando accidentes o da-os. Drill a 3/16" diameter hole (5mm) in the wallboard. Tap the wall anchor into the hole until it is ush. Fasten the safety strap to the wall anchor with the 1" screw.

Taladre un agujero de 3/16" de di(metro (5mm) en la pared. Golpea la ancla de pared en el agujero hasta que sea parejo. Abroche la cord) n de seguridad al la ancla de la pared con el tornillo de 25mm.

- Screw (H) to Back panel (16)&(17)&(18) as below shown.
- Stick (O) to (1)&(16) (17), use (H) locked

ATTENTION:

For installing the back panel easier, we should lay down the stand body, let the front face the ground and the back should be up, then ready to assemble the back panel (16), (17) and (18). We suggest use a power drill to install the back panel. \sim

1X

2X


Ø


N

0


Ow


36X

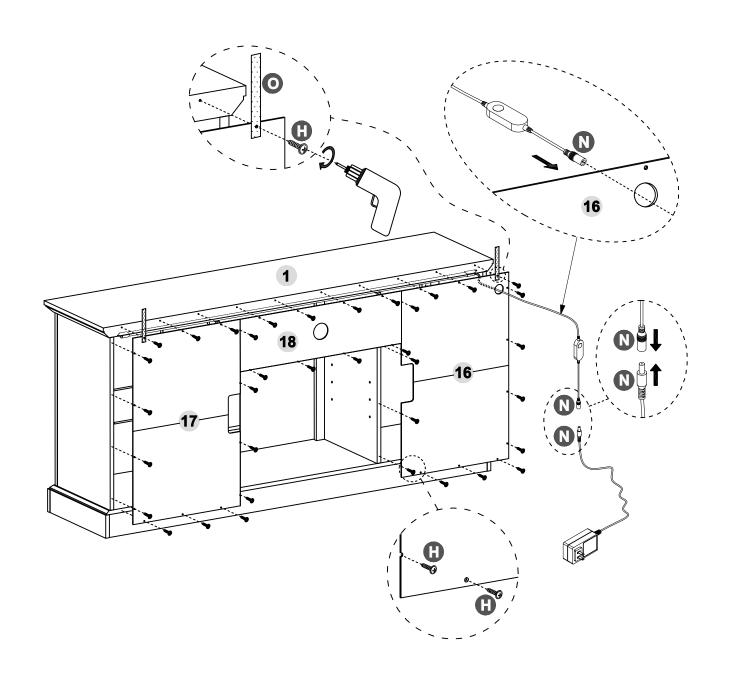

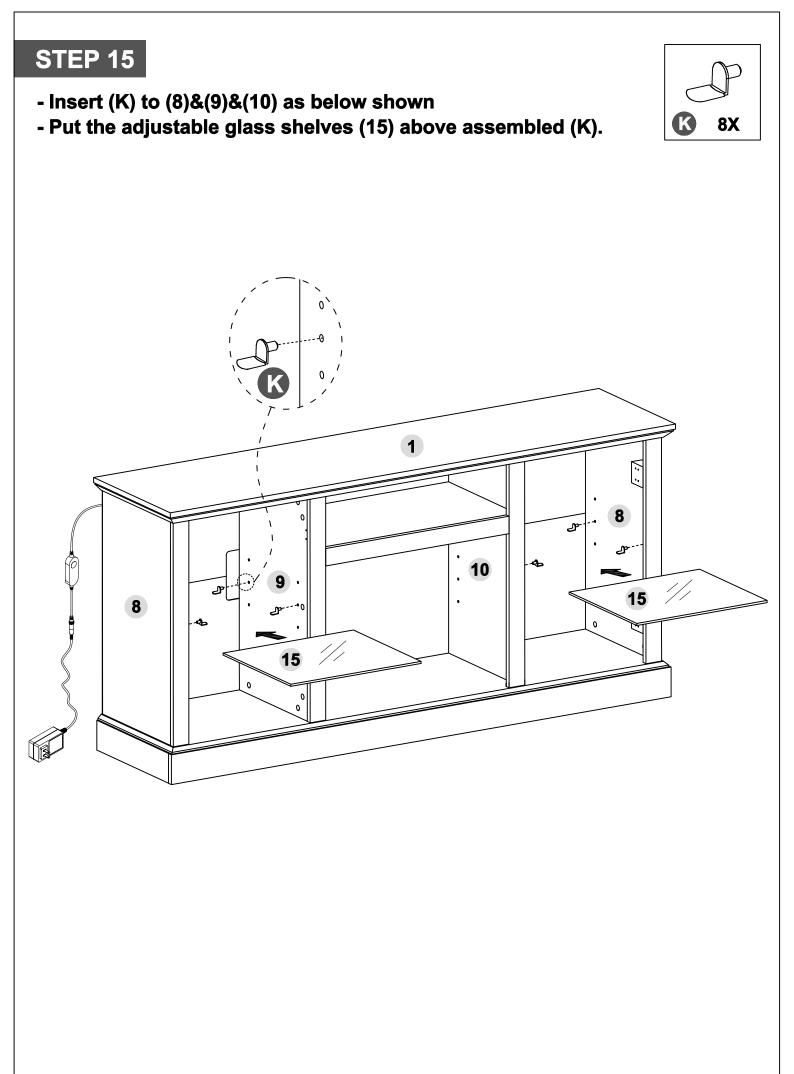

STEP 16 AMM G **8X 4X** - Start to install the sliding doors U - Screw (G) to install (I) on the board (20) as below shown G G 0 20 0 X2

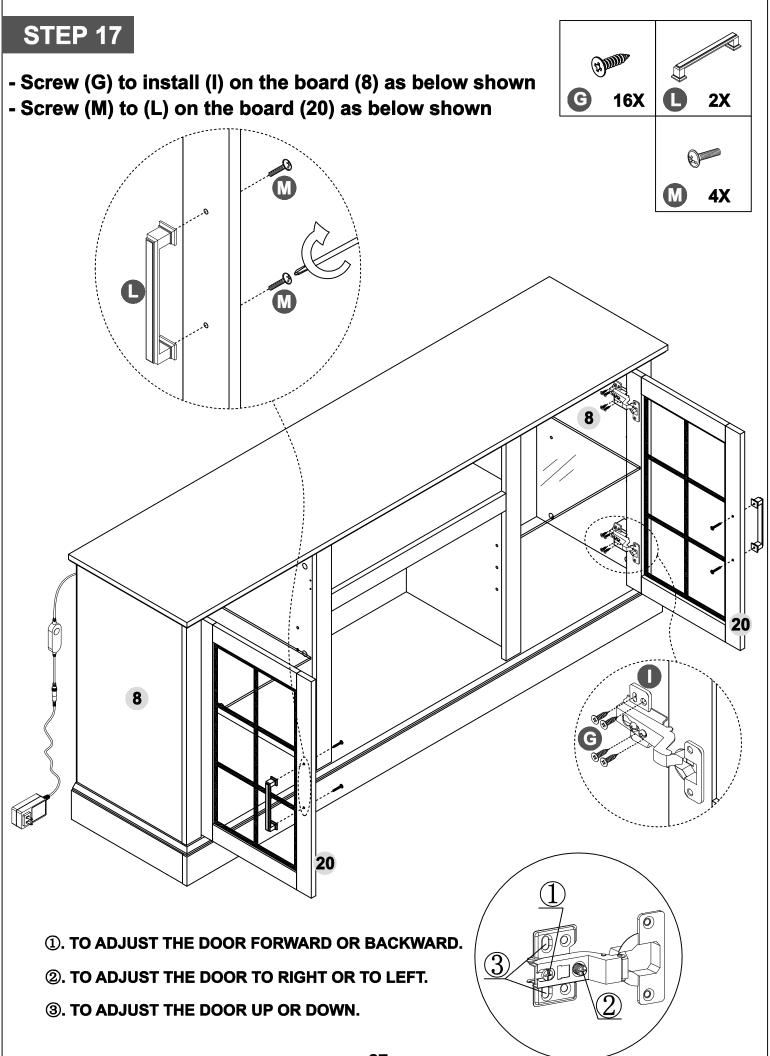

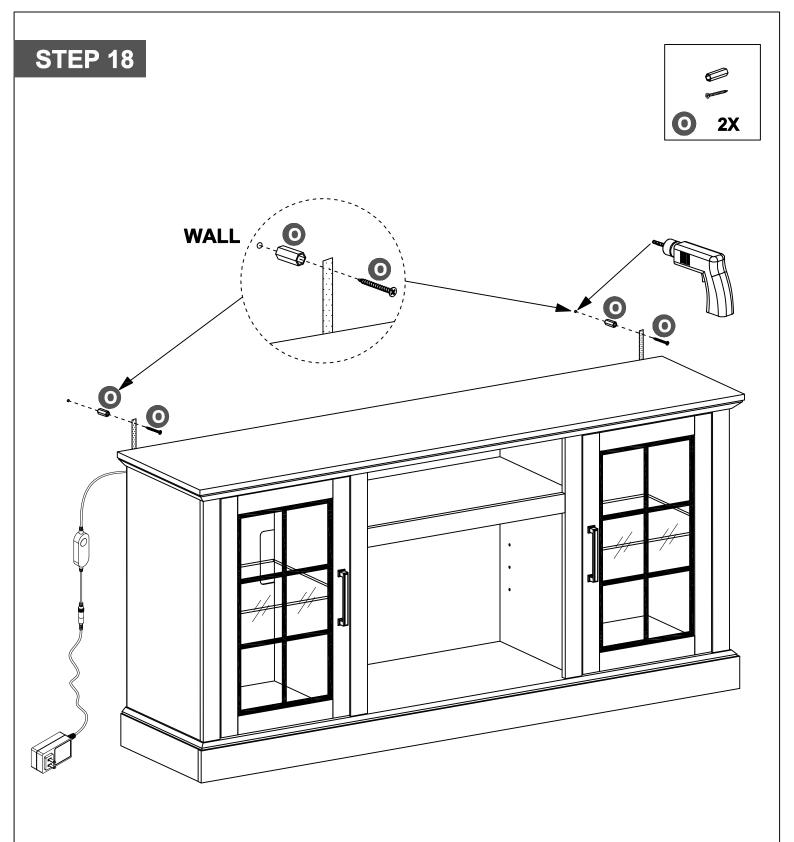


/!\ Warning/Avertissement/Advertencia

Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping to cause any accidents or damage.

Los ni-os peque-os pueden sufir graves por muebles que se caen. Debe instalar el herraje para restricci) n de movimiento con la unidad en servicio evitar que la unidad se vuelque, provocando accidentes o da-os. Drill a 3/16" diameter hole (5mm) in the wallboard. Tap the wall anchor into the hole until it is ush. Fasten the safety strap to the wall anchor with the 1" screw.

Taladre un agujero de 3/16" de di(metro (5mm) en la pared. Golpea la ancla de pared en el agujero hasta que sea parejo. Abroche la cord) n de seguridad al la ancla de la pared con el tornillo de 25mm.

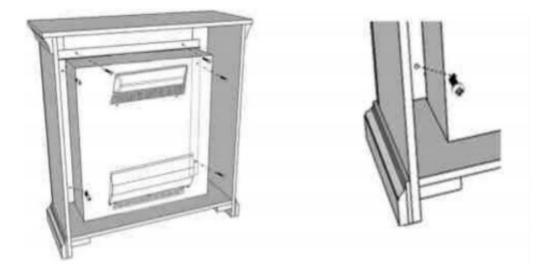

FIREPLACE INSTALLATION

If you decide to install the fireplace into the mantel, carefully set the unit from the back of the mantel and center it in the opening.

Check the alignment and attach the unit to the mantel by inserting screws through the drilled holes on the trim to the mantel.

NOTE: Do not attempt to install the unit from the front of the mantel. It will not fit.