



# ASSEMBLY INSTRUCTION

## 130-167

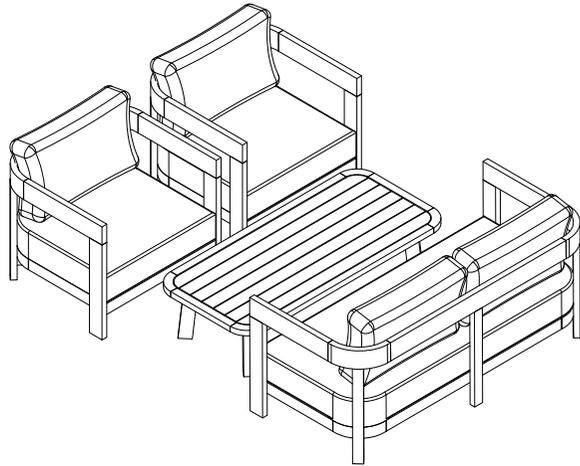

### PARTS AND HARDWARE


Note: Individual parts are not shown to scale.

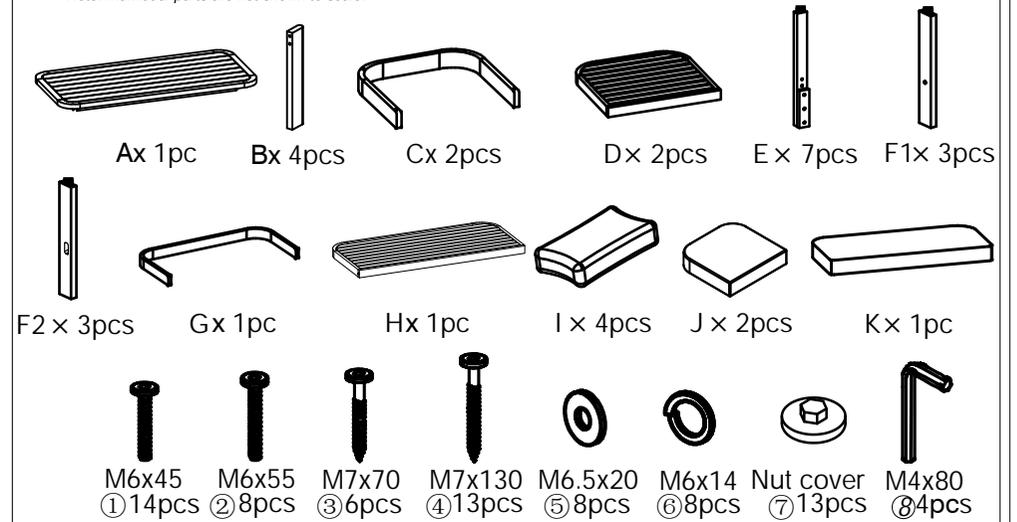


### ASSEMBLY INSTRUCTIONS



Step 1

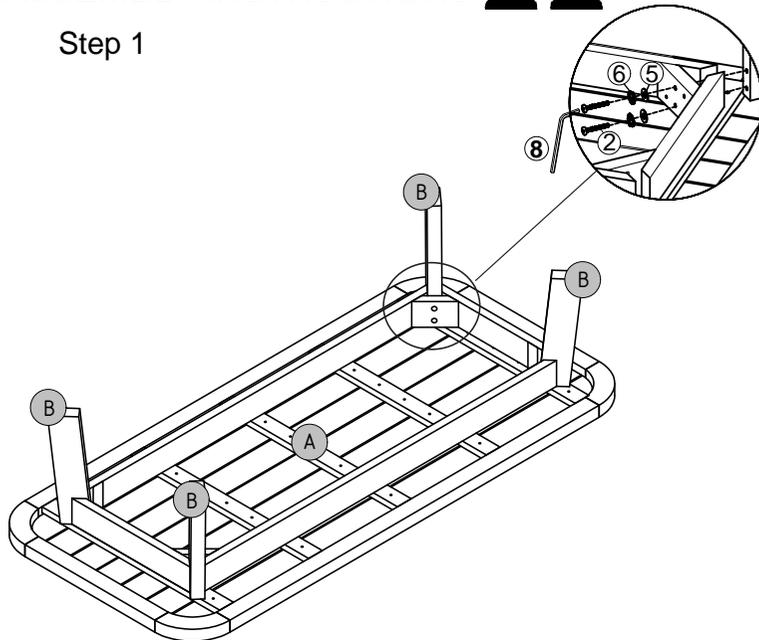


Step 2

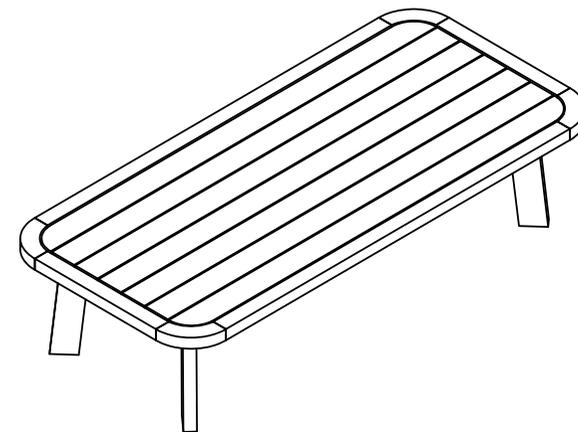


# OPERATING YOUR UNIT


Step 3

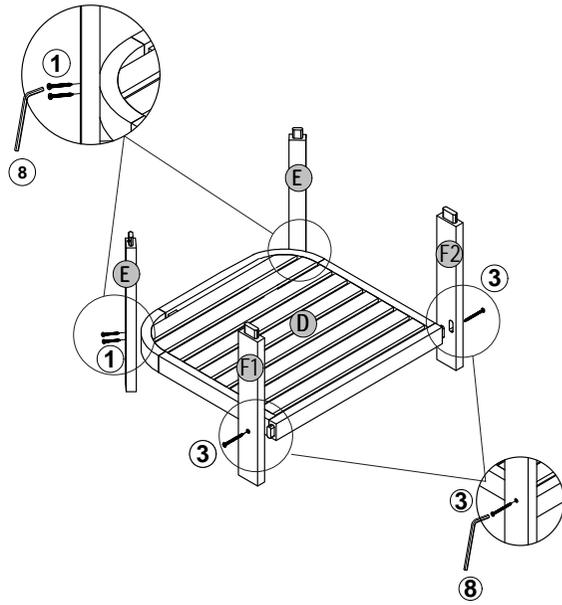


Step 4

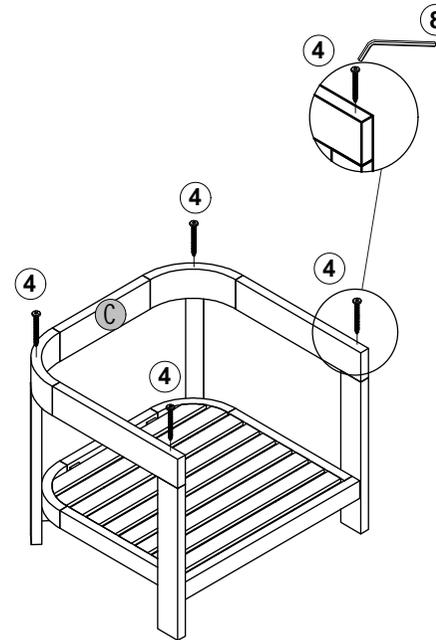

Step 5

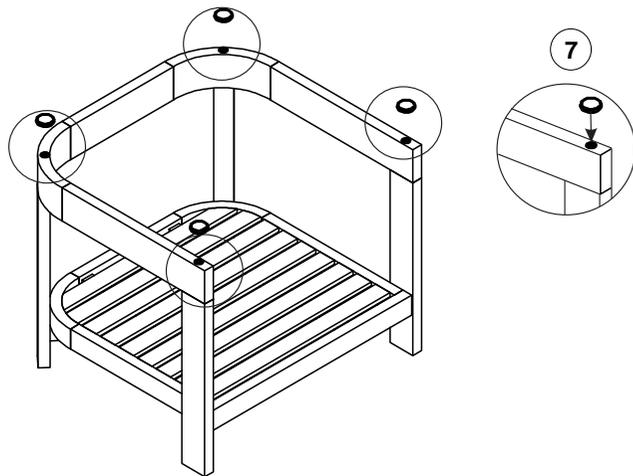


Step 6

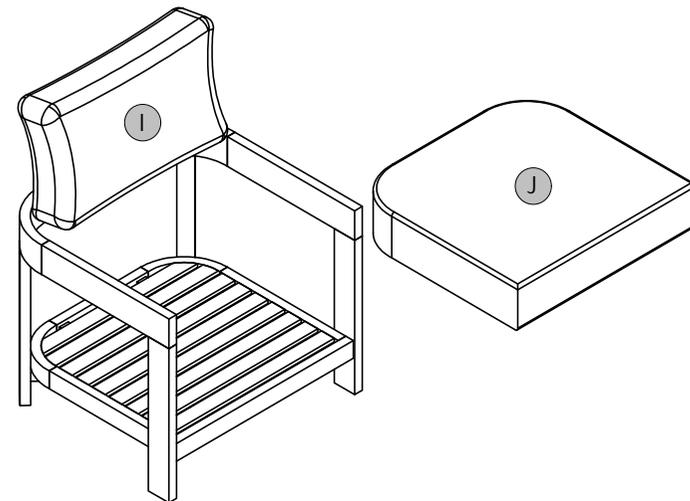


# OPERATING YOUR UNIT


Step 7

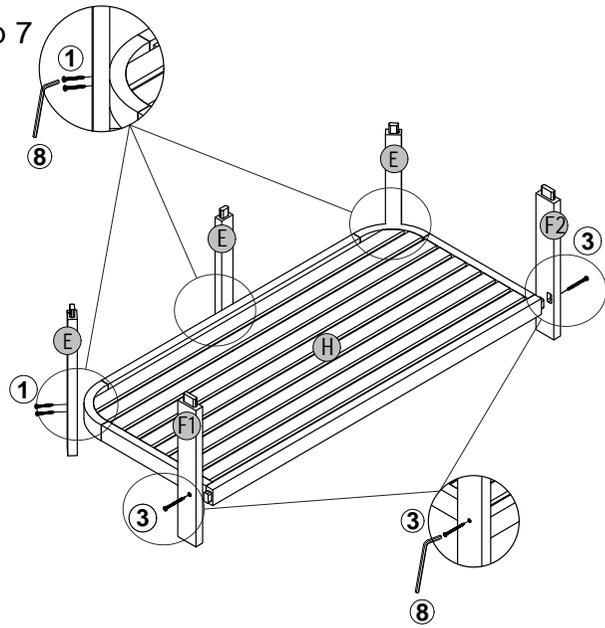


Step 8

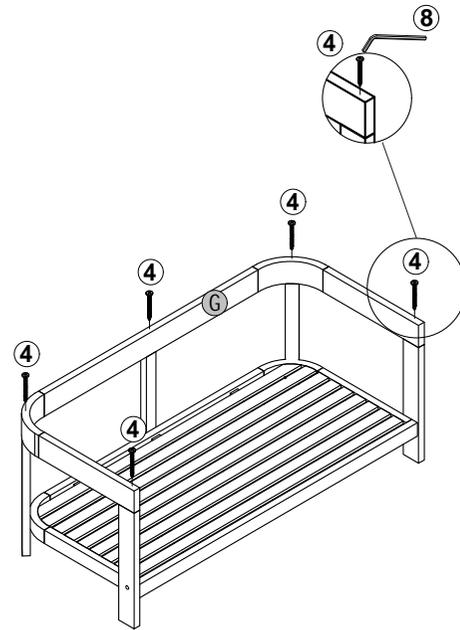

Step 9

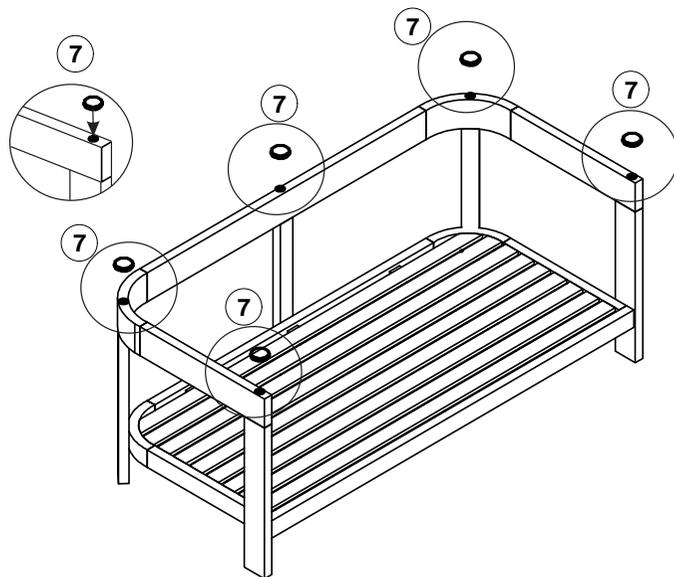

Step 10

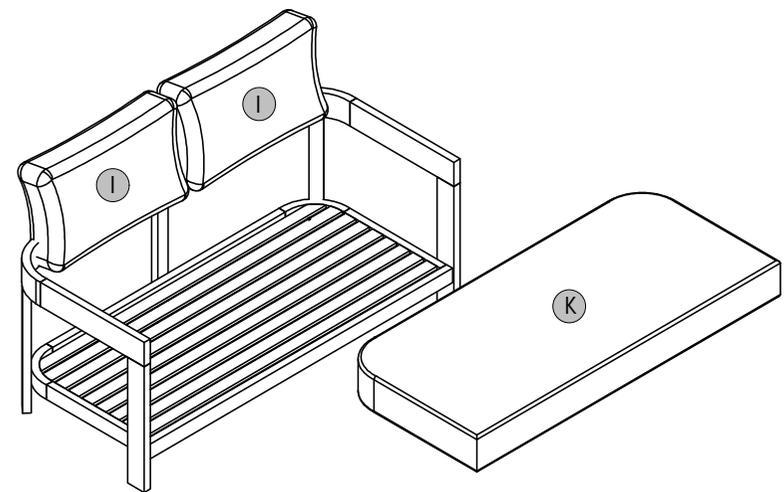

# OPERATING YOUR UNIT

Finish

