


ASSEMBLY INSTRUCTION


130-169

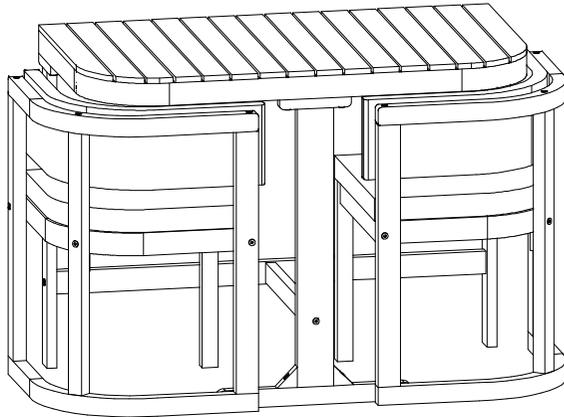

ASSEMBLY INSTRUCTIONS




Step 1

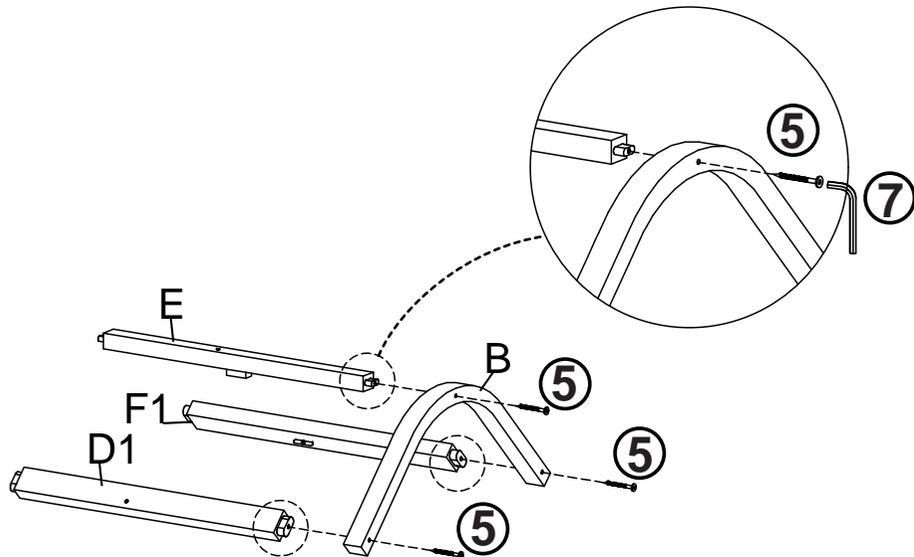


PARTS AND HARDWARE

Note: Individual parts are not shown to scale.

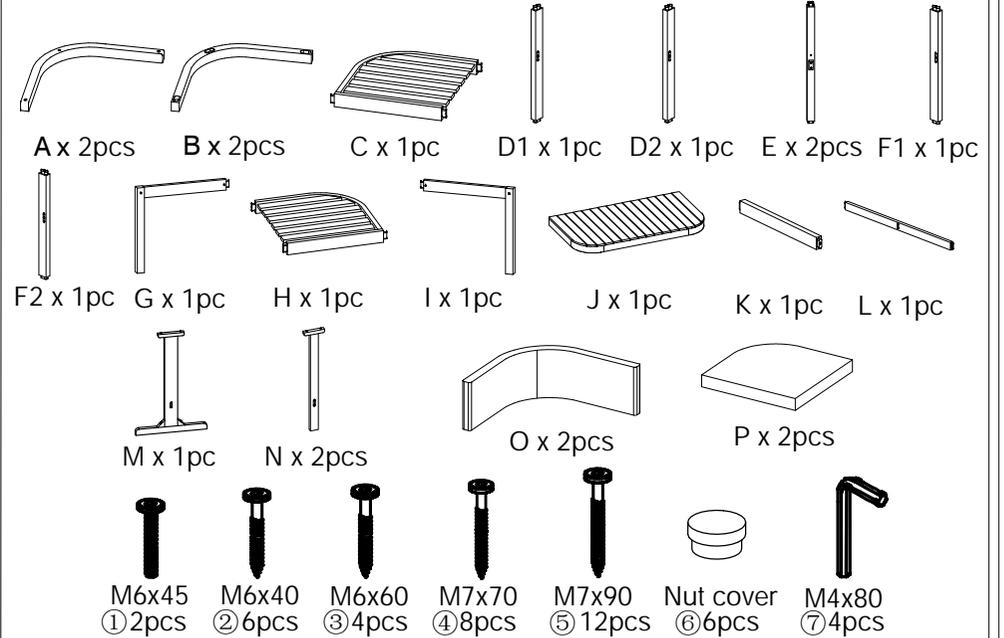


Step 2

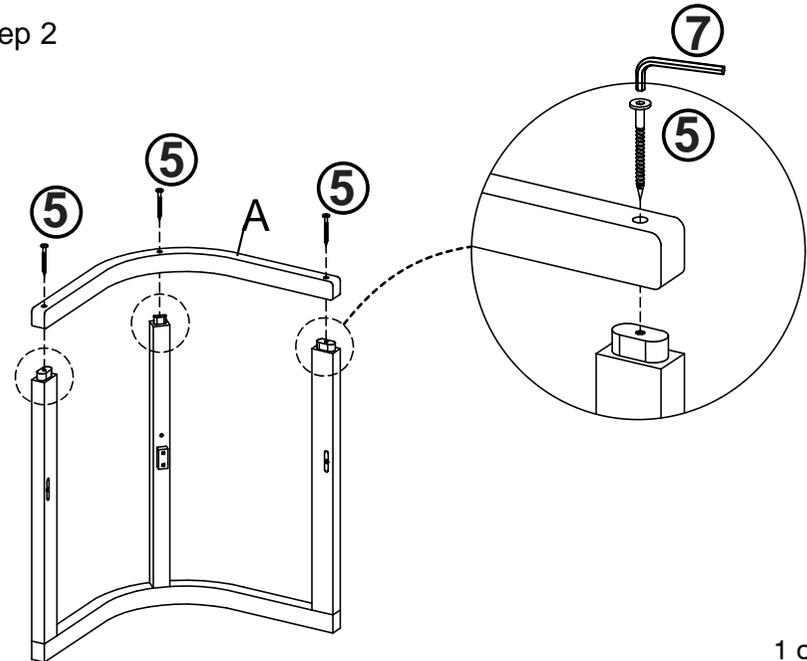


OPERATING YOUR UNIT


Step 3

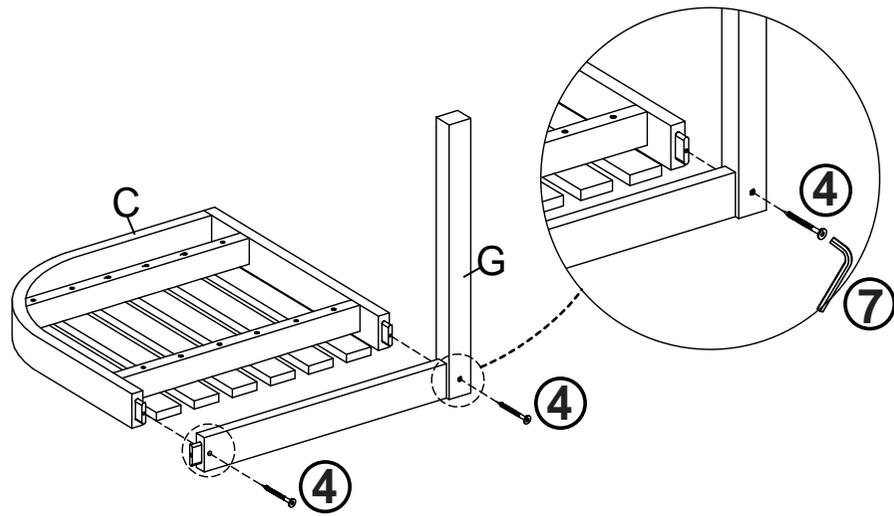


Step 4

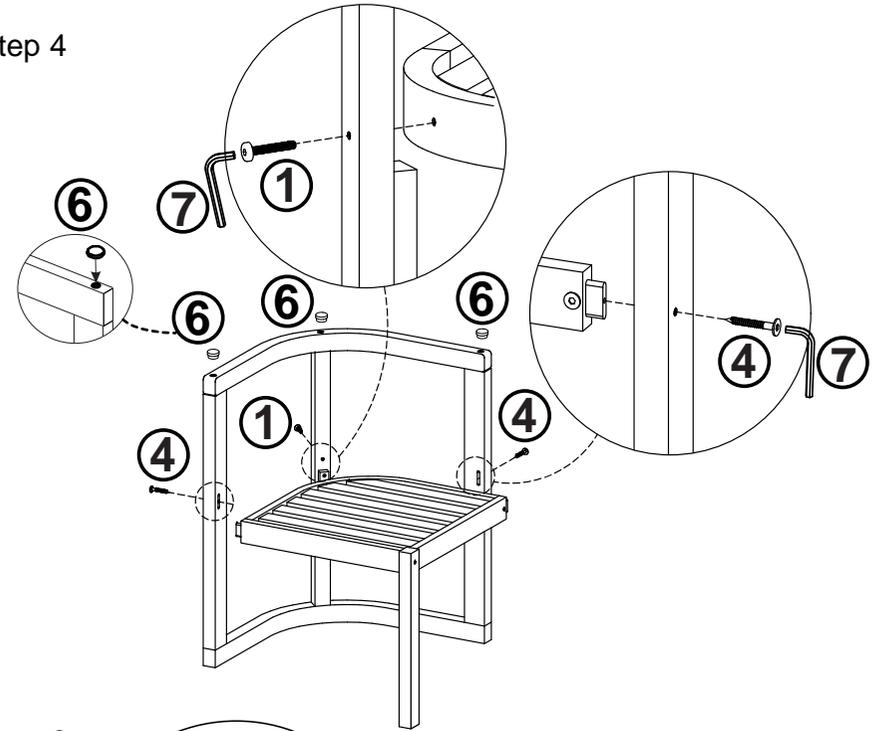

Step 5

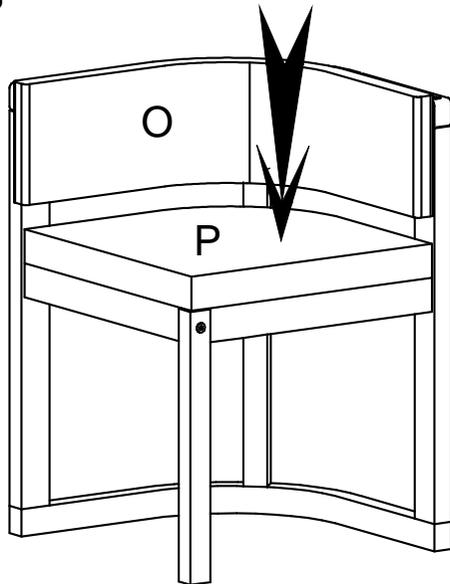


Step 6

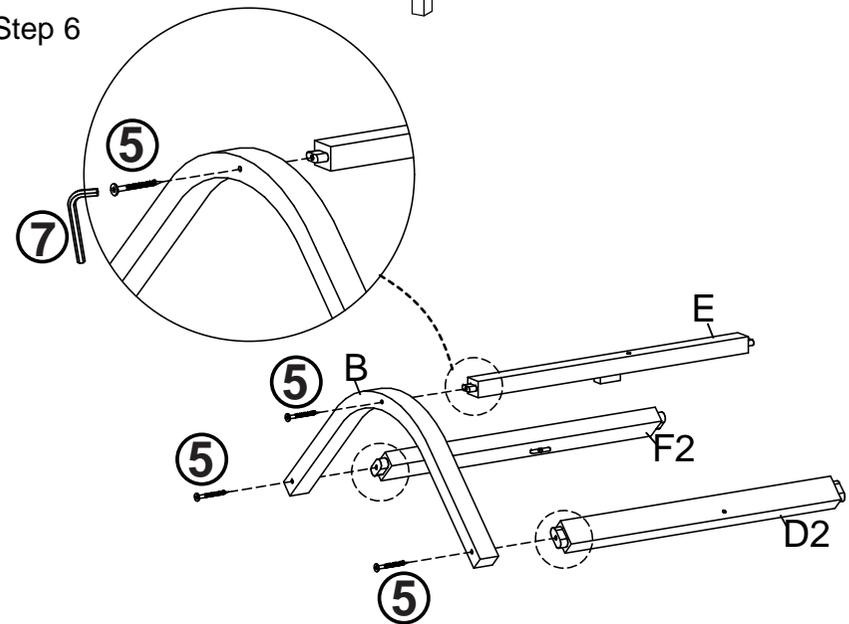


OPERATING YOUR UNIT


Step 7

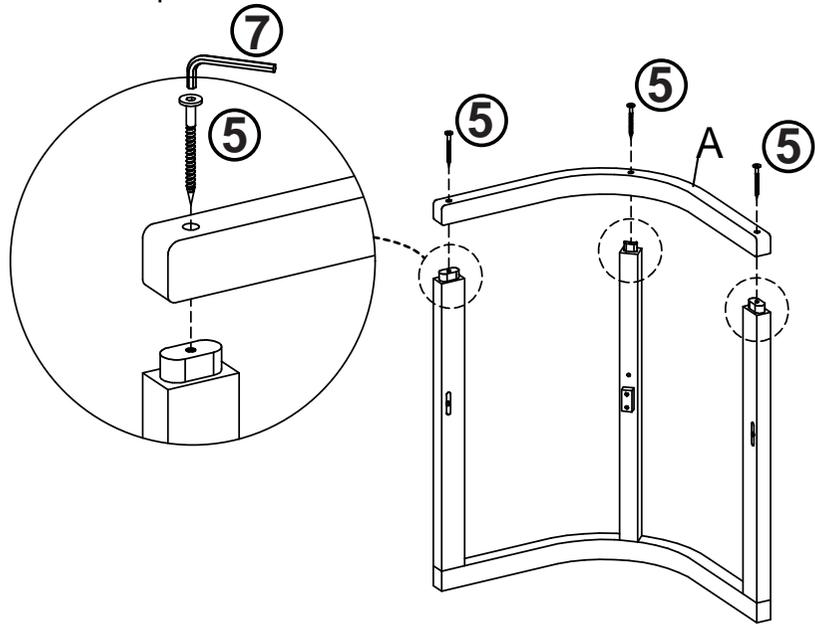


Step 8

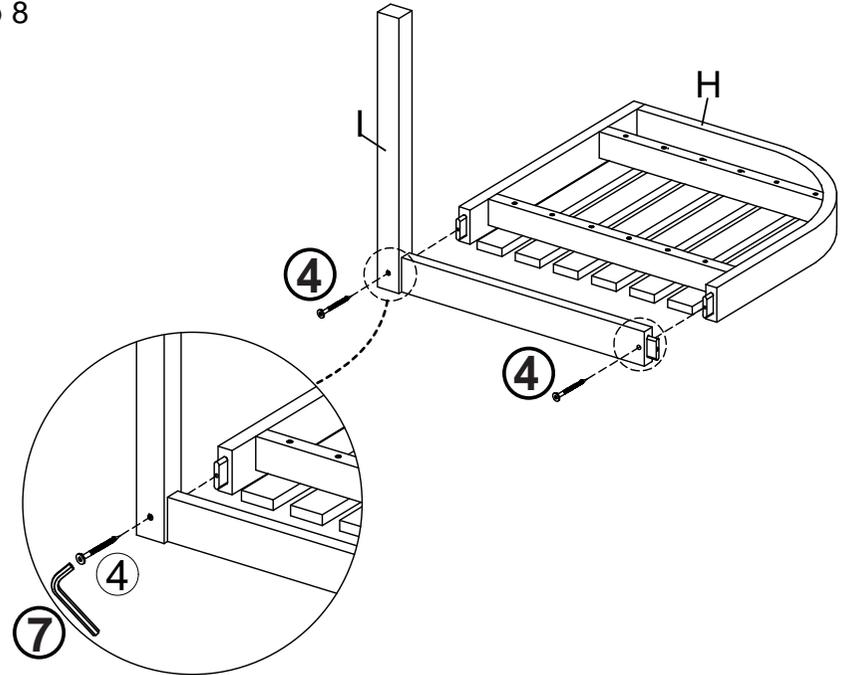

Step 9

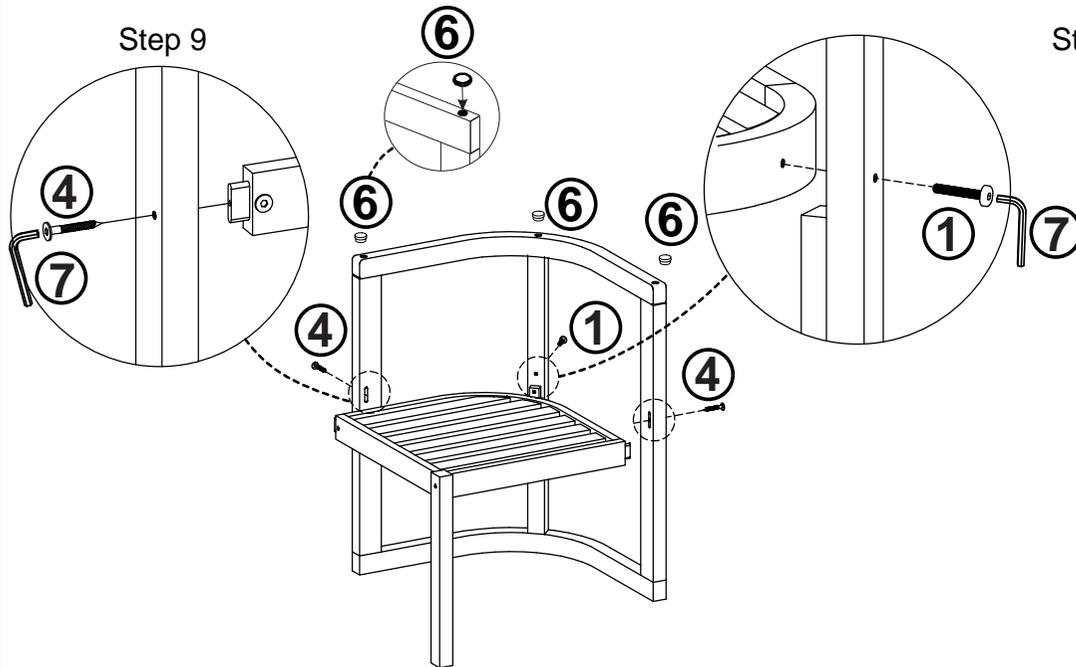


Step 10

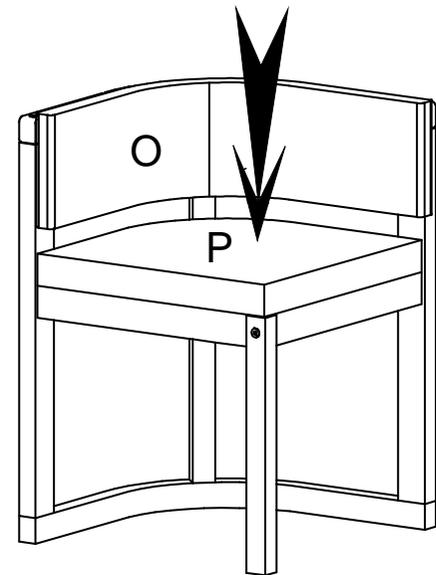


OPERATING YOUR UNIT


Step 11

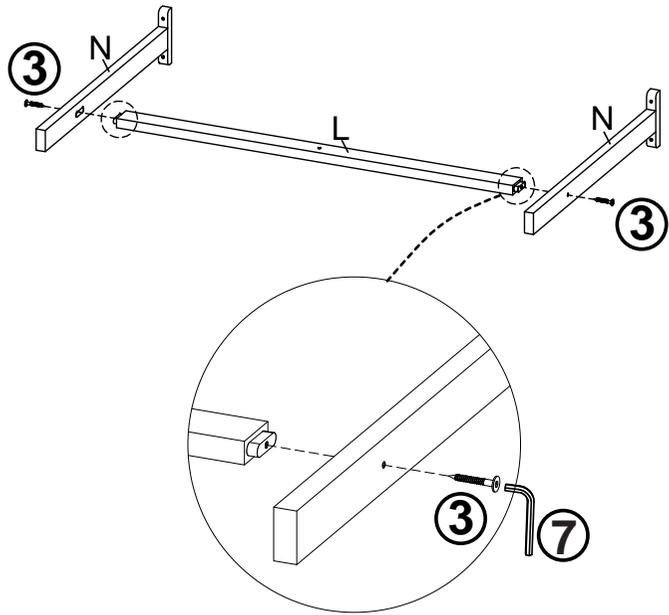

Step 12

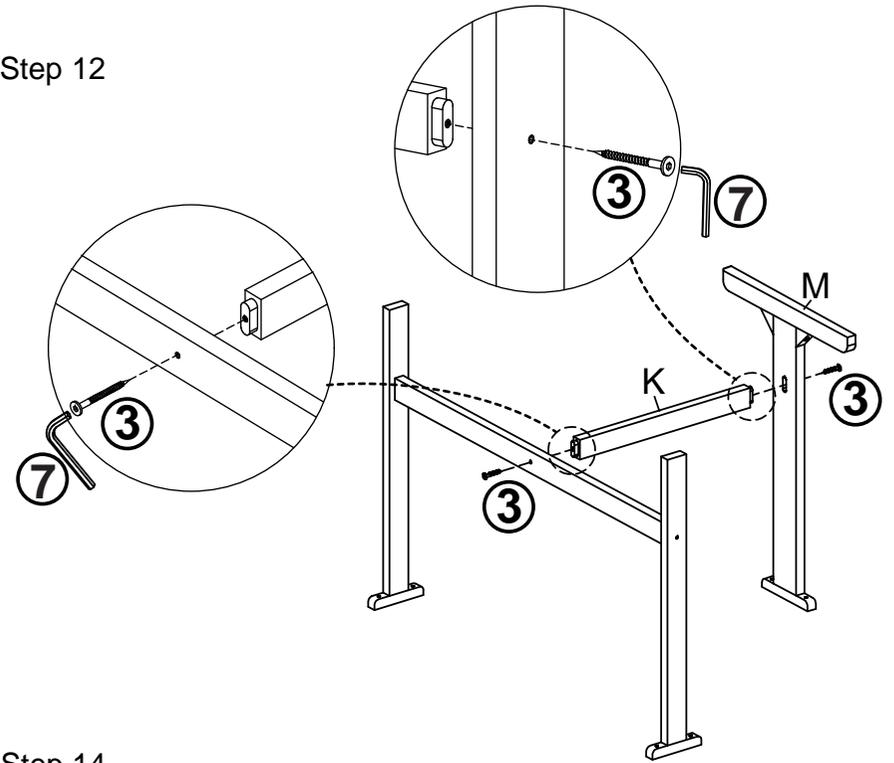

Step 13

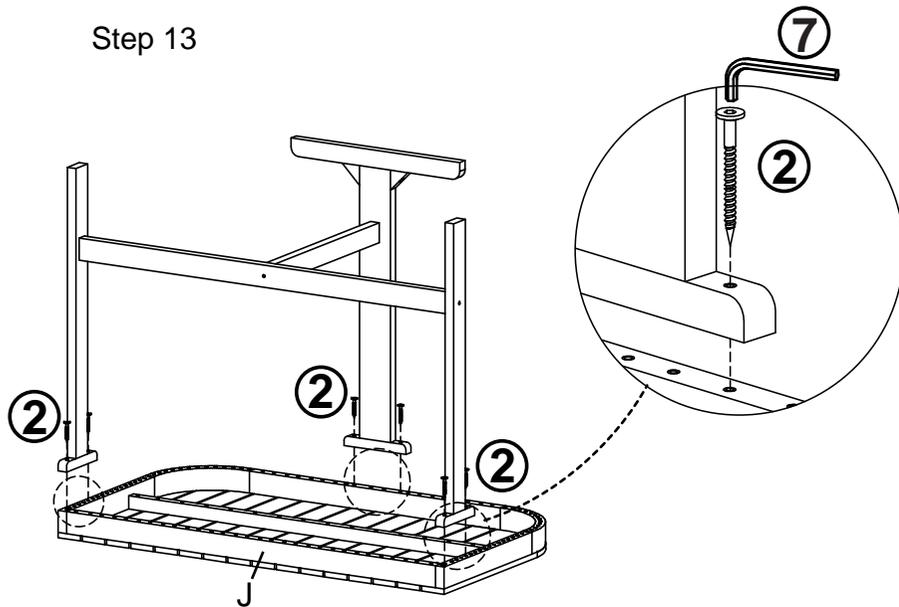

Step 14

