



ASSEMBLY INSTRUCTION

130-168

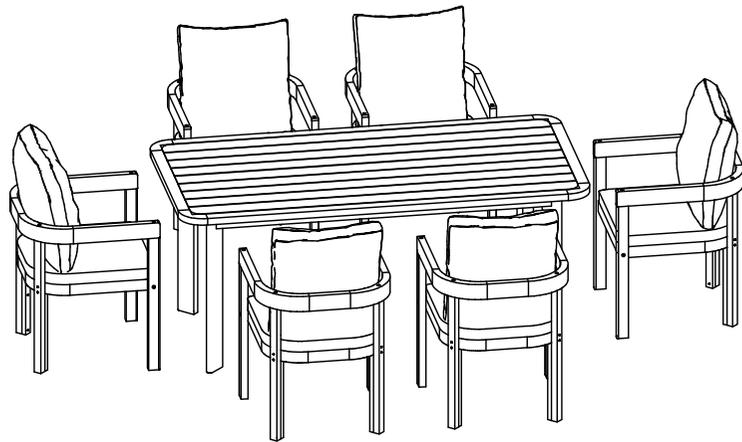


PARTS AND HARDWARE

 Note: Individual parts are not shown to scale.



A x 6pcs

 

B x 6pcs




C1 x 6pcs



C2 x 6pcs



D x 12pcs

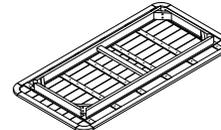


E x 1pc



F x 4pcs



G x 6pcs

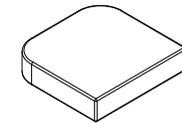

H x 6pcs



M6x45
① 24pcs



M6x55
② 8pcs



M7x70
③ 12pcs



M7x110
④ 24pcs



M6.5x20
⑤ 8pcs



M6x14
⑥ 8pcs



Nut cover
⑦ 24pcs




M4x80
⑧ 4pcs


ASSEMBLY INSTRUCTIONS



Step 1

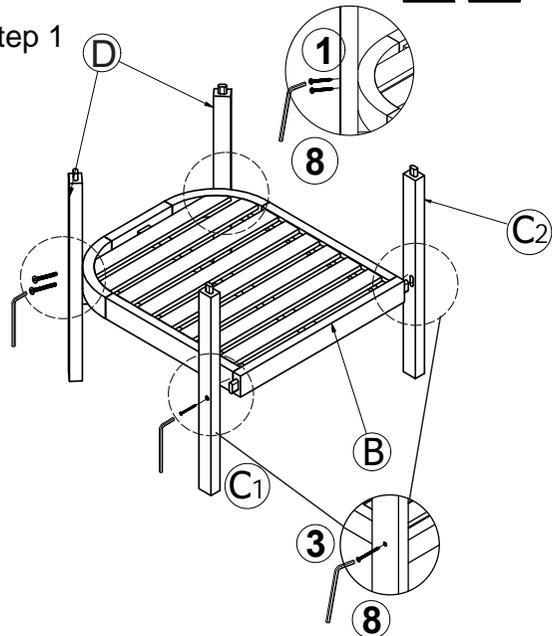


Step 2

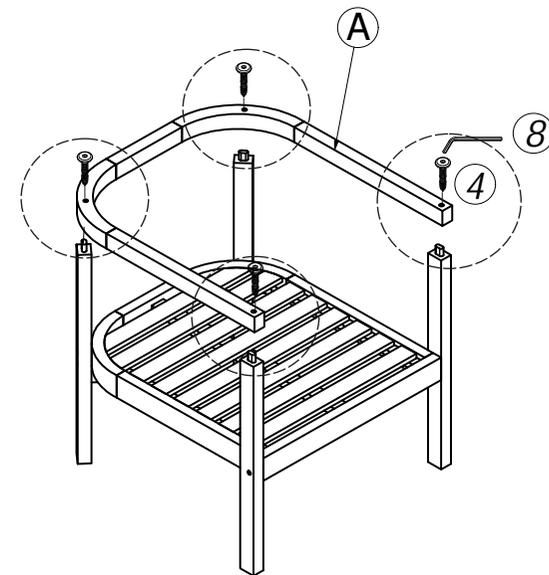


OPERATING YOUR UNIT


Step 3

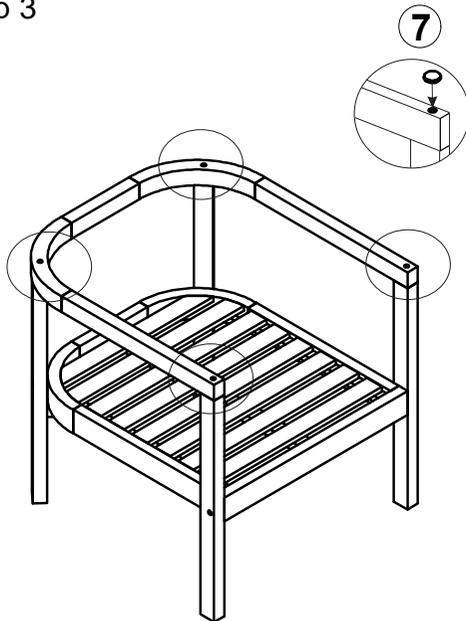

Step 4

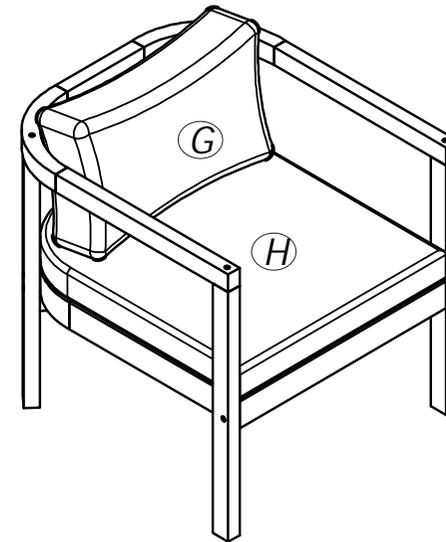

Step 5

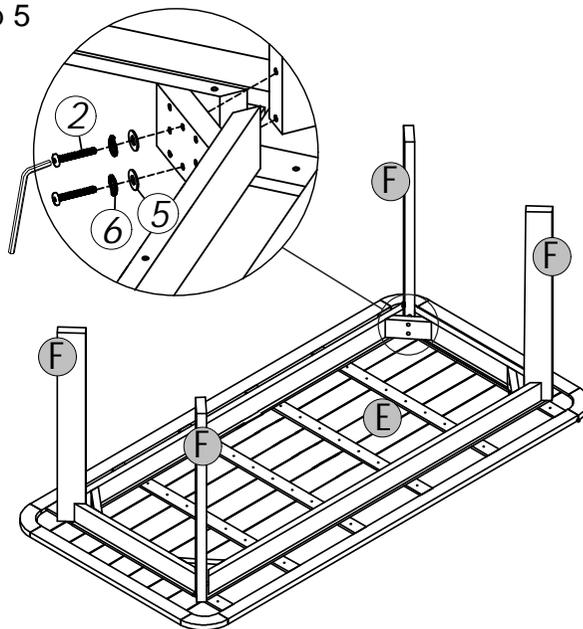

Step 6

