

ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box. Assembly on top of flattened box/blanket is recommended.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Note position of all holes on each panel during assembly.

ITEM#: 161620 M202756

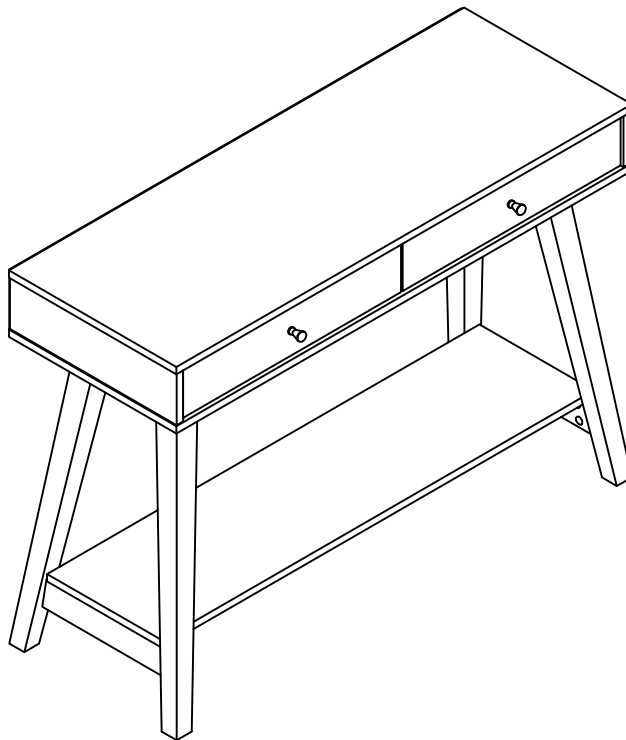

PARTS IDENTIFICATION






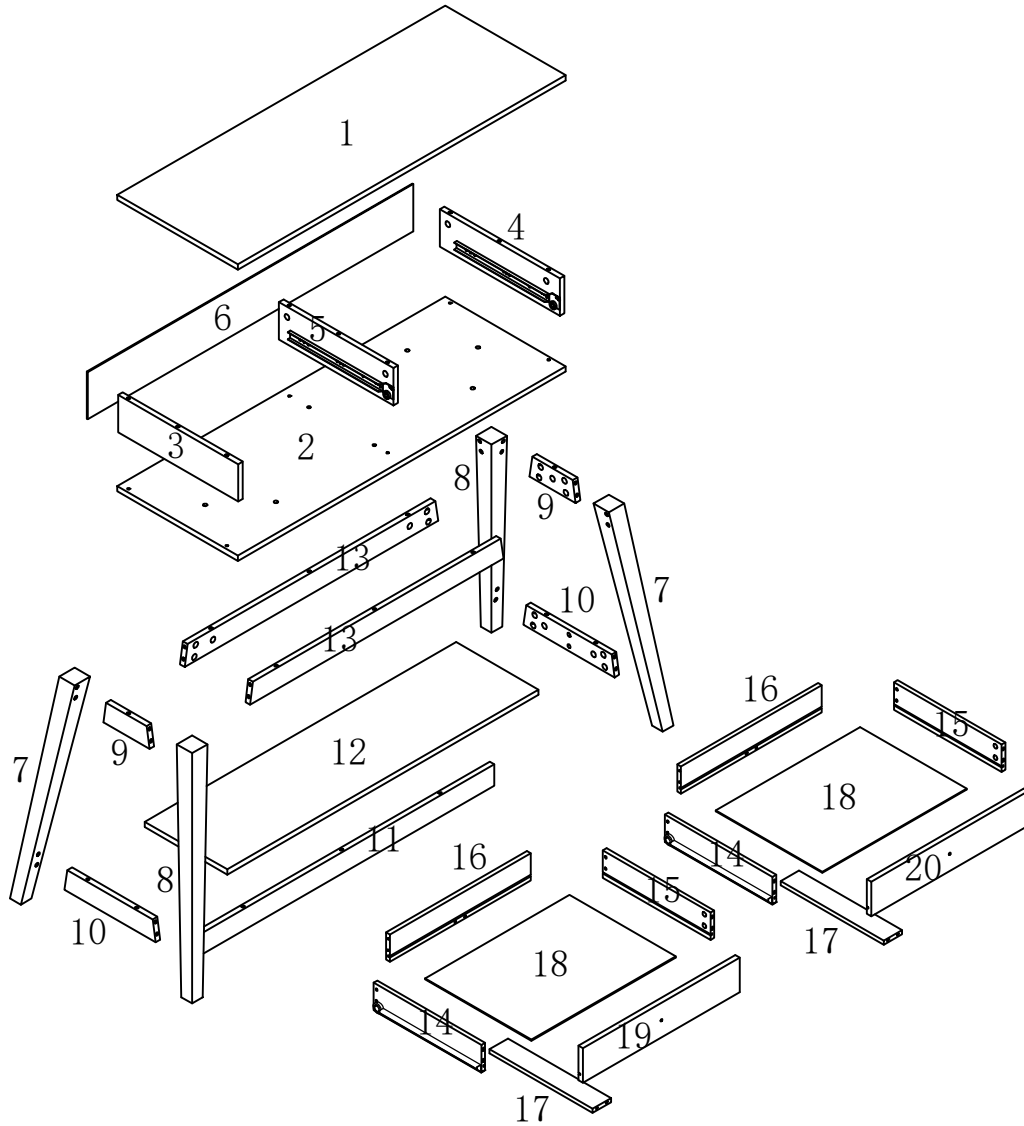












ITEM#: 161620 M202756



(1)	1pc	(8)	2pcs	(15)	2pcs
(2)	1pc	(9)	2pcs	(16)	2pcs
(3)	1pc	(10)	2pcs	(17)	2pcs
(4)	1pc	(11)	1pc	(18)	2pcs
(5)	1pc	(12)	1pc	(19)	1pc
(6)	1pc	(13)	2pcs	(20)	1pc
(7)	2pcs	(14)	2pcs		







HARDWARE IDENTIFICATION

ITEM#: 161620 M202756


A		L29	46pcs
B		15	46pcs
C		L20	8pcs
D		12	8pcs
E		8 x 25	9pcs
F		6 x 30	4pcs
G		4 x 30	18pcs
H			2pcs
I		M4 x 22	2pcs
J		Z1016	22pcs
K		20	34pcs
L		16	4pcs
M		197x5x1	1pc
N		∅8x40	1pc
O		12x12x1	2pcs
P		∅5x40	1pc
Q		∅4x25	1pc
R		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

ASSEMBLY INSTRUCTION

ITEM#: 161620 M202756

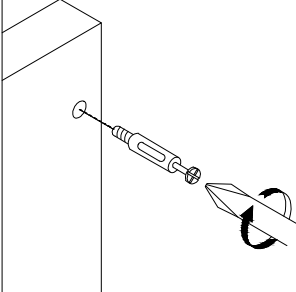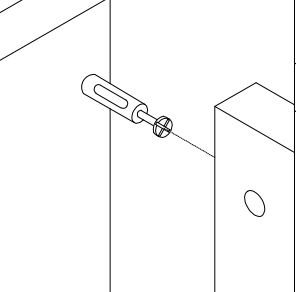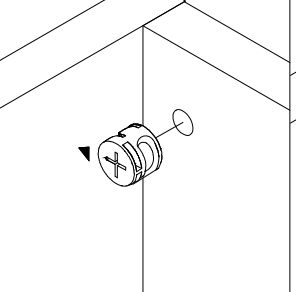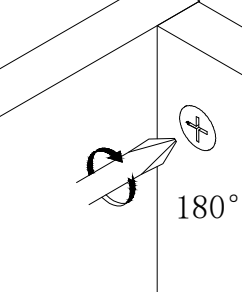
HOW TO	1	2	3	4
 Cam Bolt				
 Cam Lock	1. Screw Cam Bolt into panel.	2. Insert Cam Bolt into bolt hole of joining panel.	3. Insert Cam Lock. arrow facing bolt.	4. Gently turn Cam Lock clockwise to lock position.

STEP1

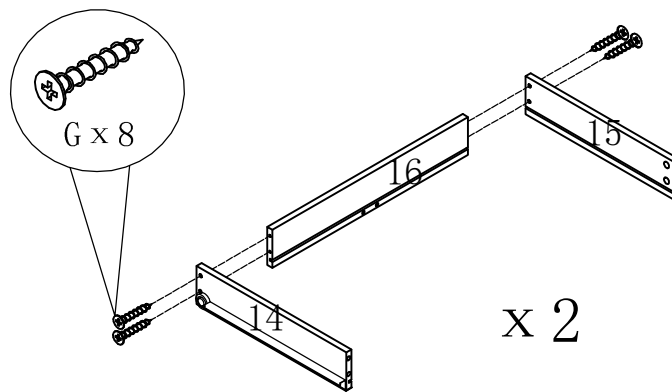


ASSEMBLY INSTRUCTION

ITEM#: 161620 M202756

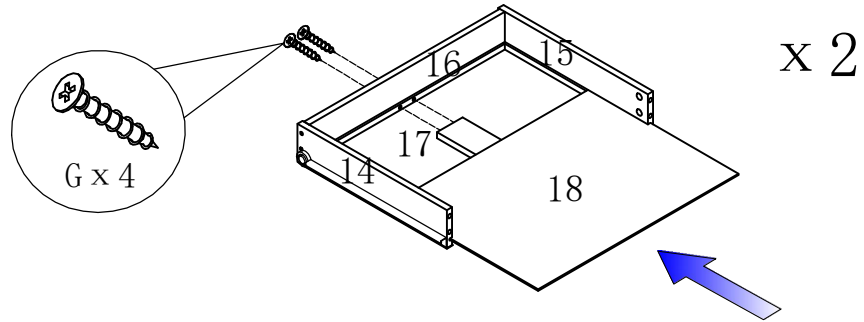


STEP2

STEP3

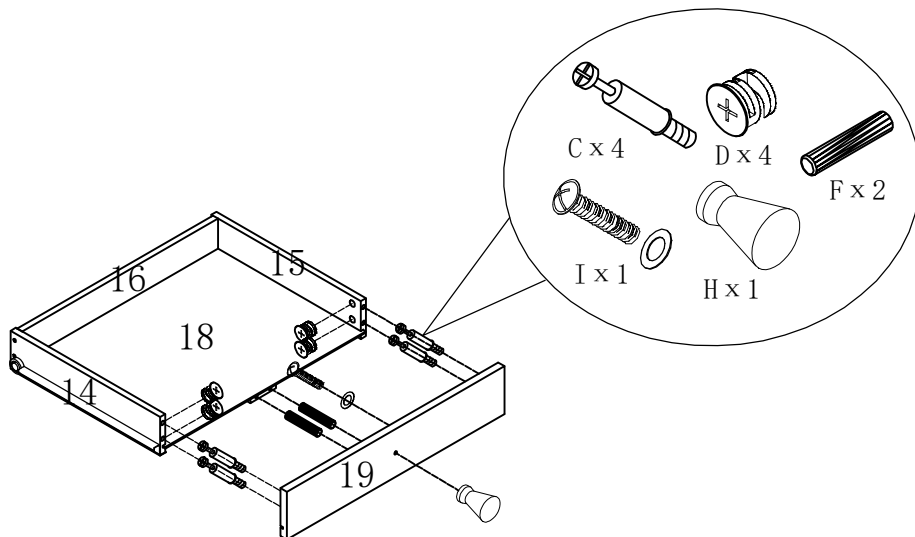


ASSEMBLY INSTRUCTION

ITEM#: 161620 M202756

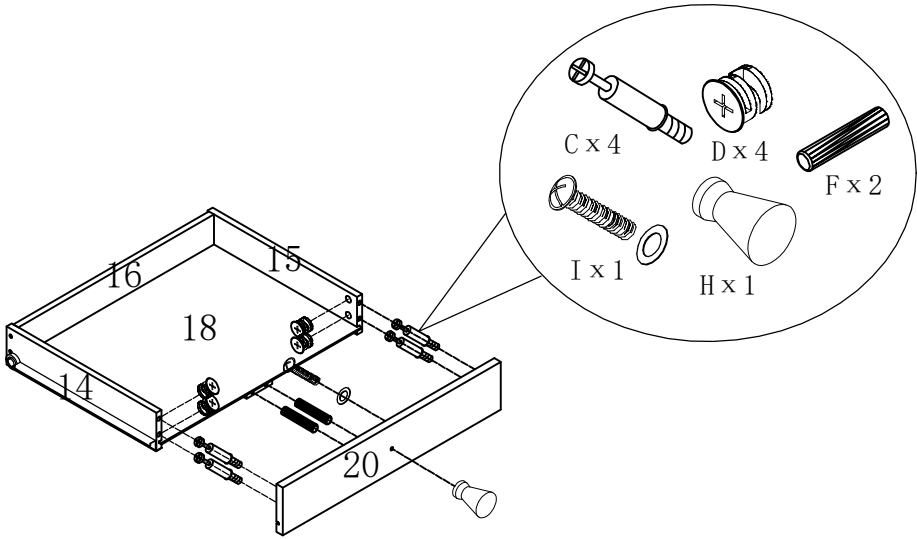


STEP4

STEP5

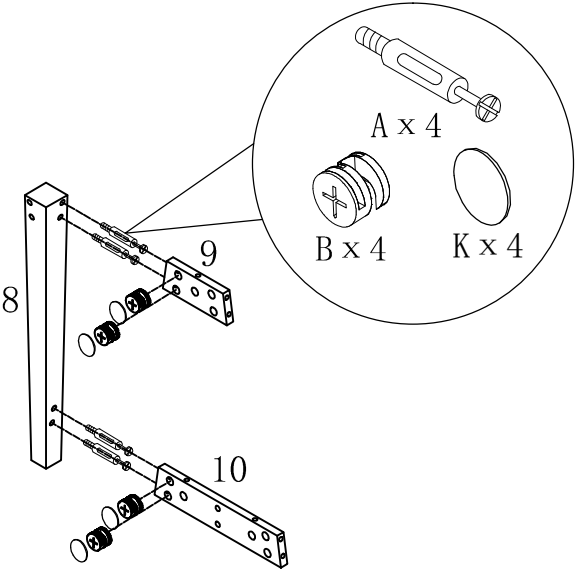


ASSEMBLY INSTRUCTION

ITEM#: 161620 M202756

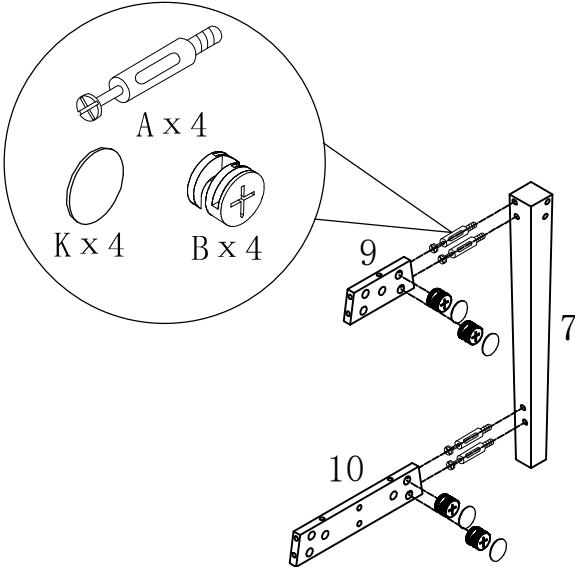


STEP6

STEP7

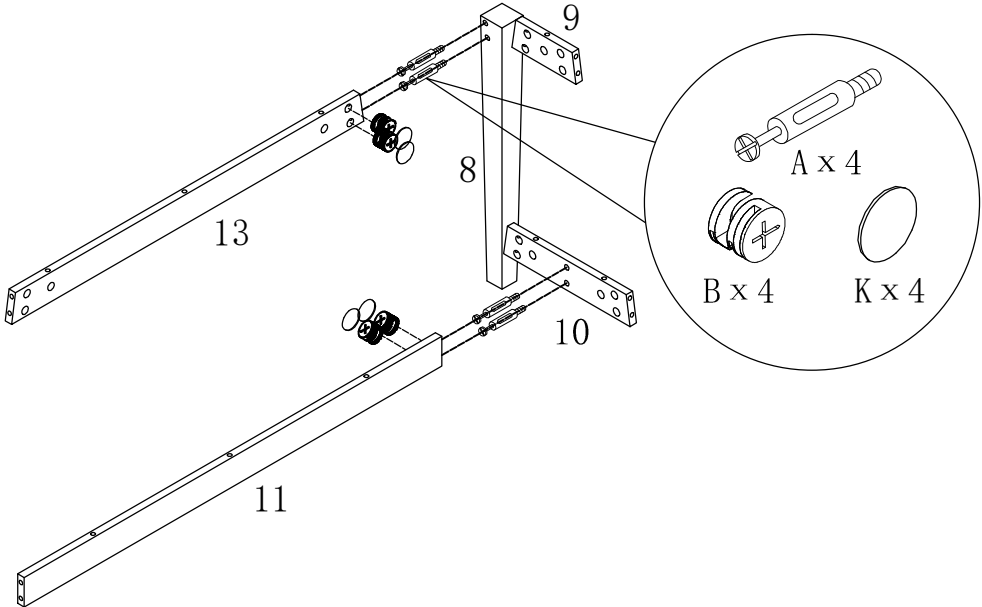


ASSEMBLY INSTRUCTION

ITEM#: 161620 M202756

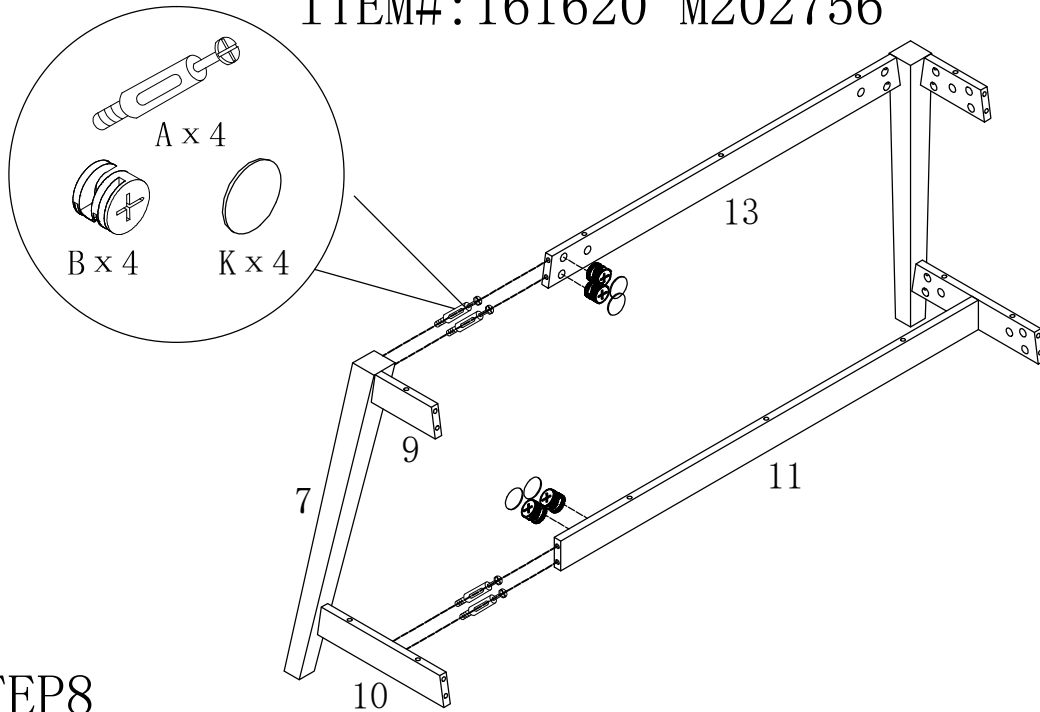


STEP8

STEP9

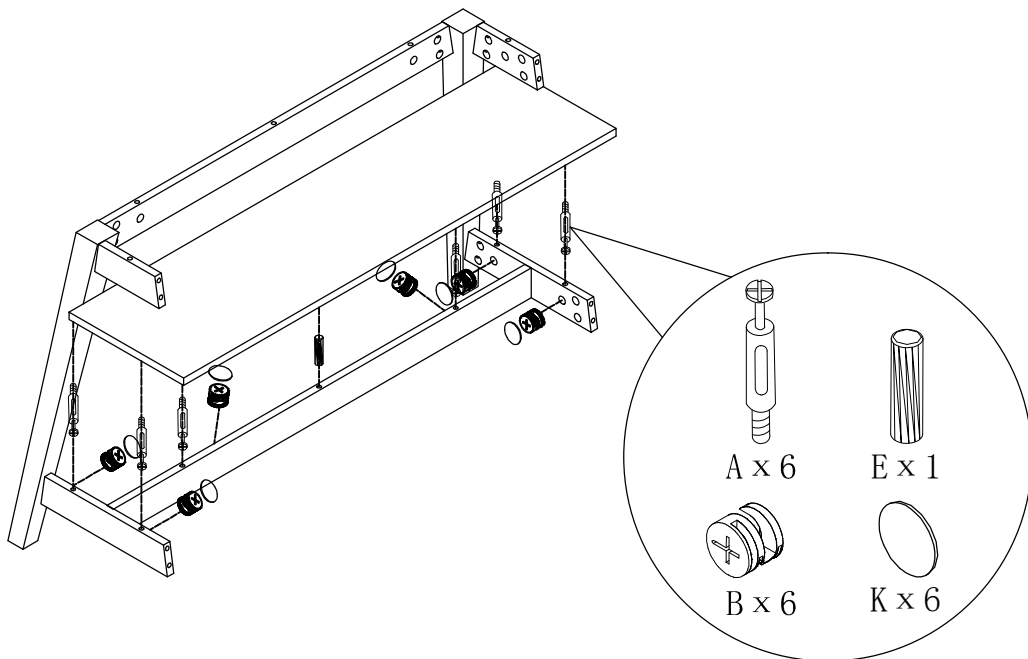


ASSEMBLY INSTRUCTION

ITEM#: 161620 M202756

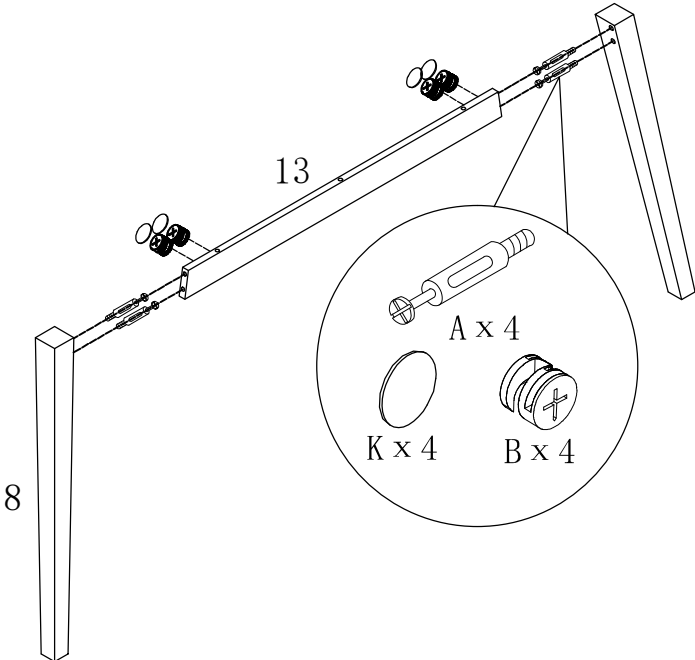


STEP10

STEP11

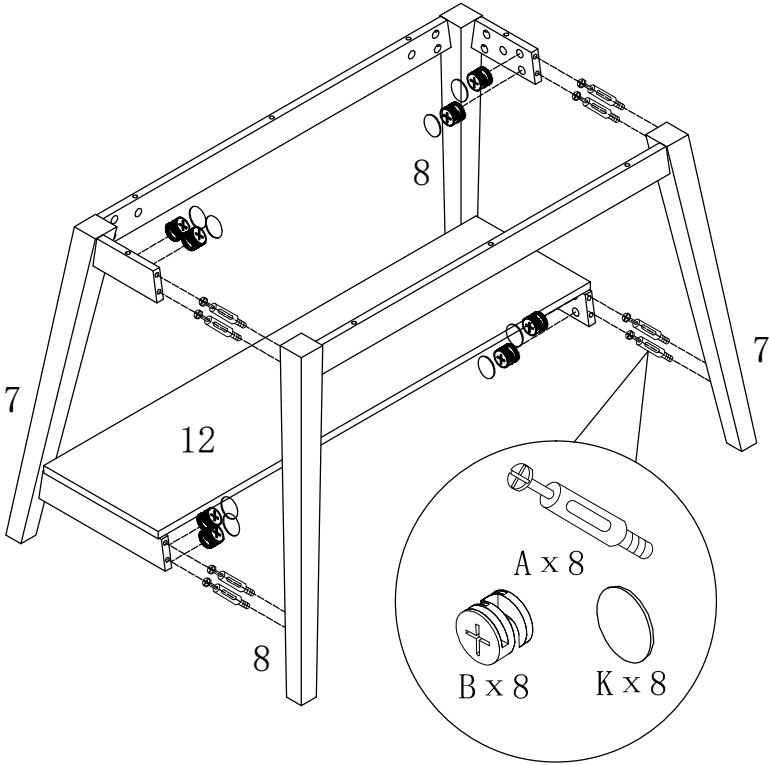


ASSEMBLY INSTRUCTION

ITEM#: 161620 M202756

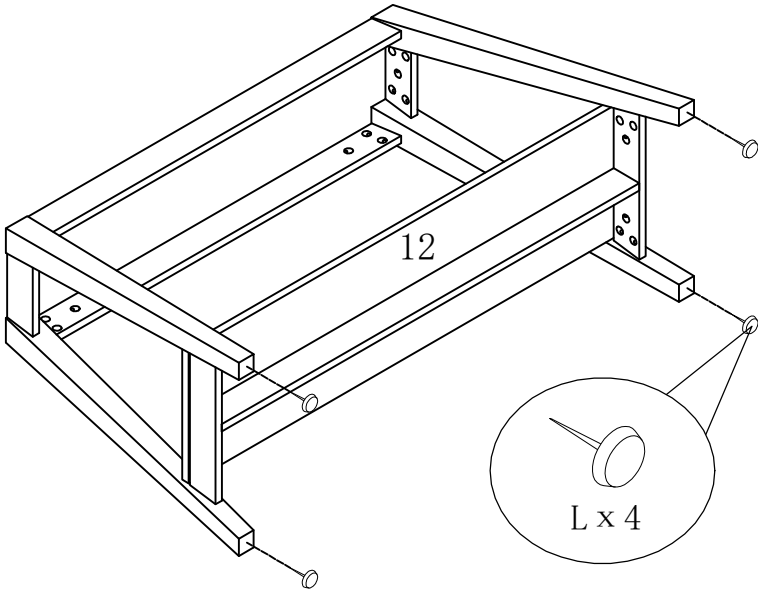


STEP12

STEP13

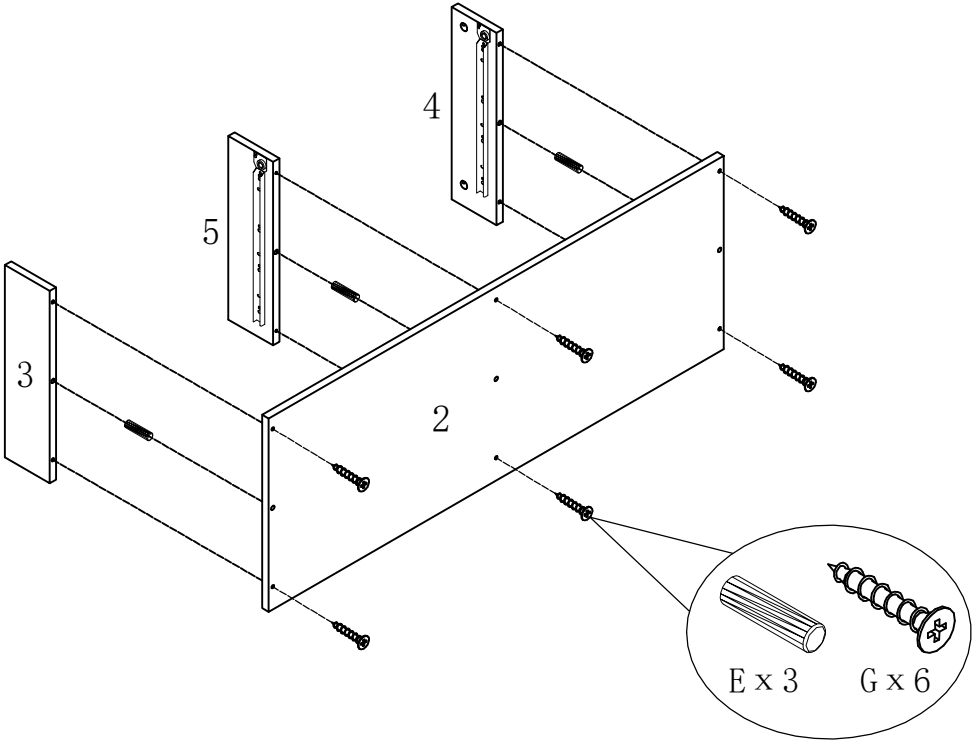


ASSEMBLY INSTRUCTION

ITEM#: 161620 M202756

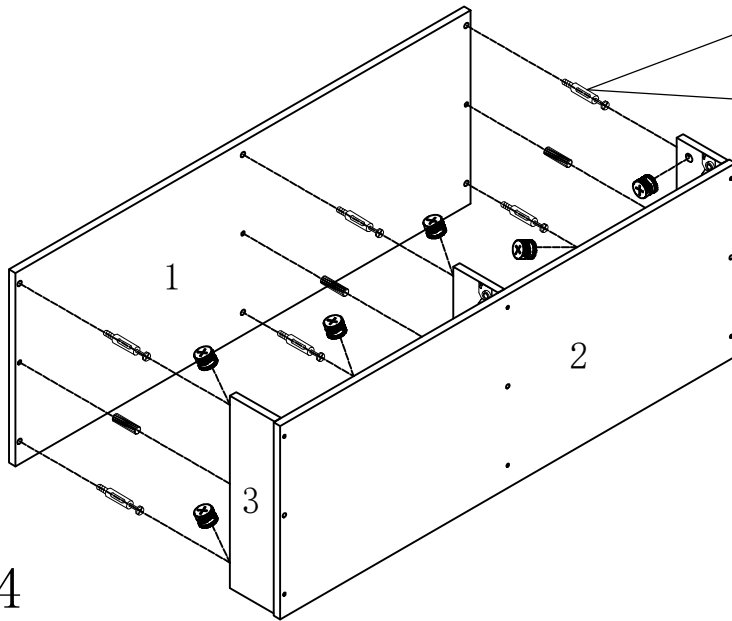

STEP14


STEP15

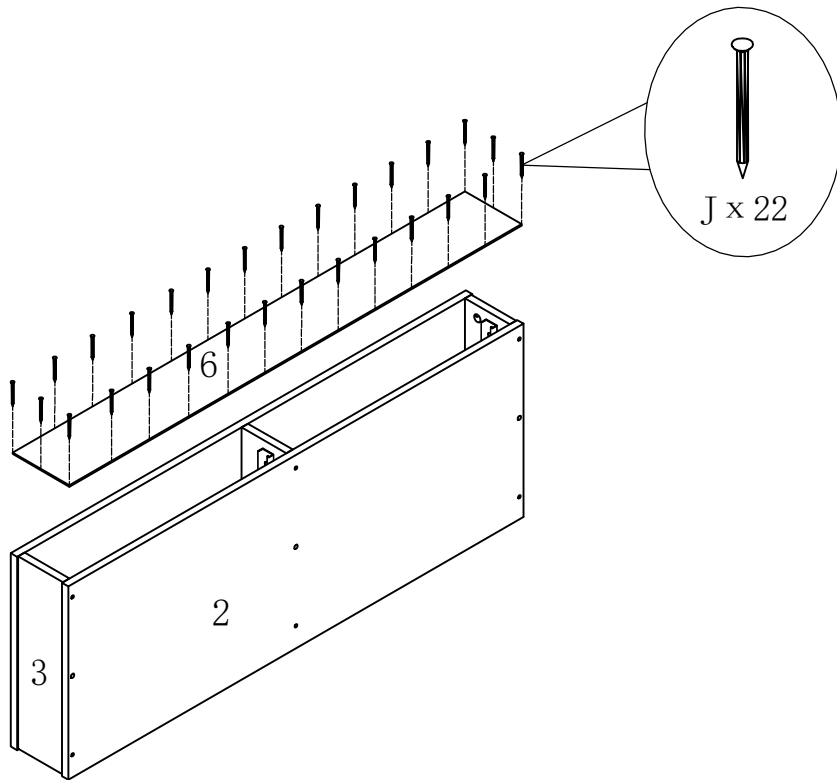

PAGE 11 OF 13



ASSEMBLY INSTRUCTION

ITEM#: 161620 M202756

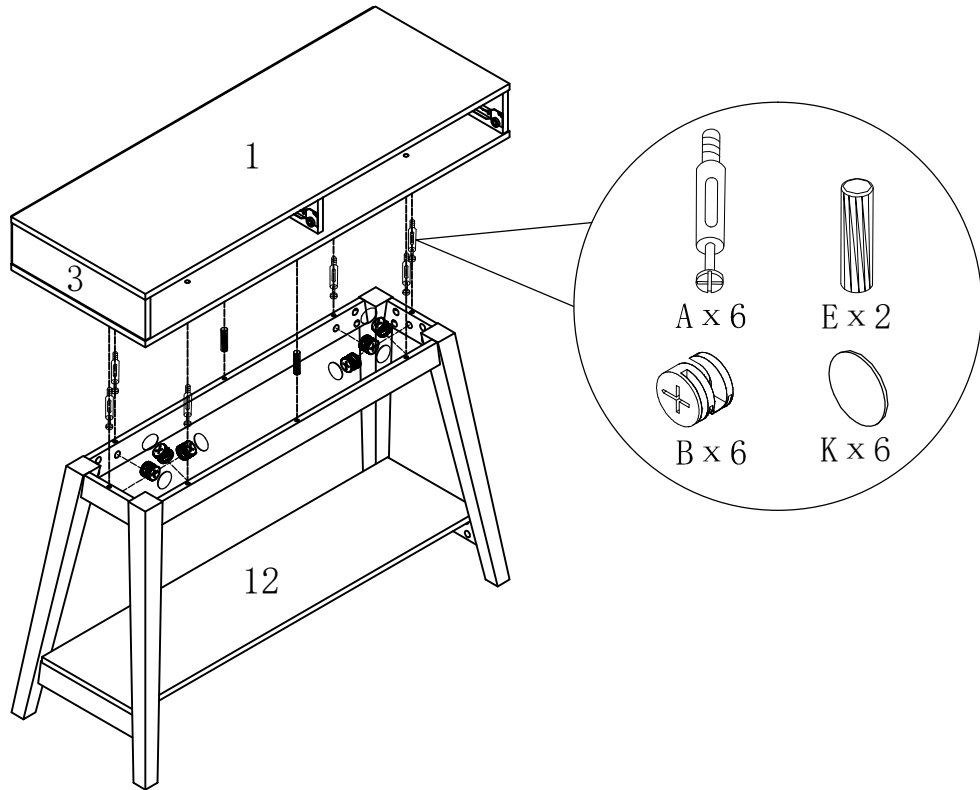

STEP16


STEP17

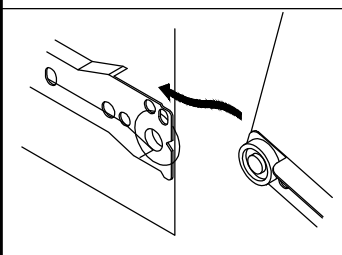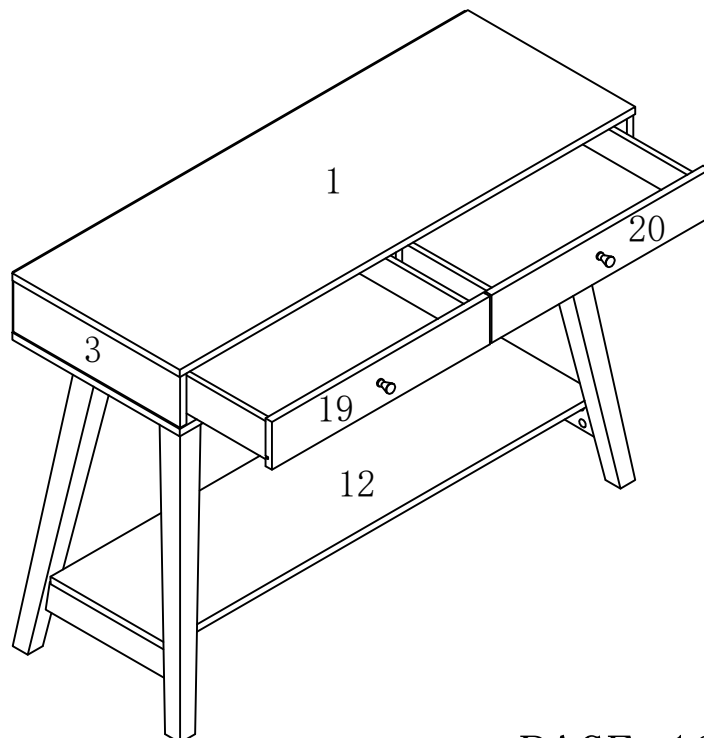


ANTI-TIPPING STRAP INSTRUCTION

HARDWARE (INCLUDED) :


TOOLS NEEDED (NOT INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS




DRYWALL SCREW $\phi 5 \times 40$ X 1PC



STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC

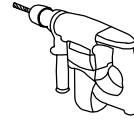


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

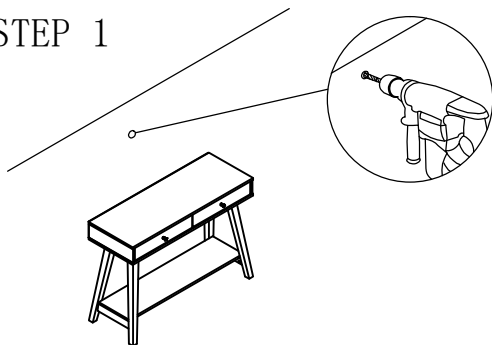


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2

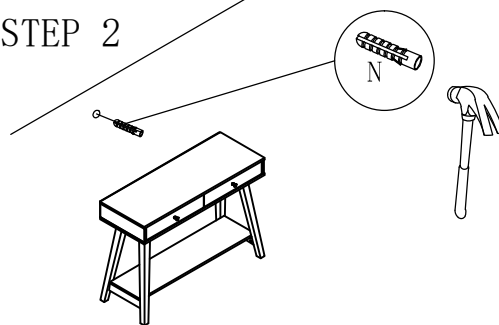


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3

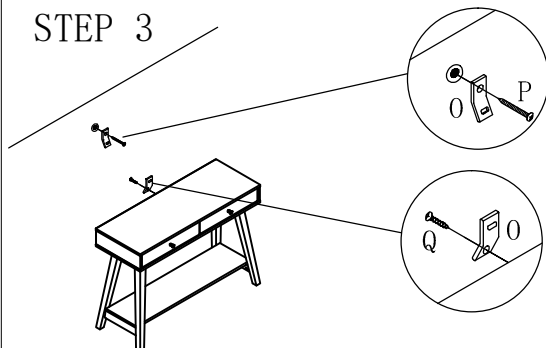

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item, along top edge.

STEP 4

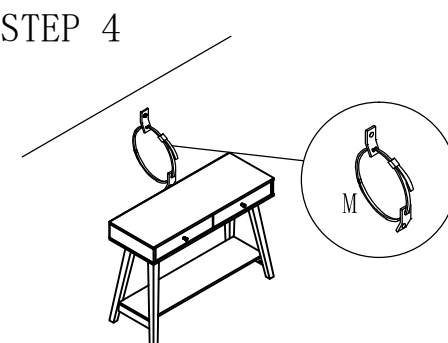

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.