








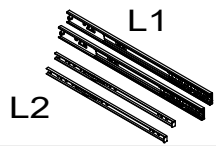







Assembly instruction of sliding 3 door wardrobe


A		Ø15x12	119	PCS	H			4	PCS
B		Ø7x35	119	PCS	I		684MM	2	PCS
C		Ø8x30	24	PCS	J		Ø3.5x14	101	PCS
D			16	PCS	K		Ø14	10	PCS
E		Ø19	16	PCS	L		16"	3	SETS
F		Ø4x40	15	PCS					
G			12	PCS	M		Ø3x16	95	PCS
					N		1628MM	3	PCS



STEP 1

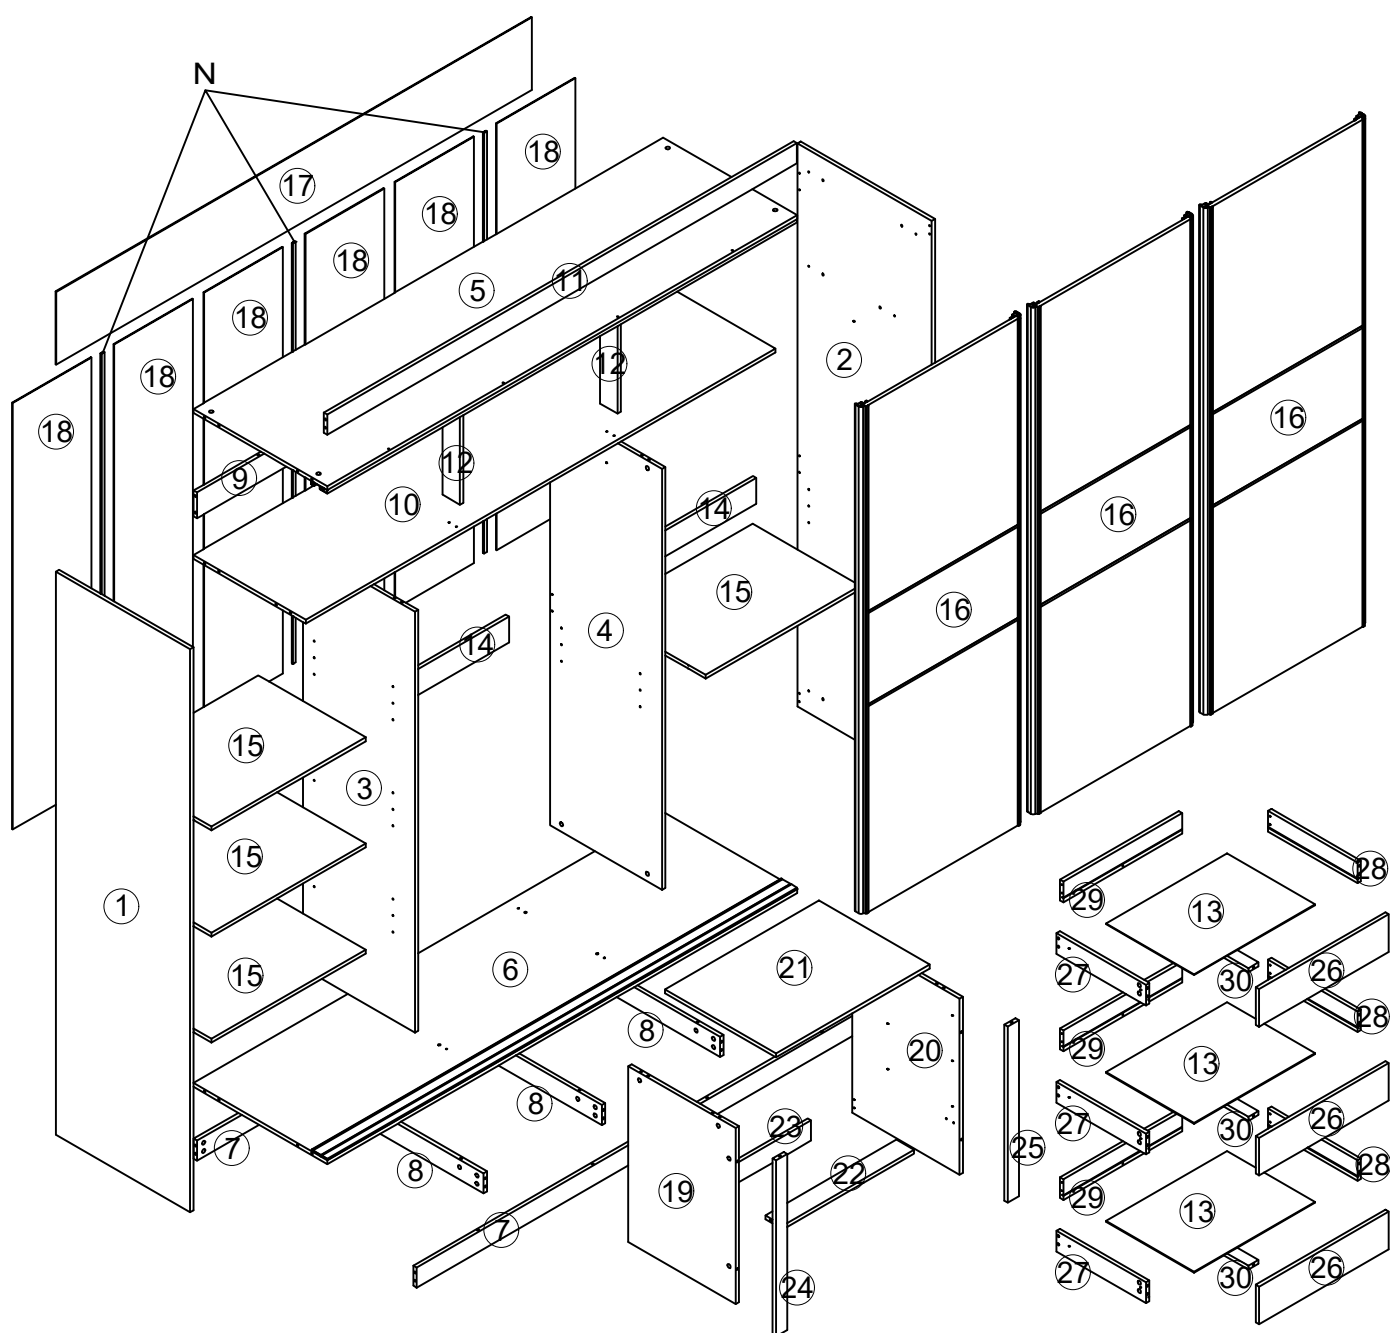Jx18


L1x6

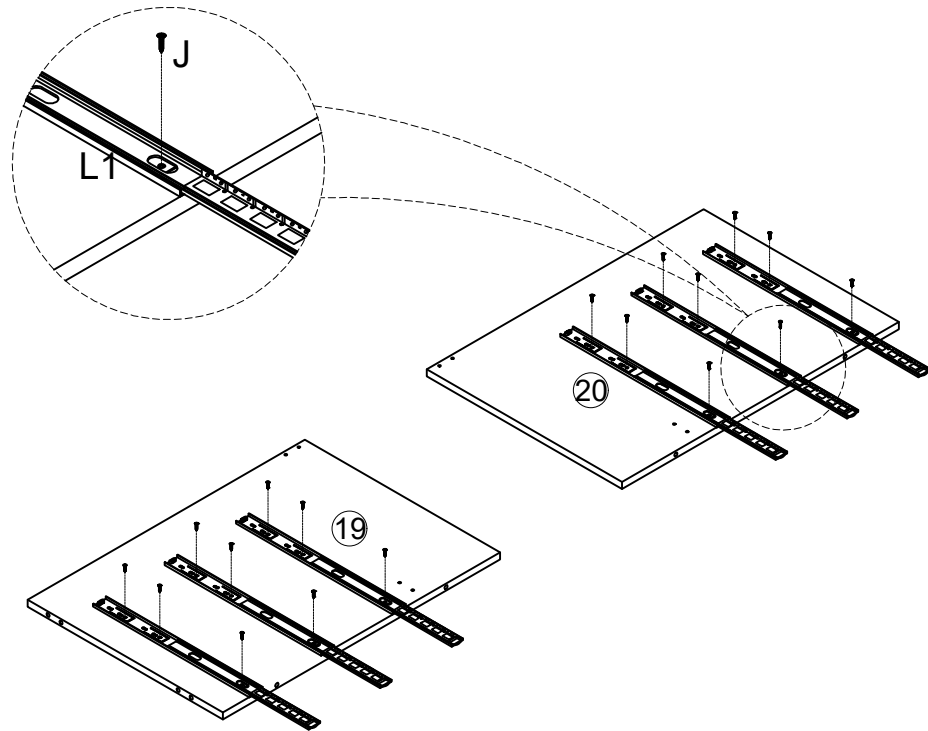

STEP 2

Ax8


Bx8

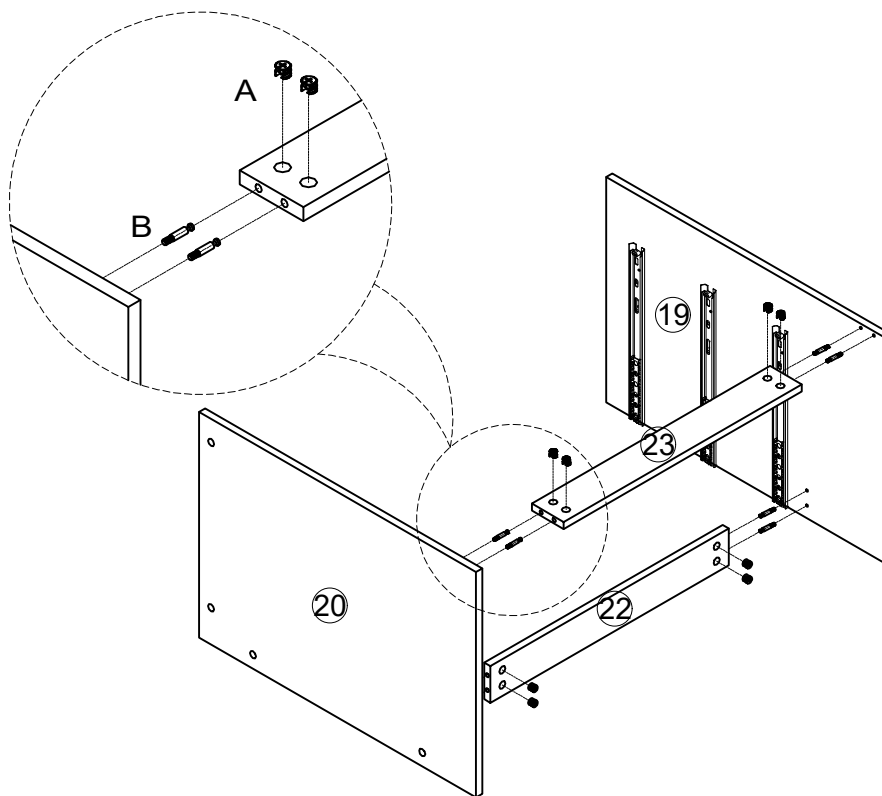

STEP 3

Ax4

Bx4

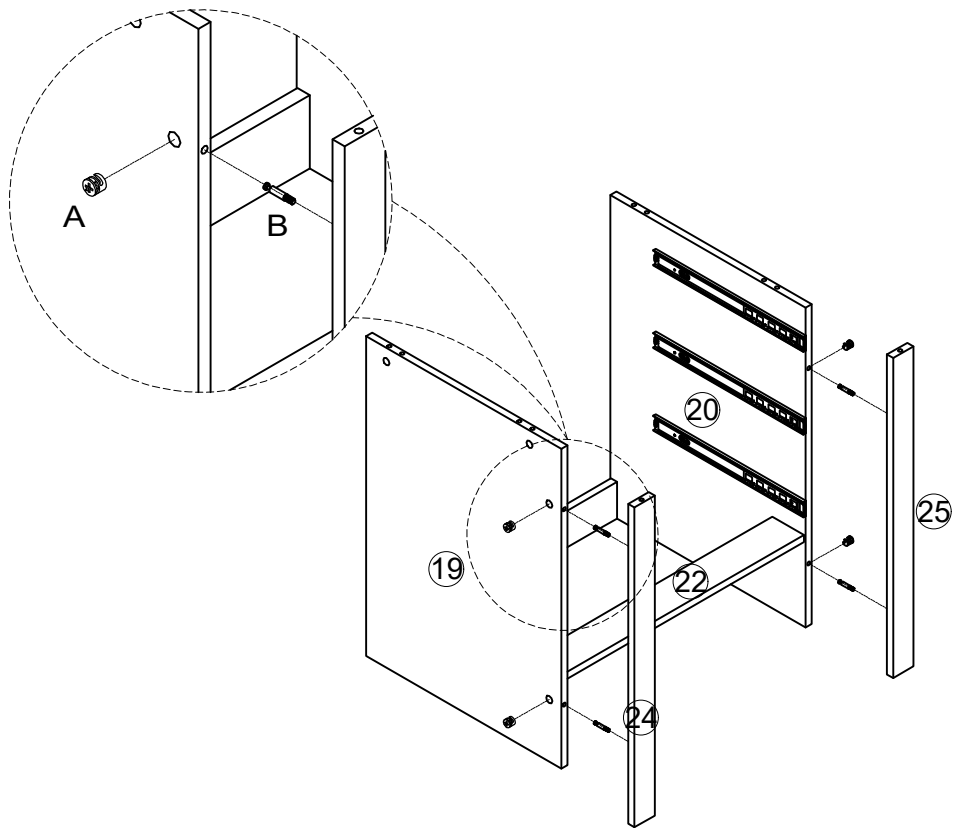


STEP 4

Ax6

Bx6

Cx4

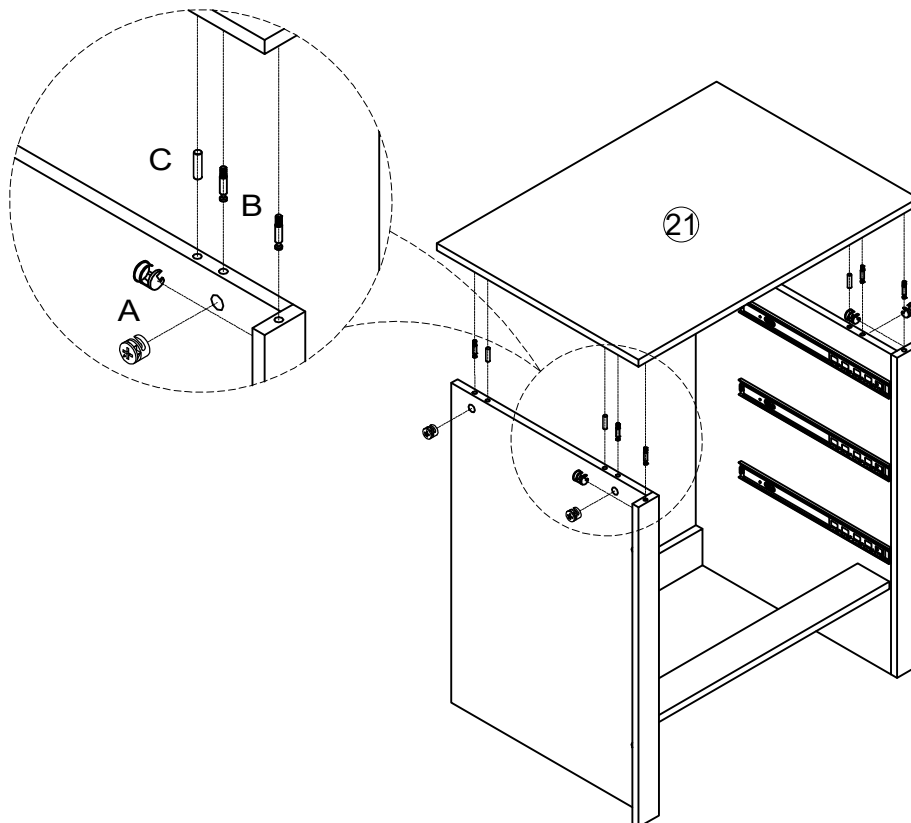

STEP 5



Ax15

Bx15



Fx15

Jx18



L2x6

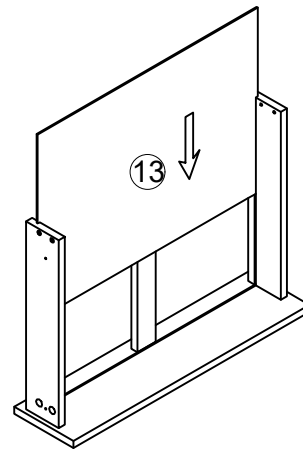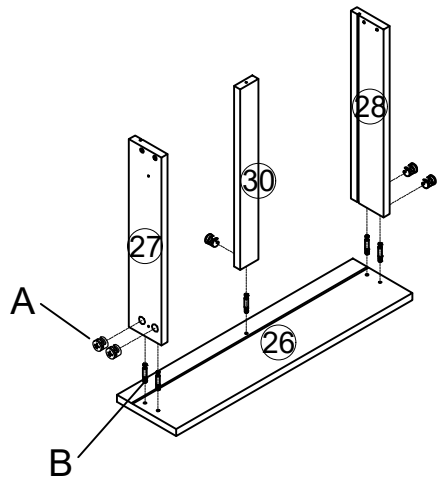

X3

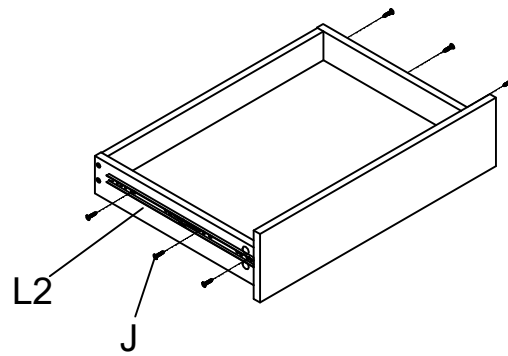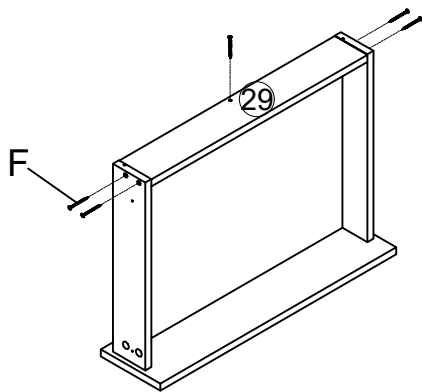


STEP 6

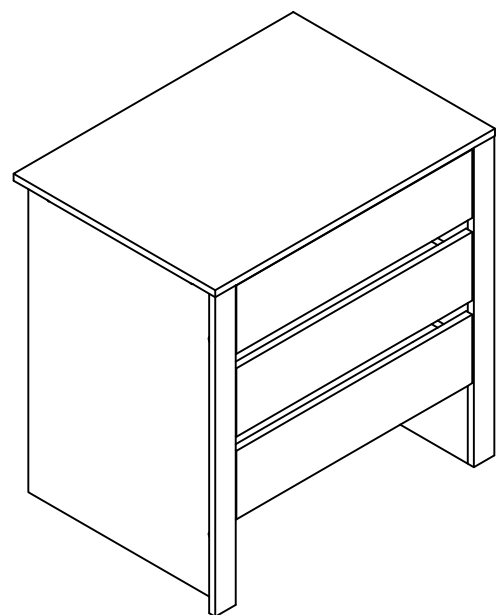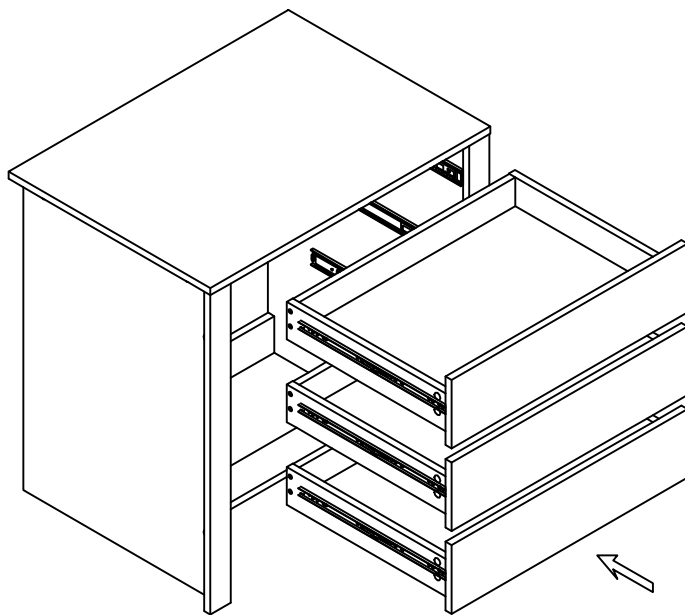

STEP 7

Ax12


Bx12

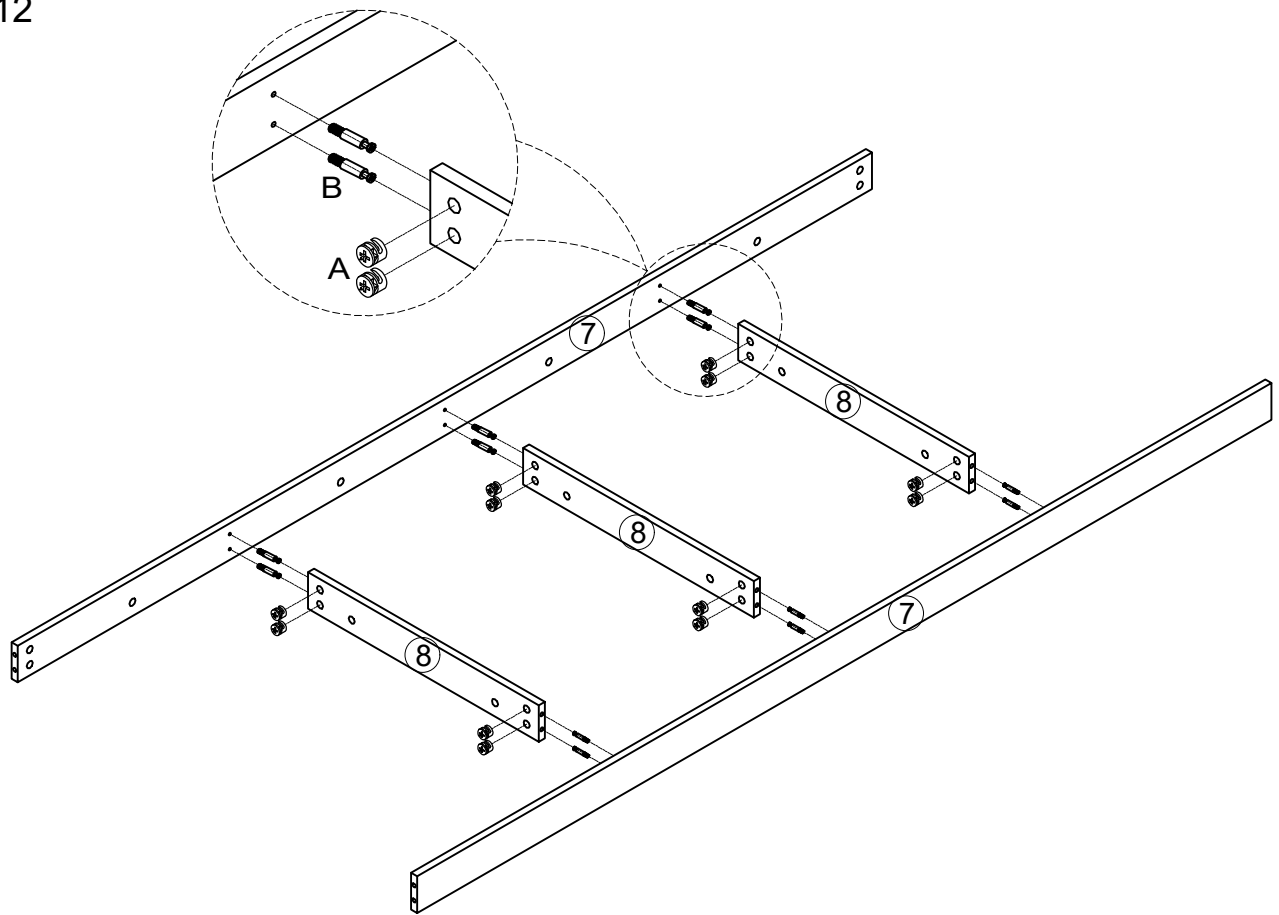

STEP 8

Ax14


Bx14

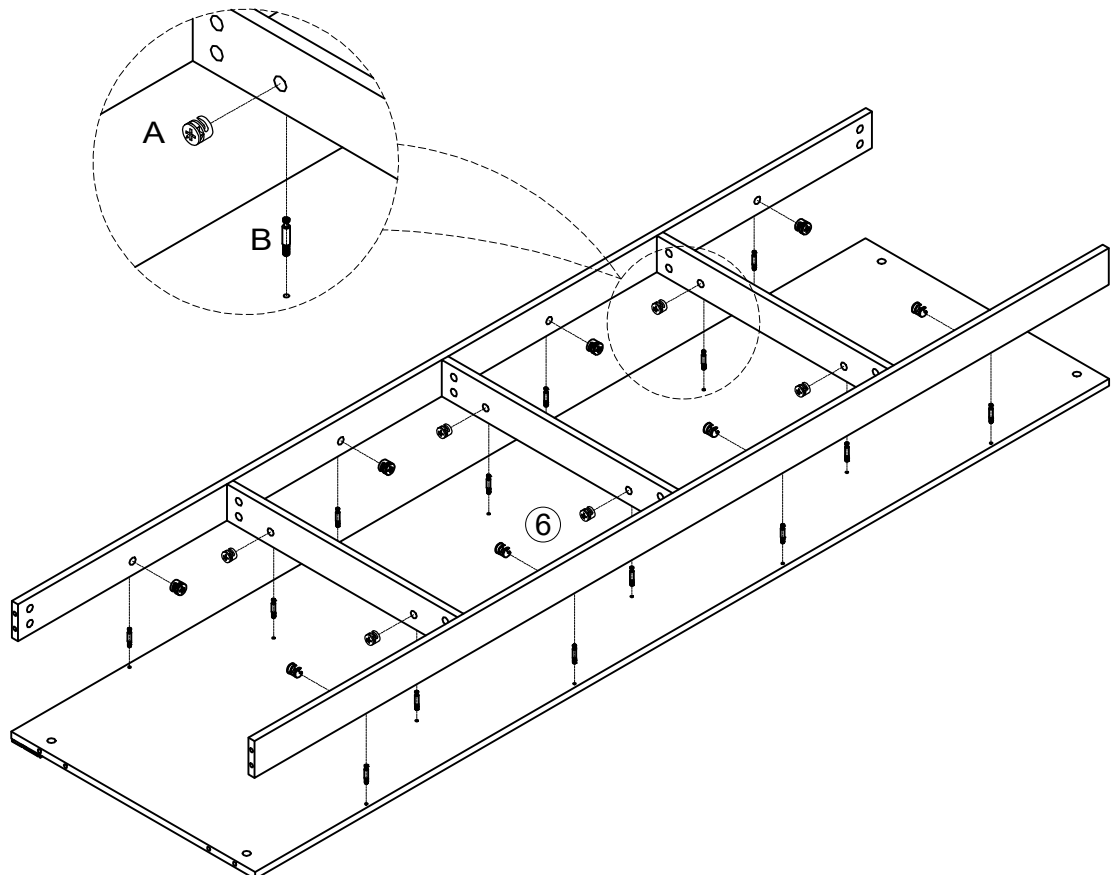

STEP 9

Ax12


Bx12

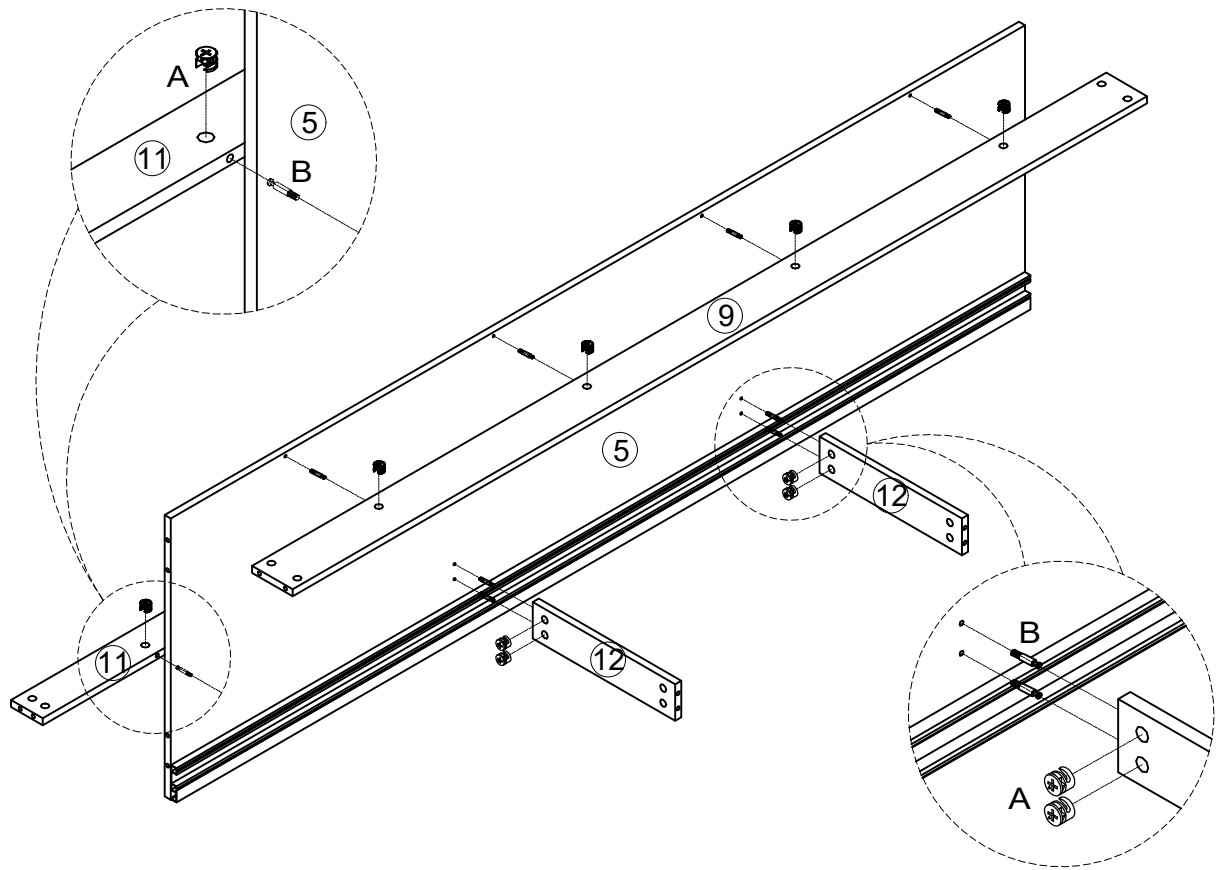

STEP 10

Ax4

Bx4

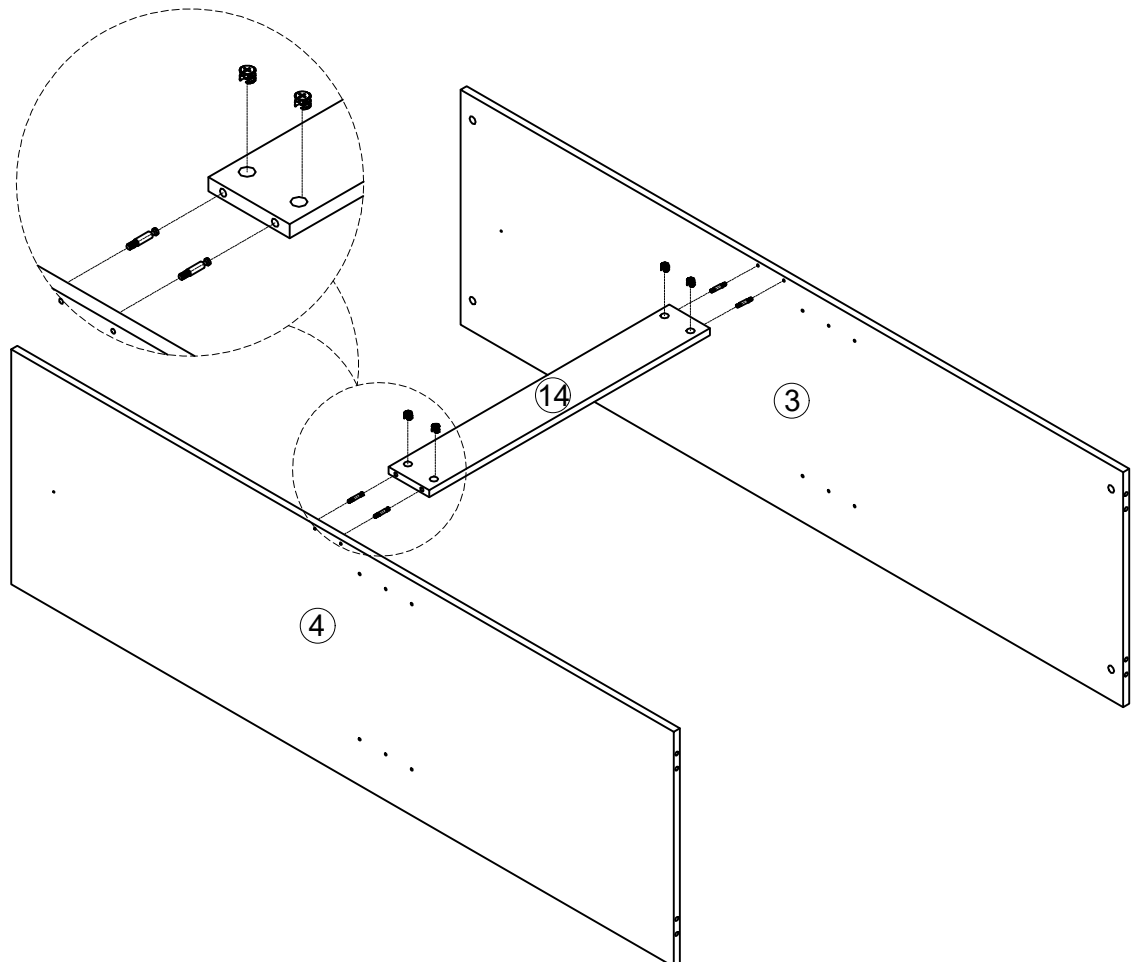


STEP 11

Ax12

Bx12

Cx8

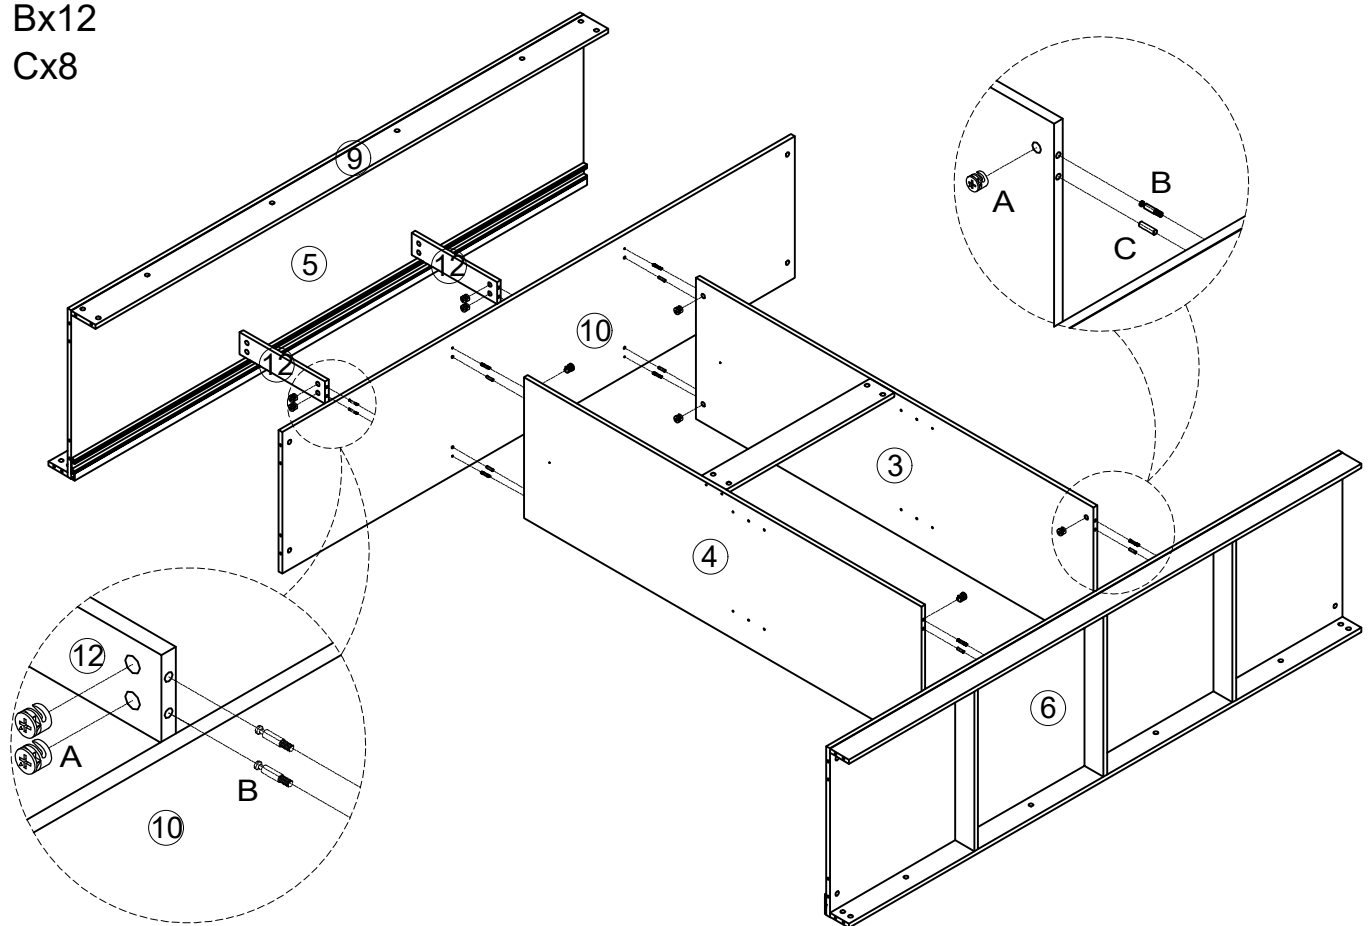


STEP 12

Ax32


Bx32

Cx12

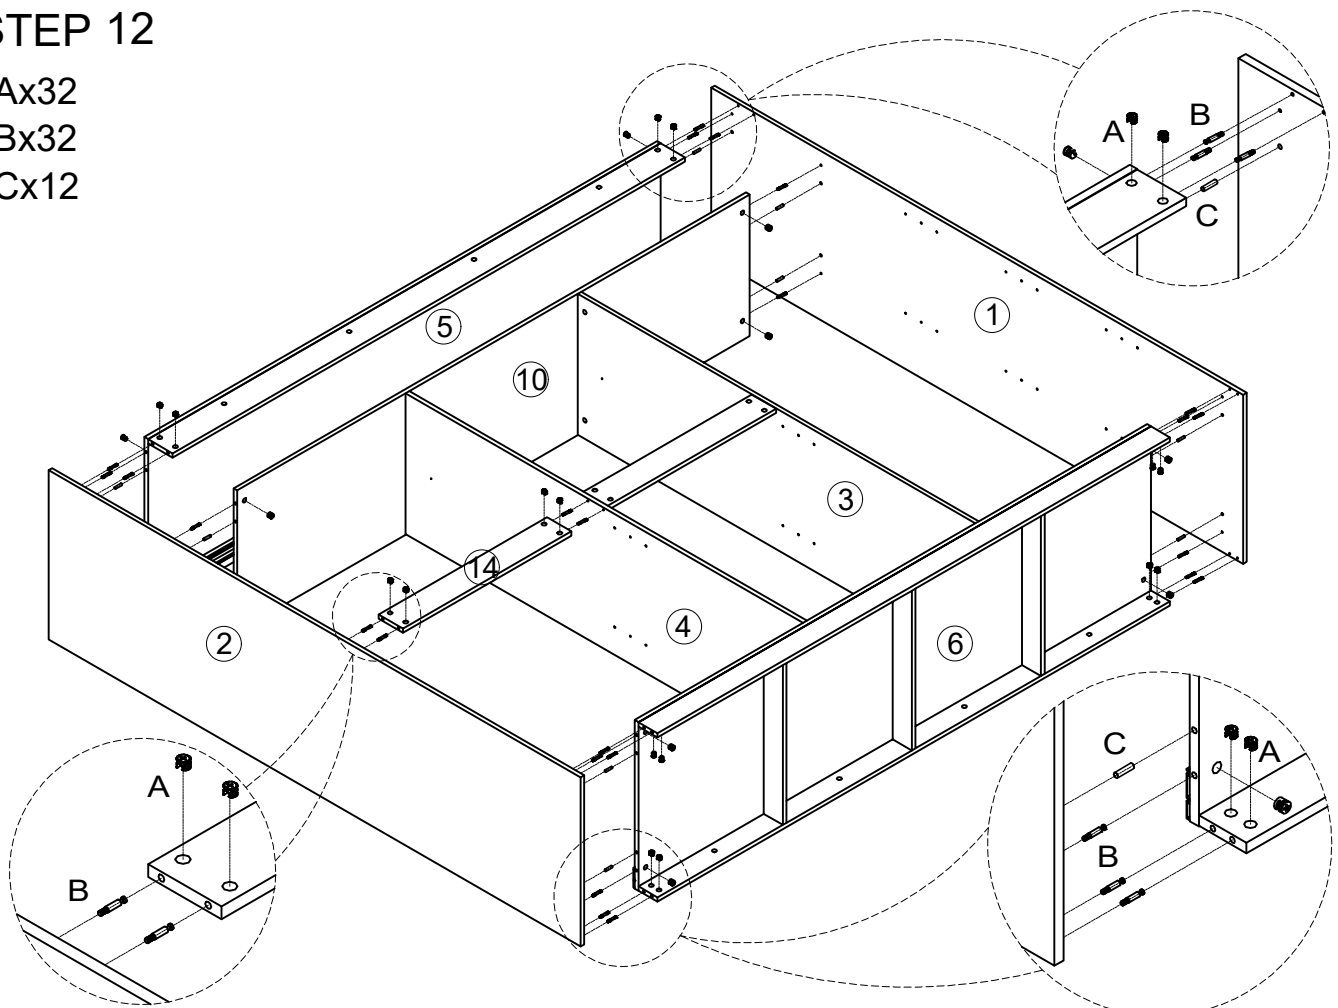


STEP 13

Jx9
Kx10
Mx95
Nx3

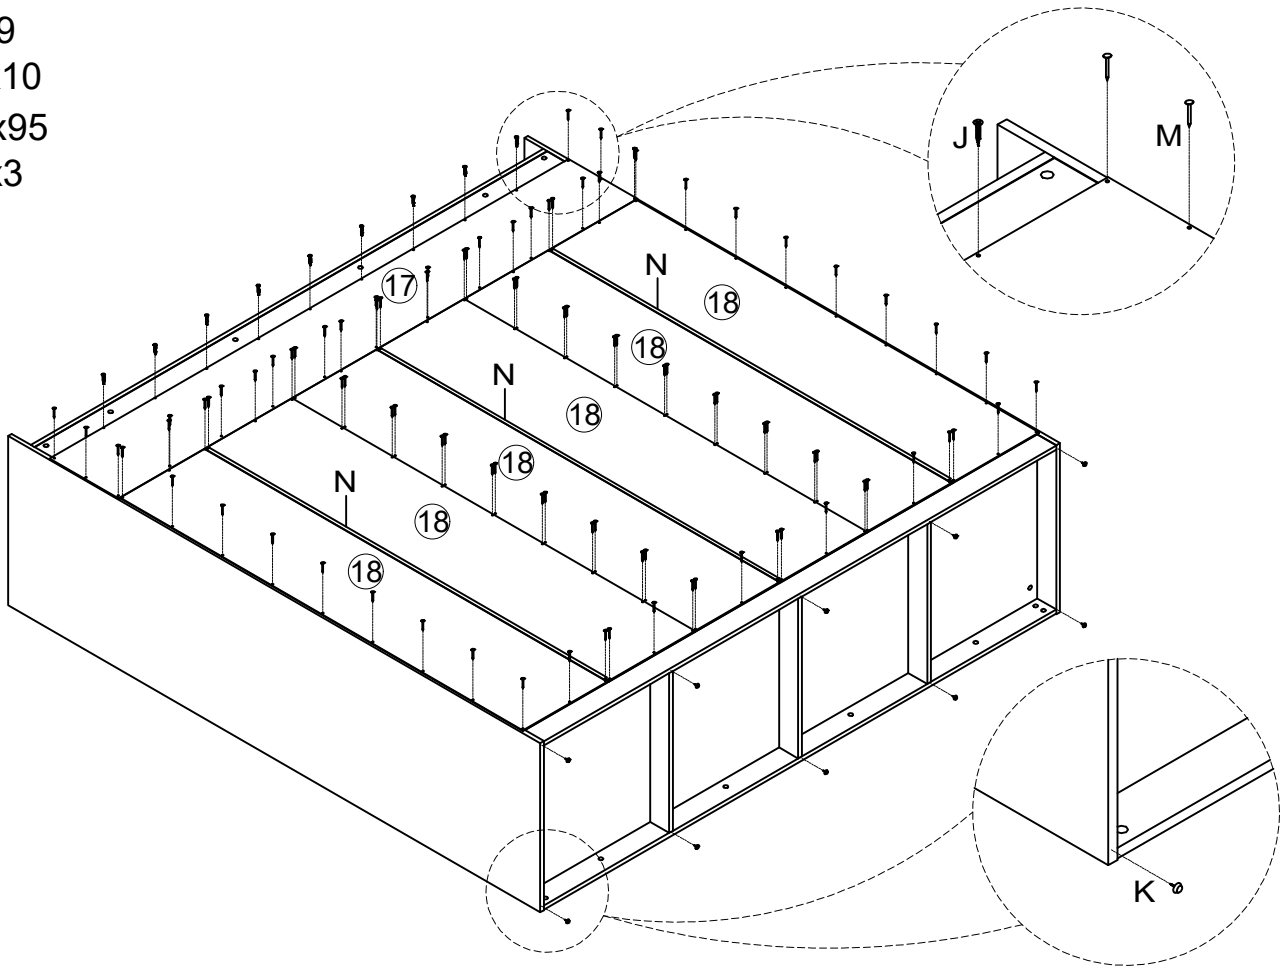

STEP 14




Hx4
Ix2
Jx8

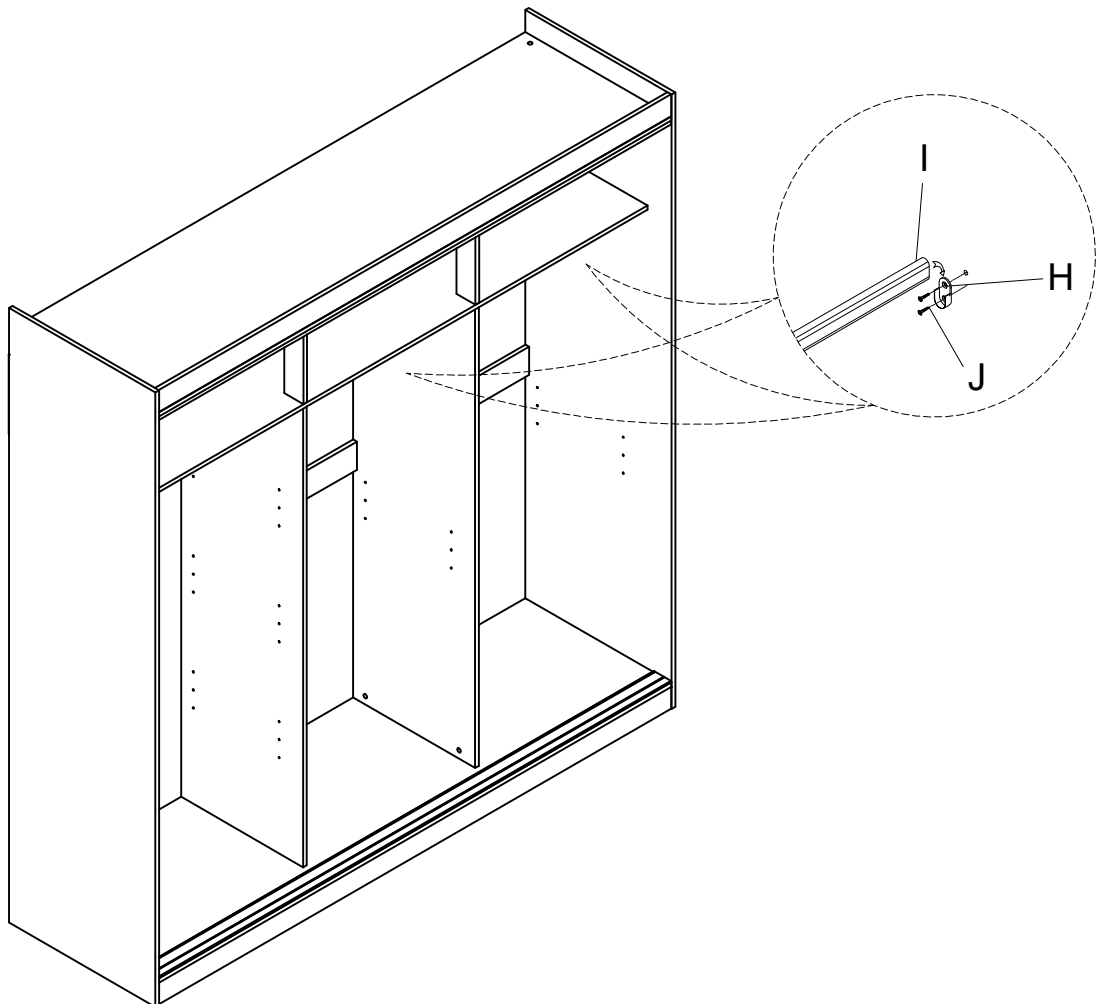

STEP 15




Dx16

Ex16

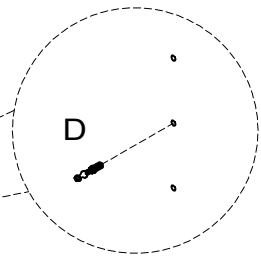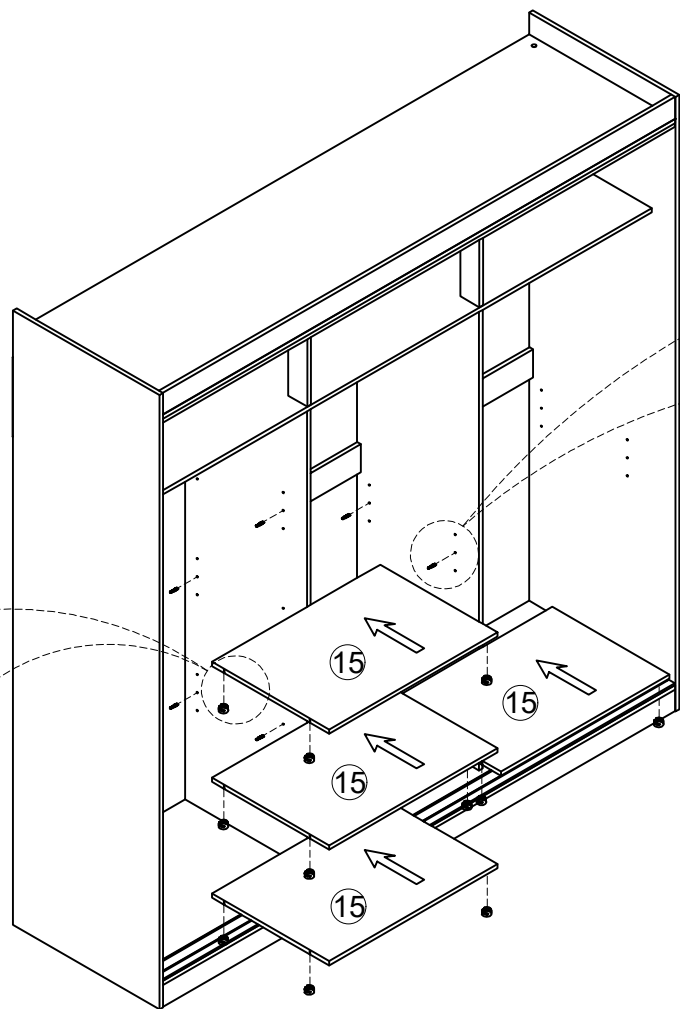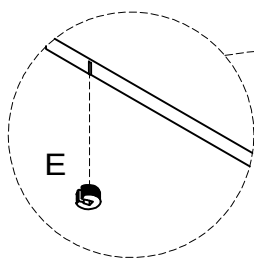


OPTION A

OPTION B

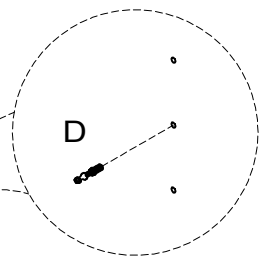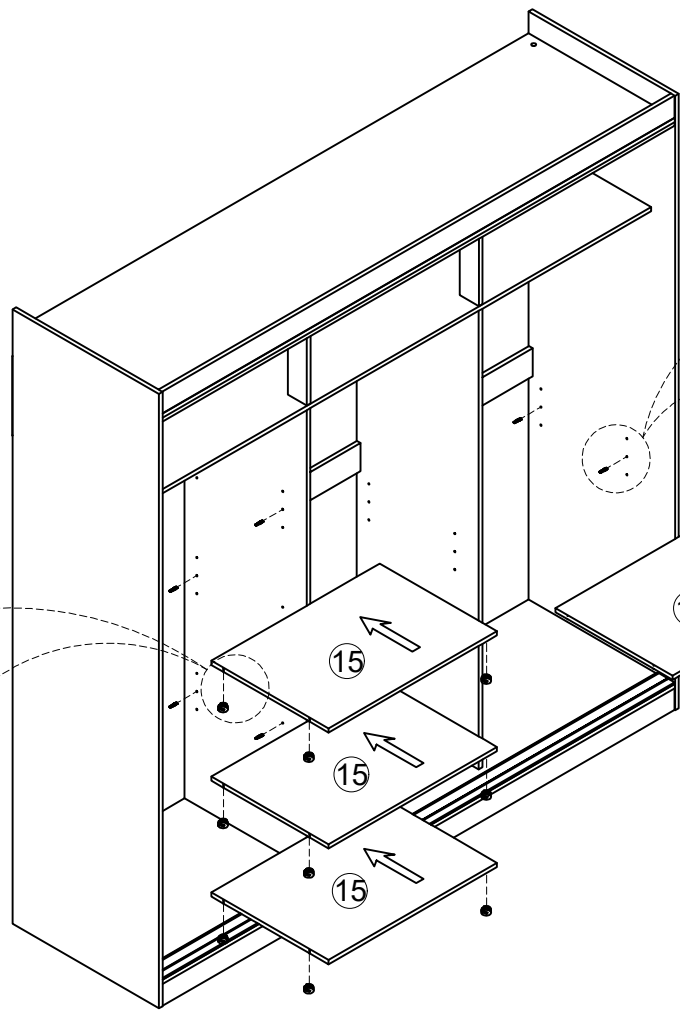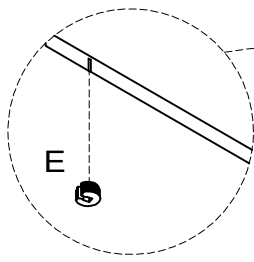


STEP 16

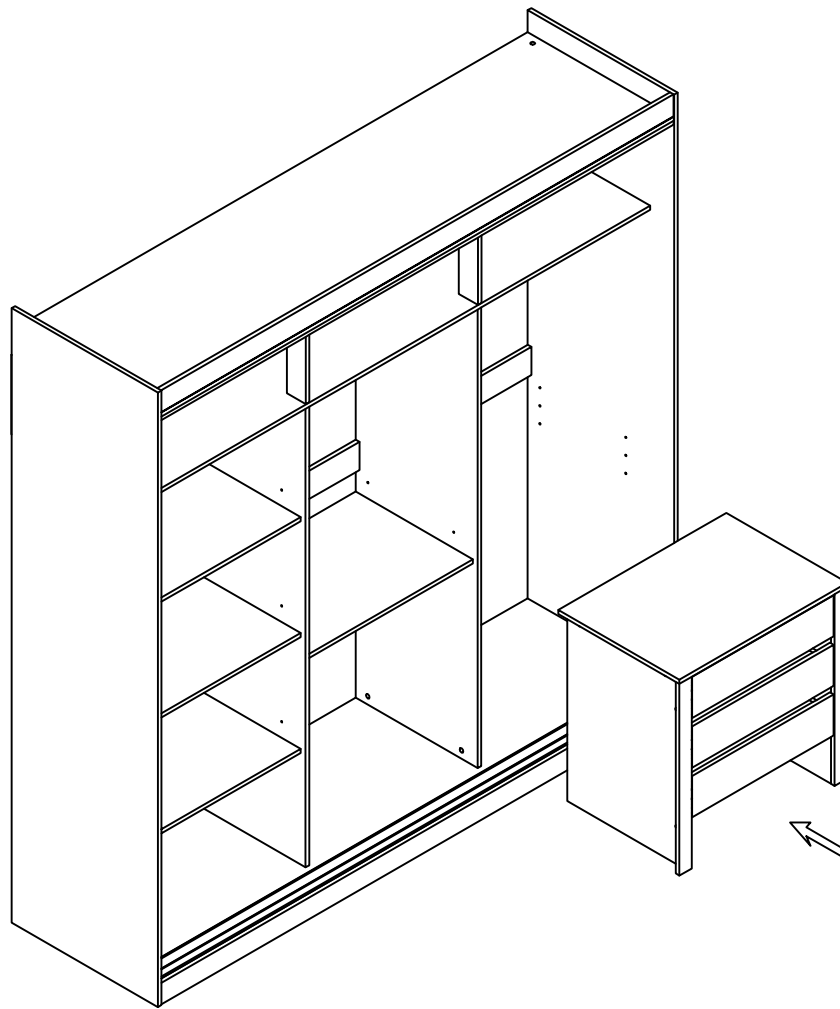

OPTION A


OPTION B

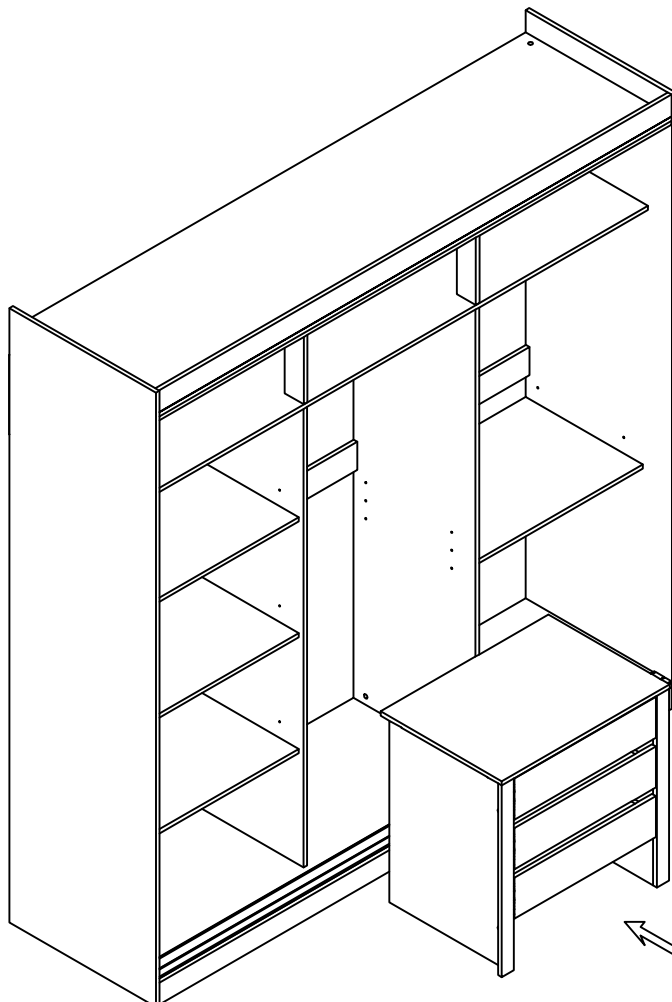


STEP 17

Gx12

Jx48

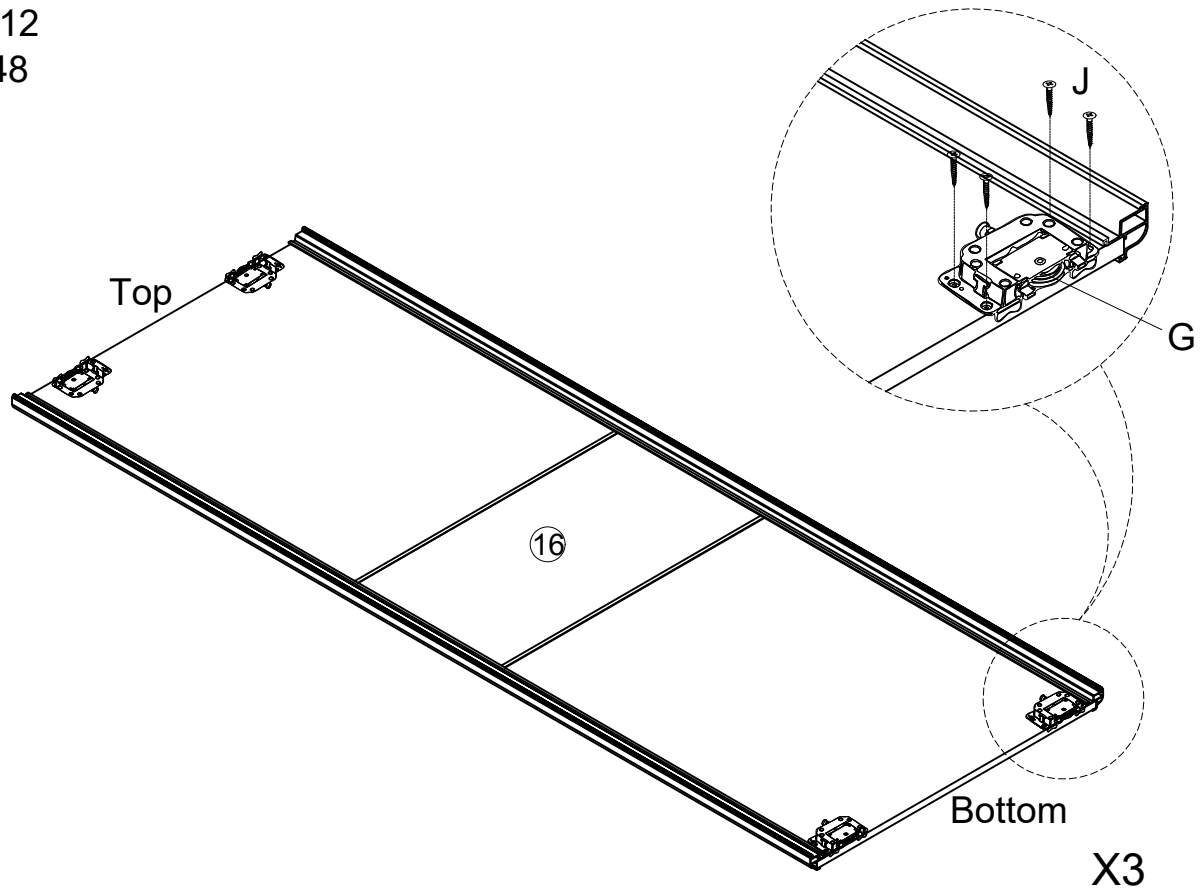

STEP 18

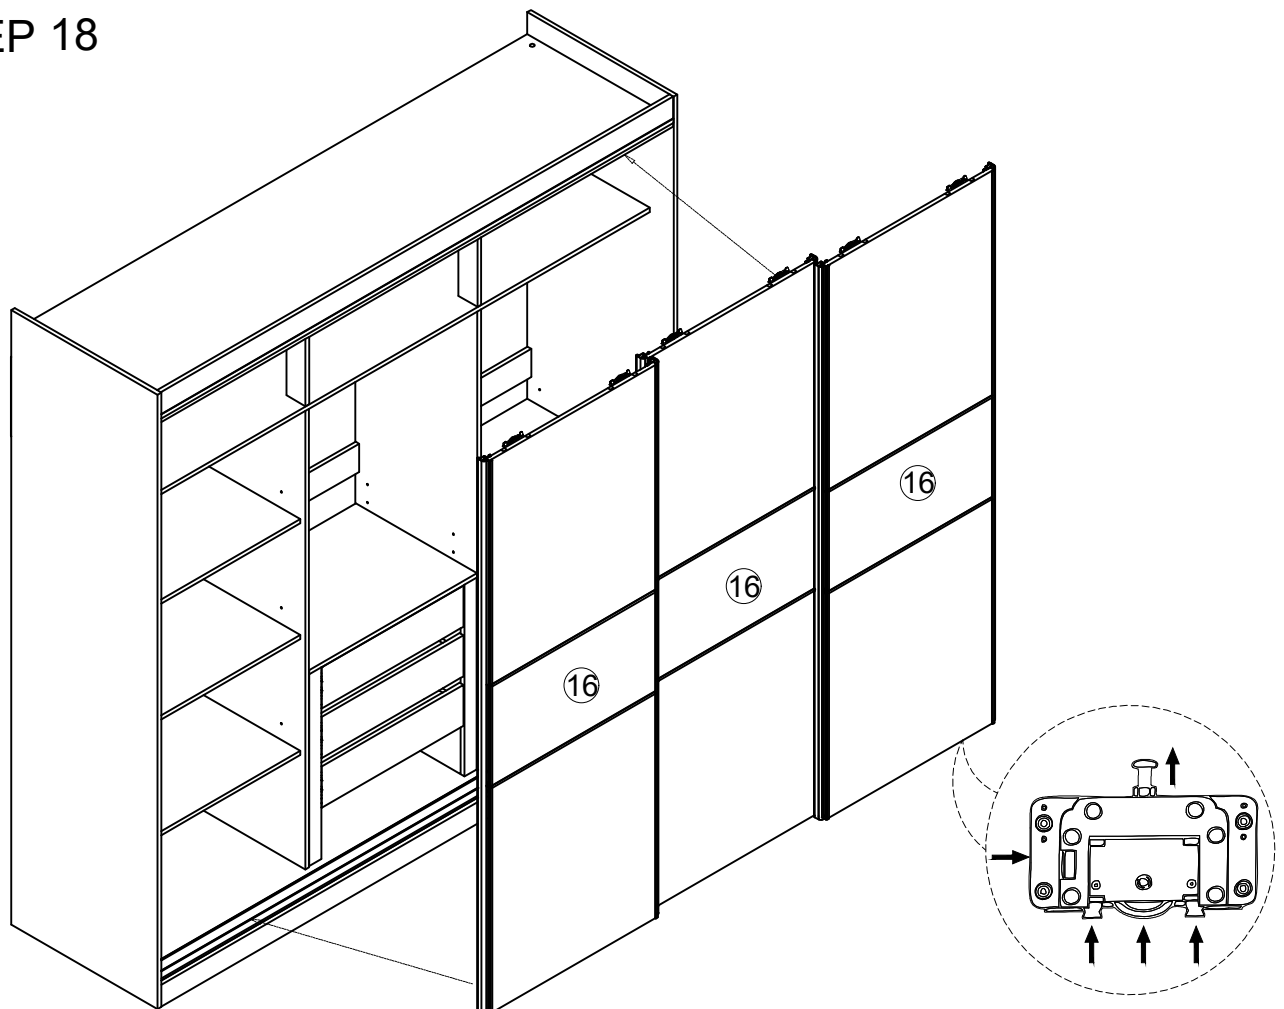

FINISH

