


30'

















2

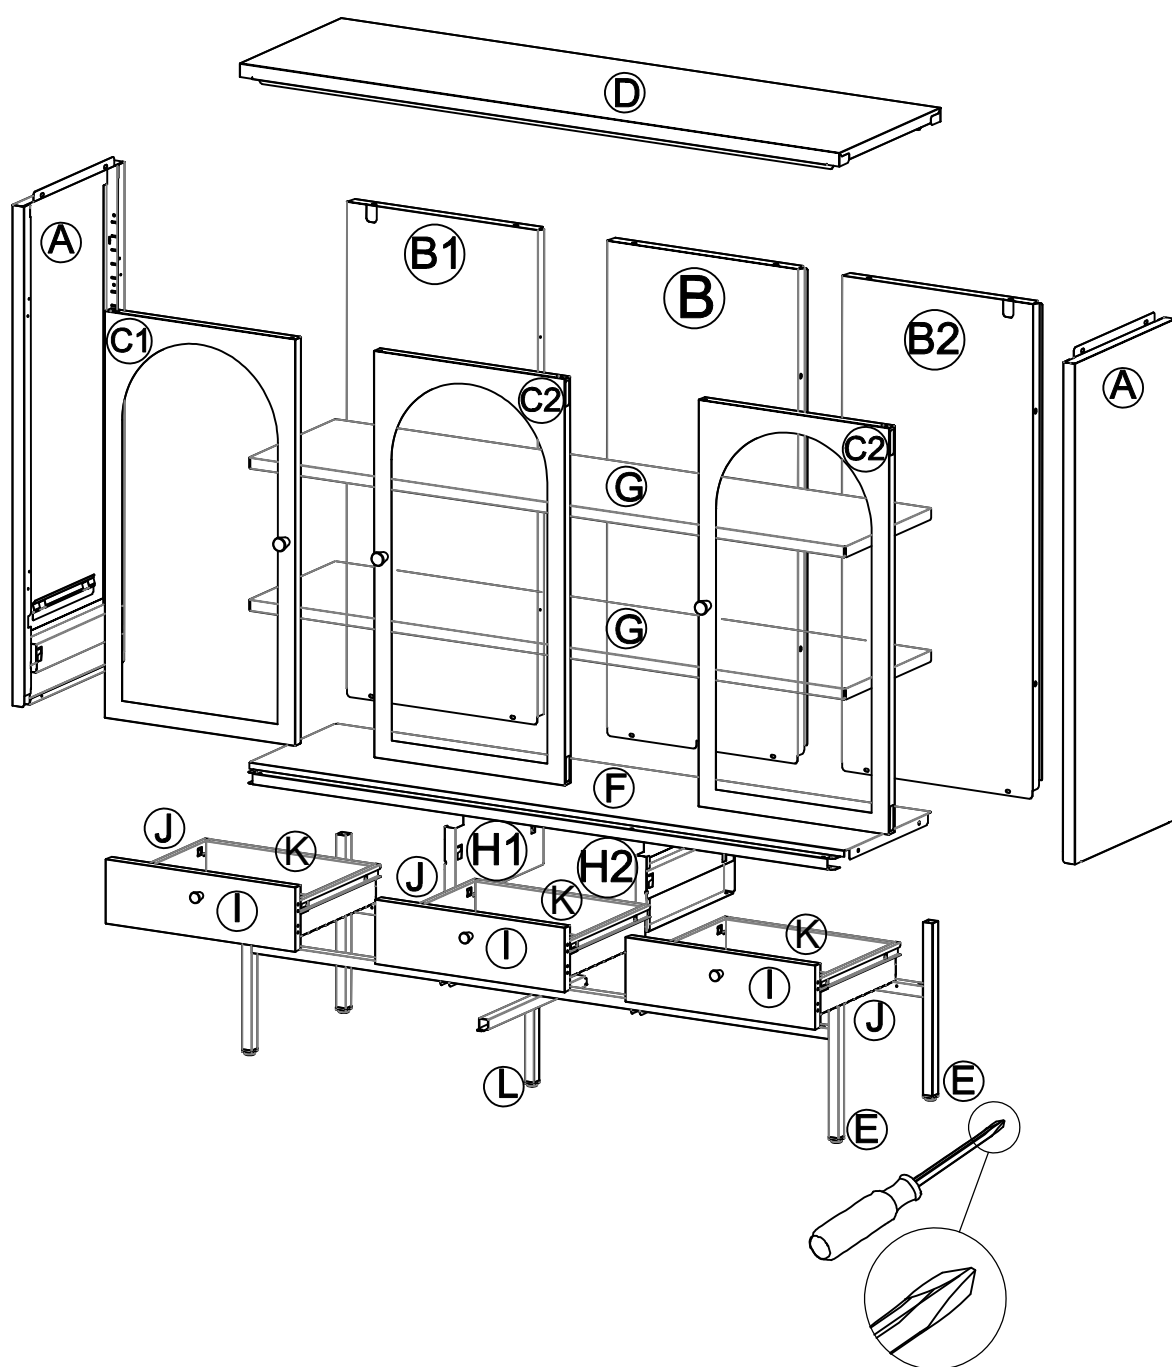

| Hardware | Ctn No. |
|----------|---------|
|          | 1       |





| No. | Size          | Qty |
|-----|---------------|-----|
| A   | 918x350x24mm  | 2   |
| B   | 890x393x23mm  | 1   |
| B1  | 890x385x23mm  | 1   |
| B2  | 890x385x23mm  | 1   |
| C1  | 731x382x20mm  | 1   |
| C2  | 731x382x20mm  | 2   |
| D   | 1202x352x38mm | 1   |
| E   | 1197x320x20mm | 2   |

| No. | Size           | Qty |
|-----|----------------|-----|
| F   | 1196x323x32mm  | 1   |
| G   | 1196x300x20mm  | 2   |
| H1  | 306x171x22mm   | 1   |
| H2  | 306x171x22mm   | 1   |
| I   | 381x116.5x20mm | 3   |
| J   | 333x320x78mm   | 3   |
| K   | 332x78x15mm    | 3   |
| L   | 338x200x20mm   | 1   |

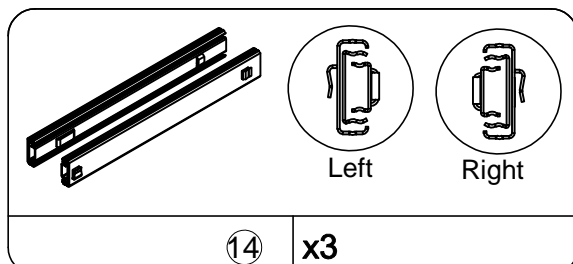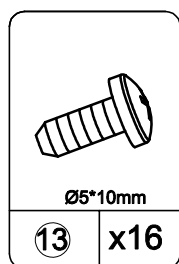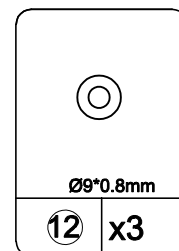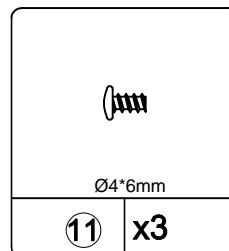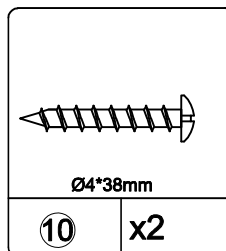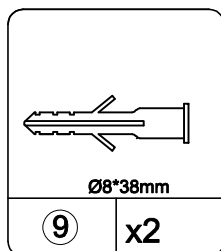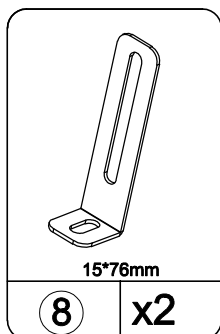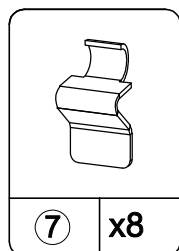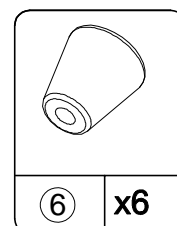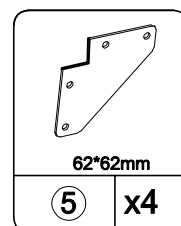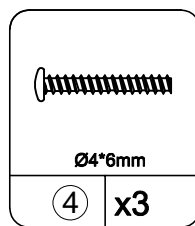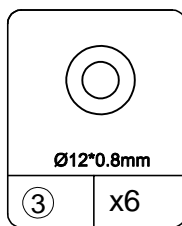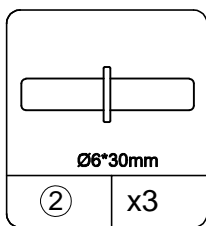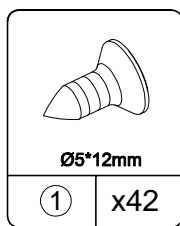




(1) - Attach (A) & (L) to (E) as below shown.

Make sure the holes are nearest to outside otherwise will affect door assembling.

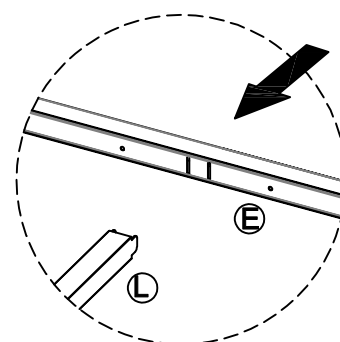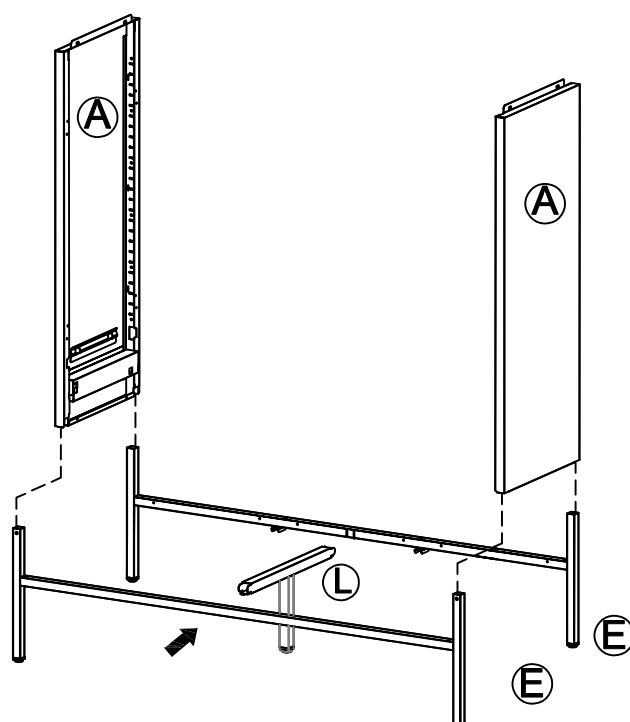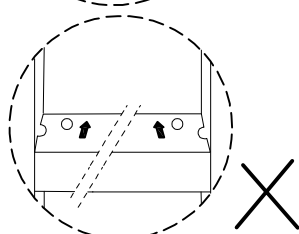
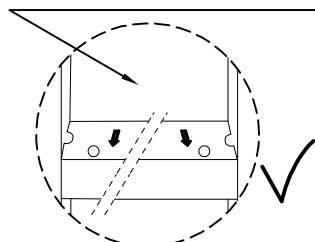


The plastic foot cover face down




(2) - Attach ⑤ to (A) & (E) as below shown.

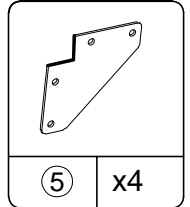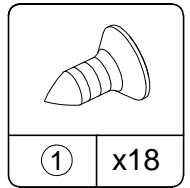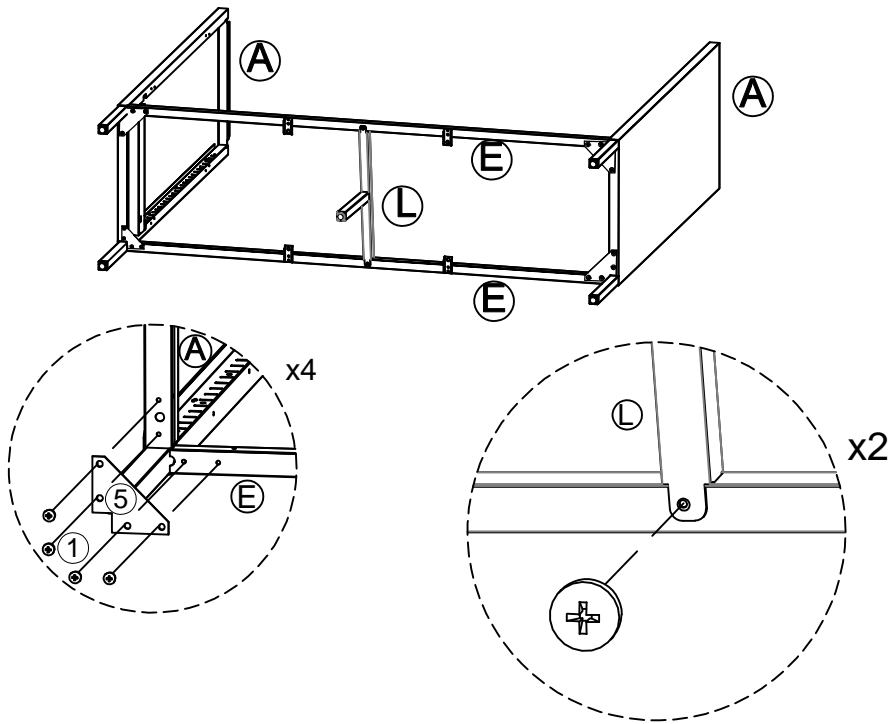




(3) - Attach (B) to (A) as below shown.

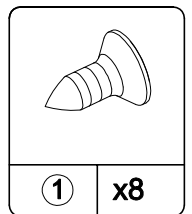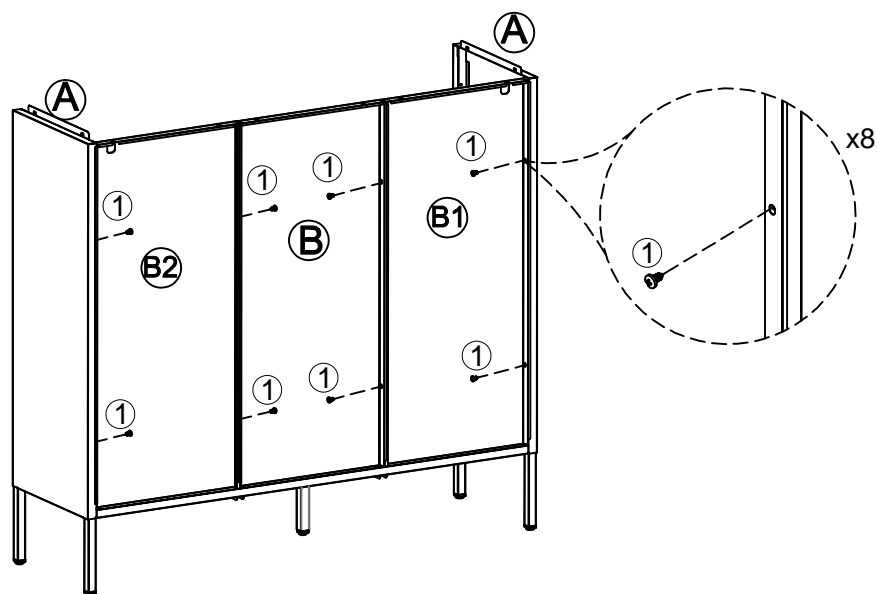


(4) - Attach (B) to (A) & (E) as below shown.

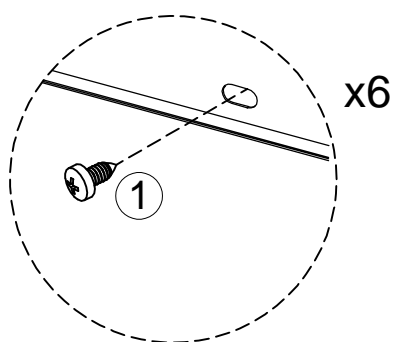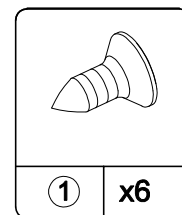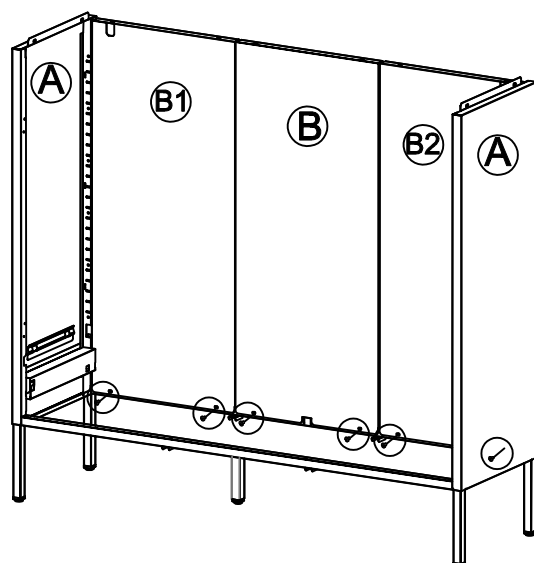


(5) - Attach (D) to (A) as below shown.

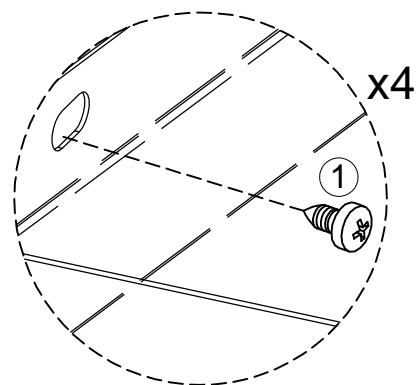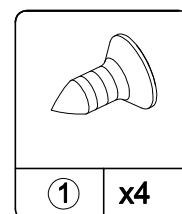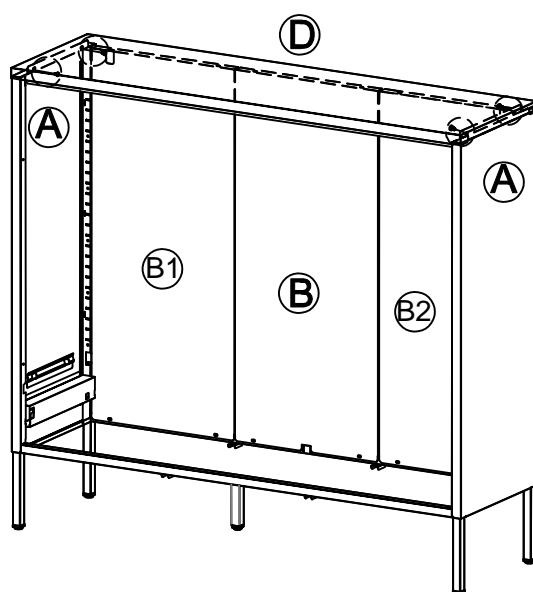



(6) - Attach (D) to (B) as below shown.

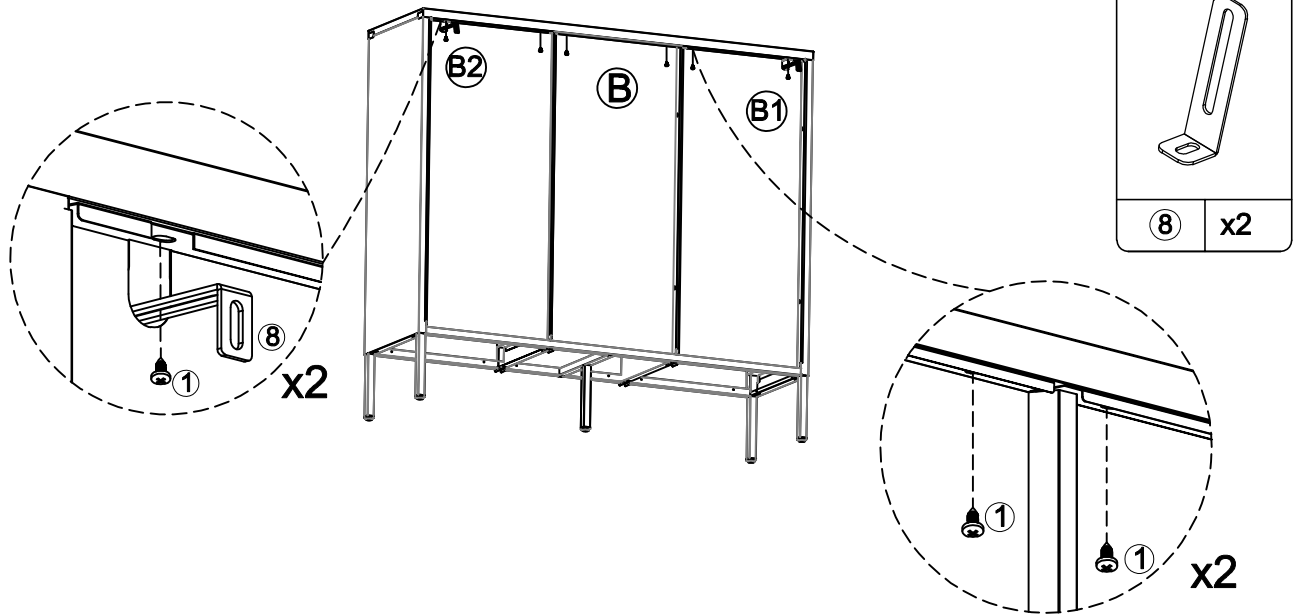



(7) - Attach (F) to (A) & (B) as below shown.

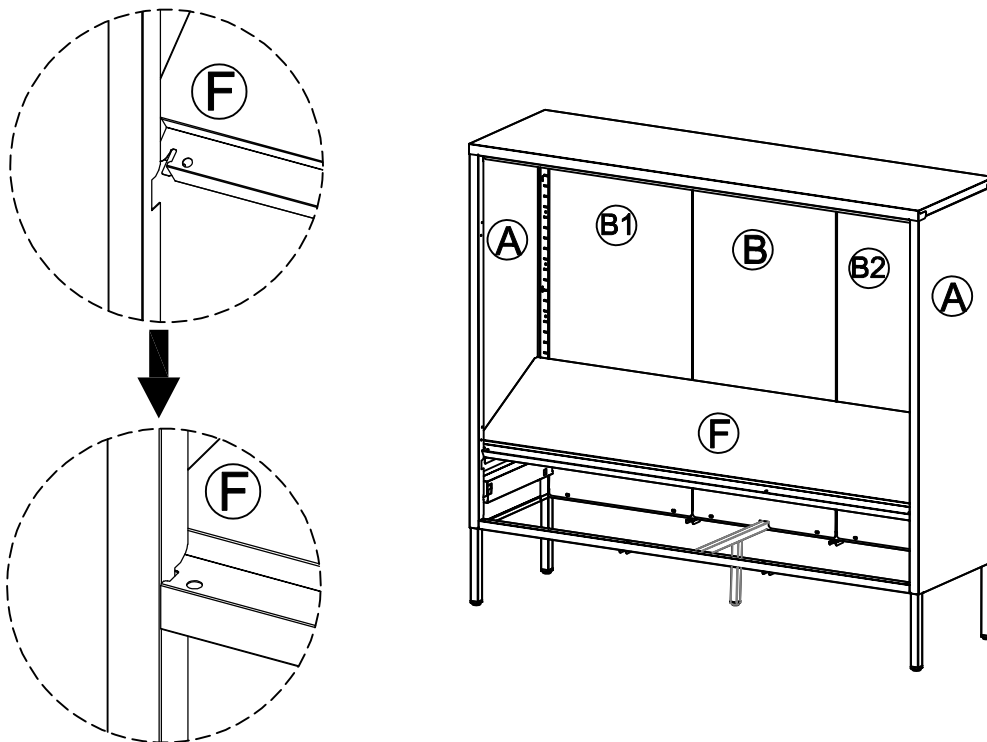


(8) - Attach (H1) & (H2) to (A) & (B) as below shown.

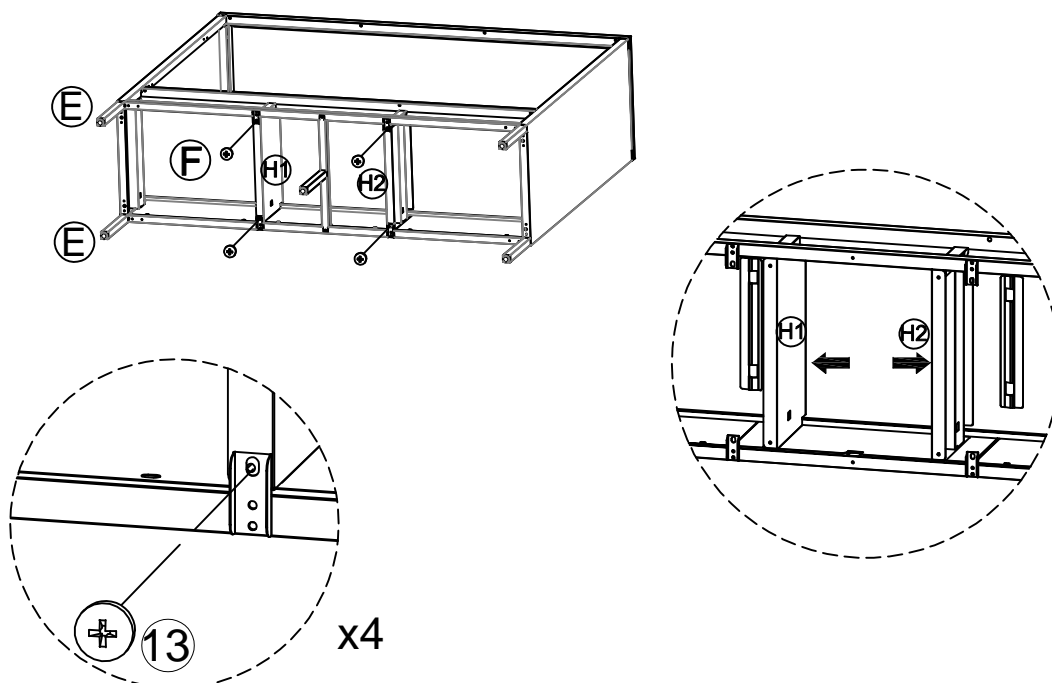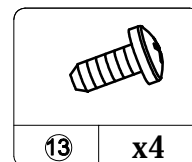


(9) - Attach Drawer Slide Rail Shell to (A) as below shown.

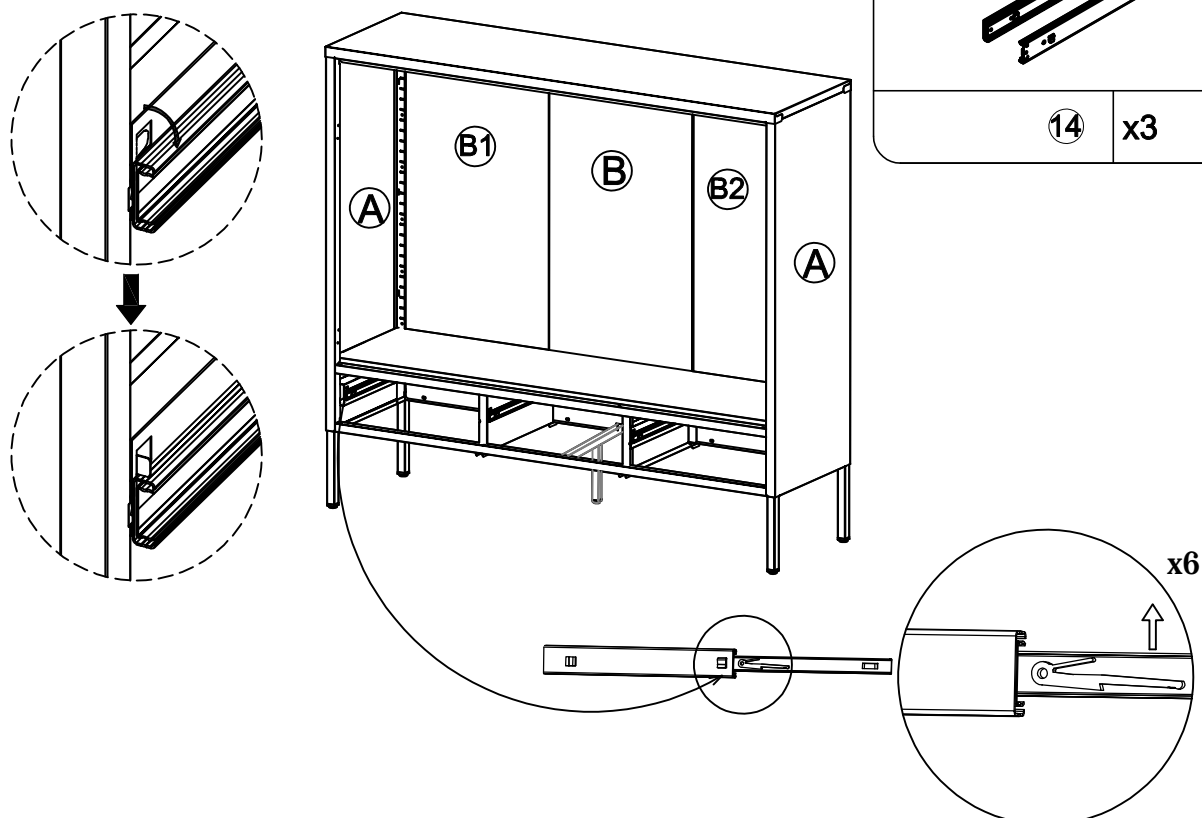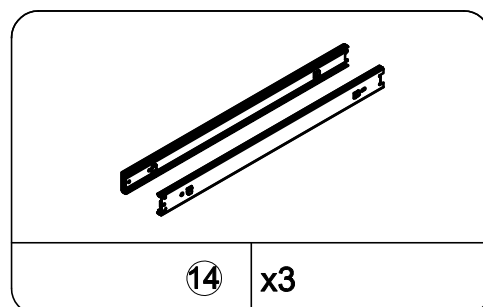

(10)- Attach (6) to (C) & (H) as below shown.

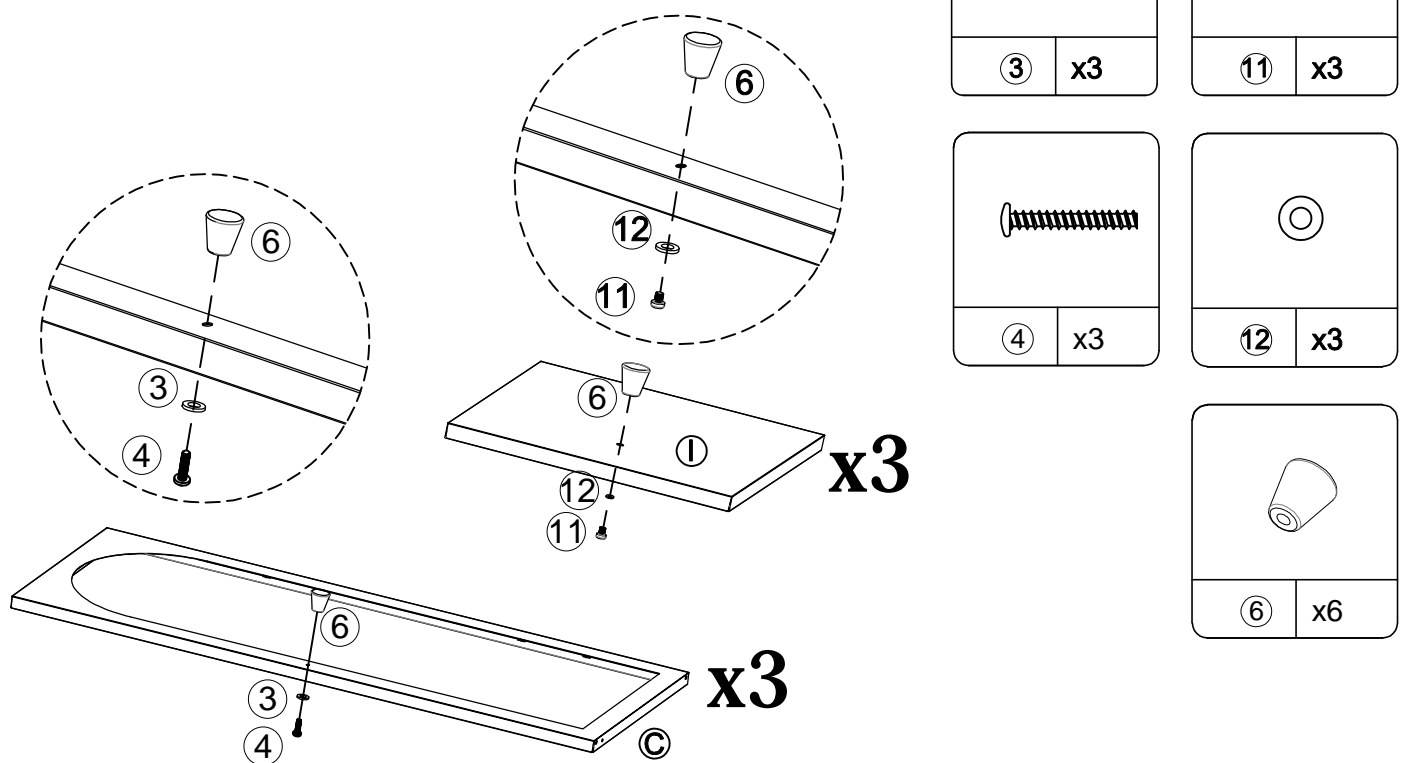


(11)-Attach (I) & (J) to (H) as below shown.

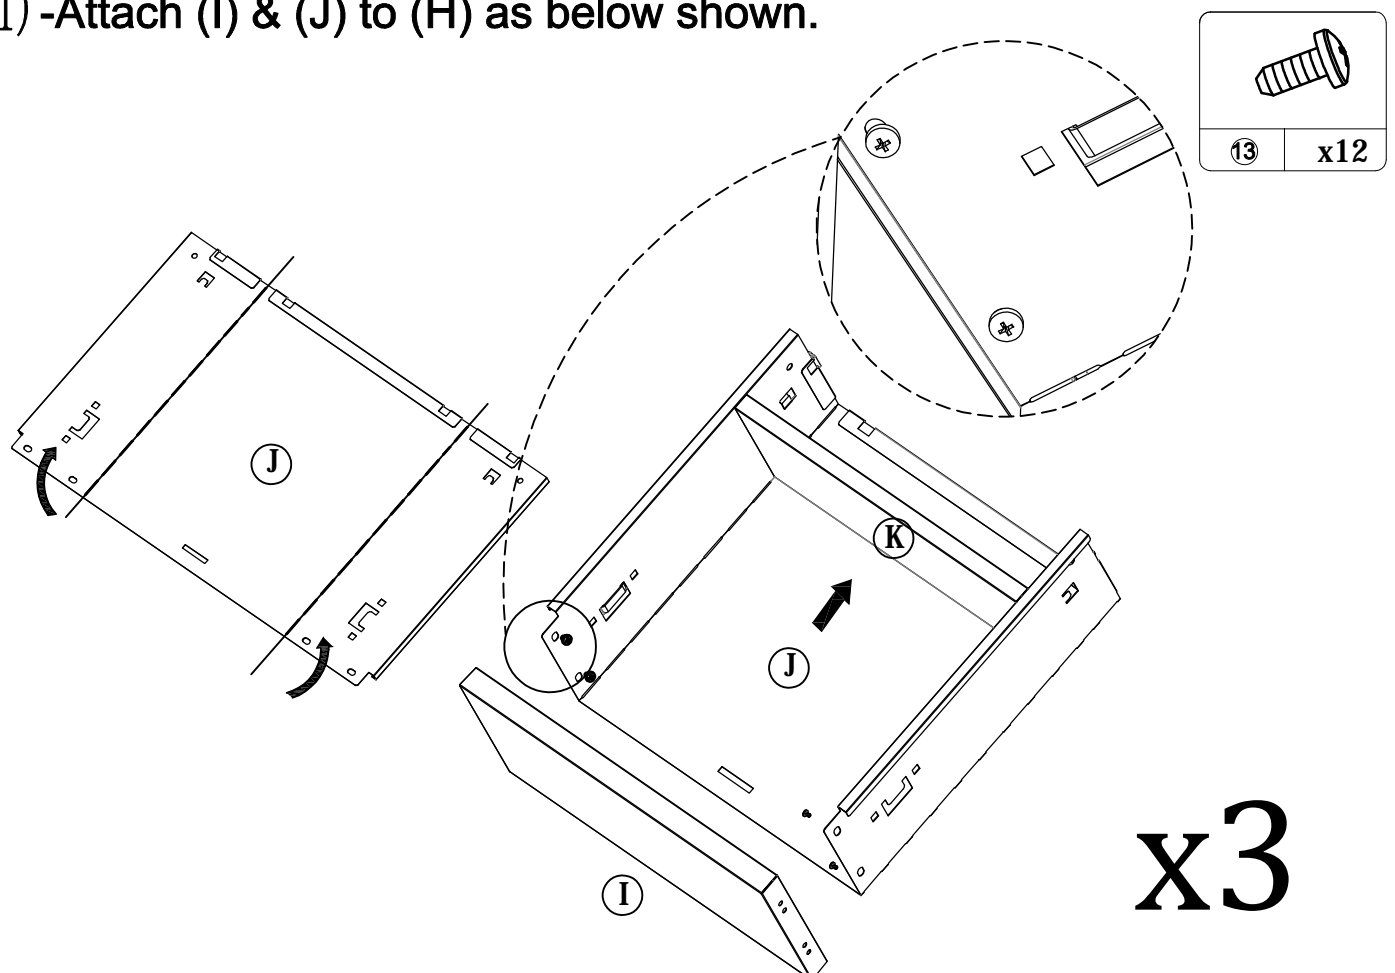






(12) -Attach Inner rail of Drawer Slide to Drawer as below shown.

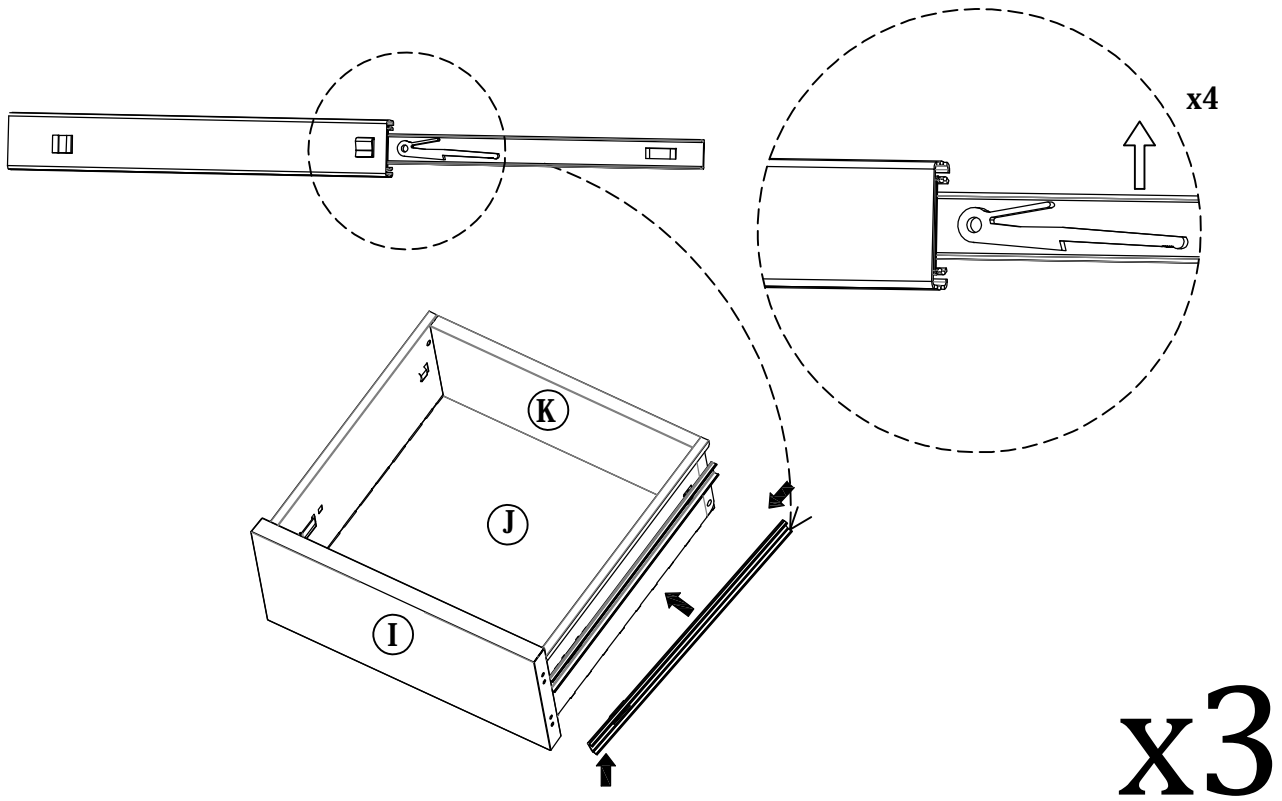




(13) -Attach Drawer to pre-assembled unit as below shown.

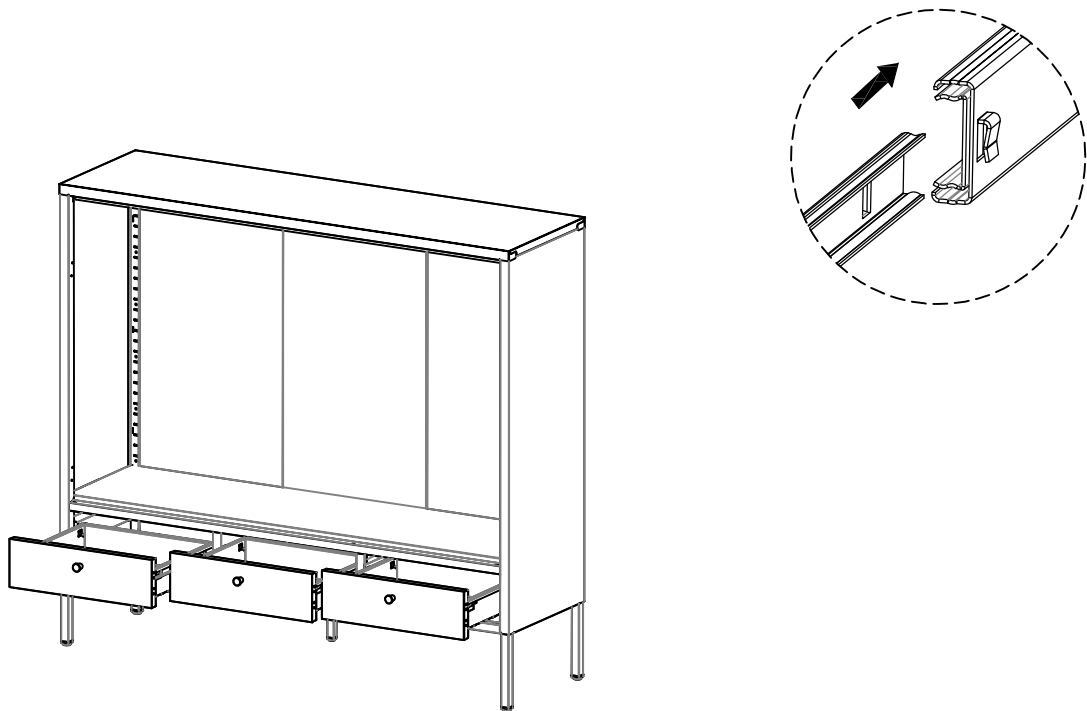

(14) Attach (G) to pre-assembled unit as below shown.

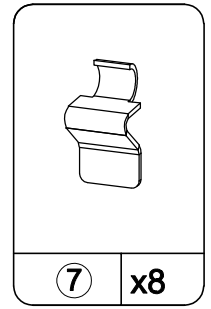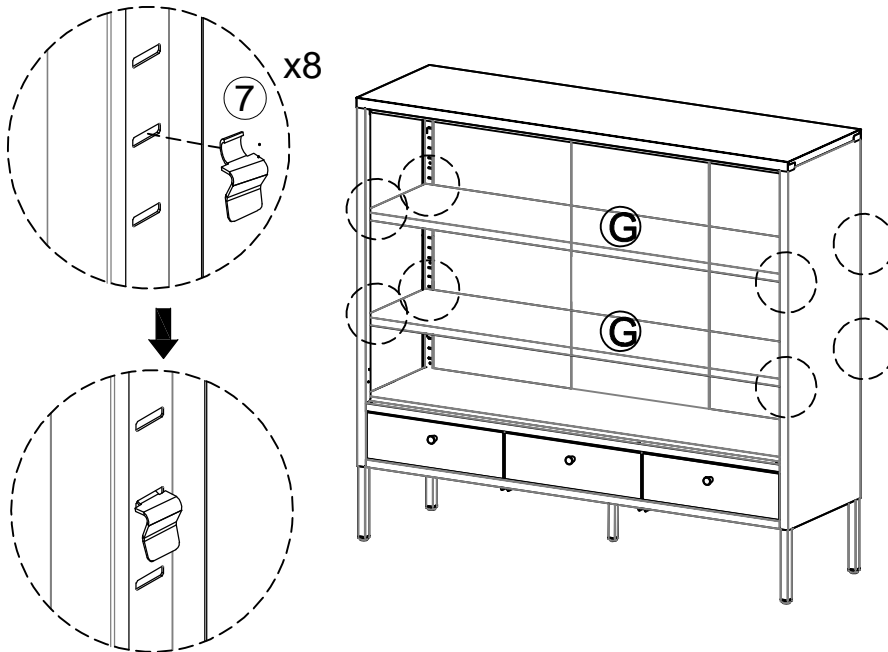


(15) -Attach (2) & (3) to pre-assembled unit as below shown.

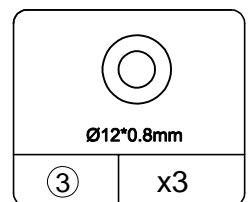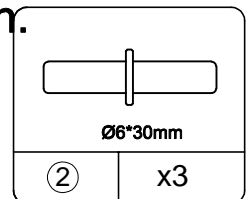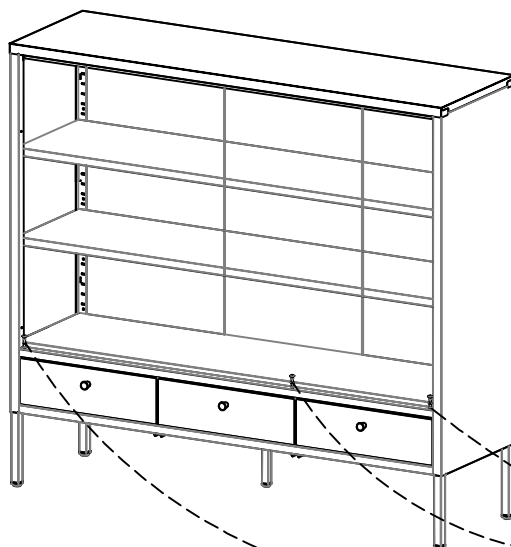


x3

(16) - Attach (C) to pre-assembled unit as below shown.

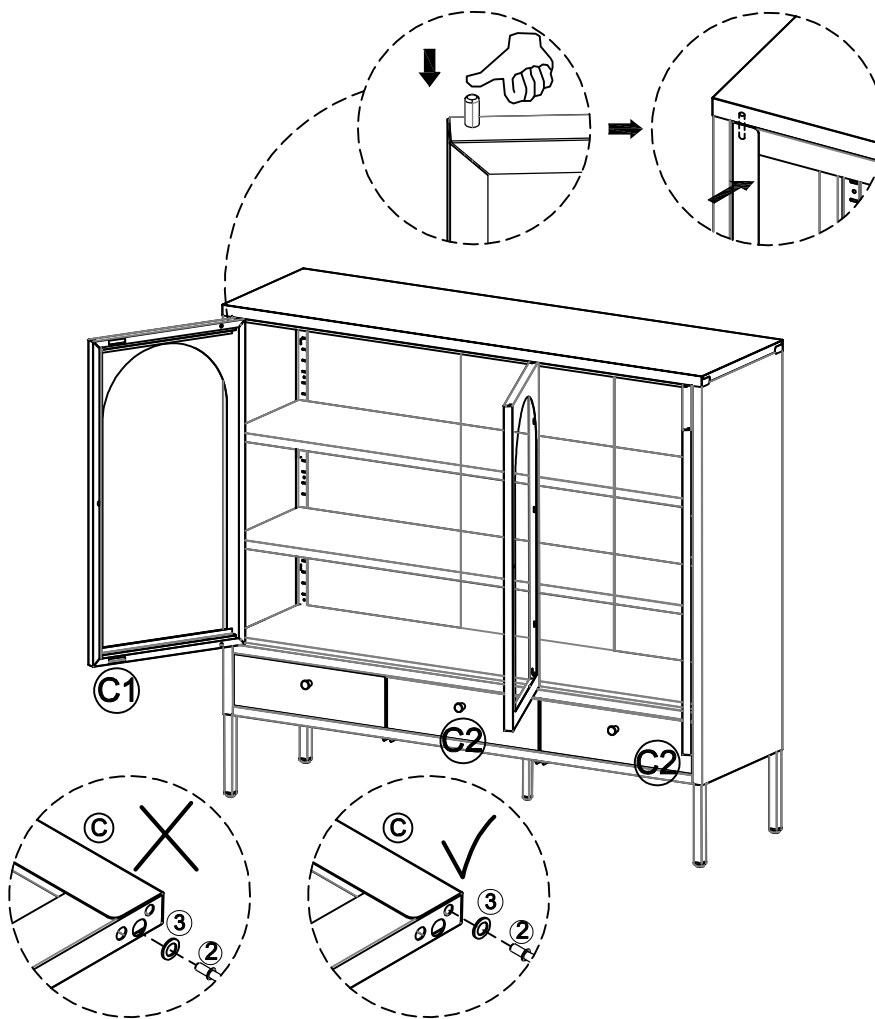


#### door assembly process

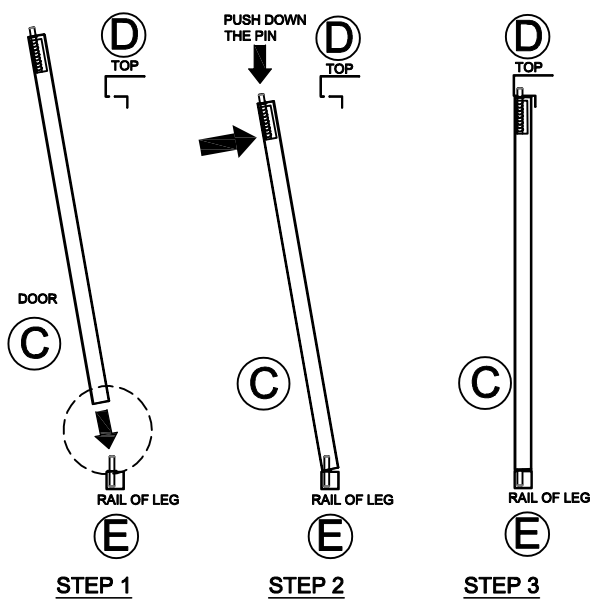


#### door dis-assembly process

##### WARNING

This step is just for taking door off !

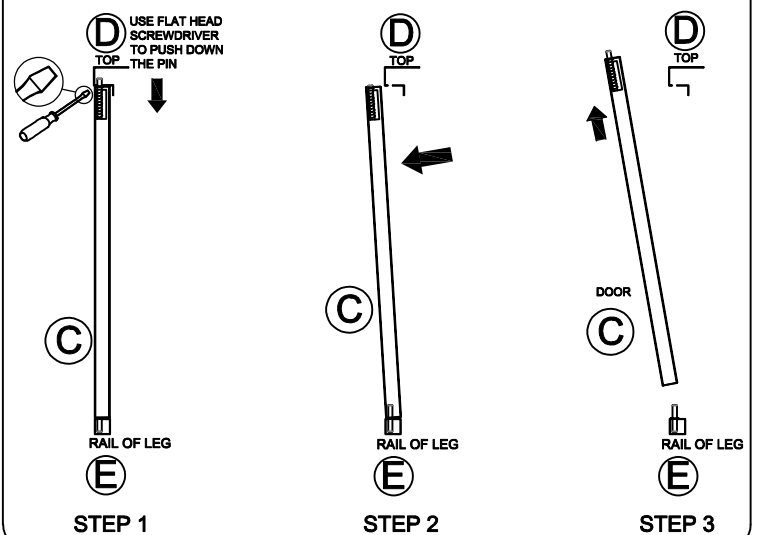

(17)

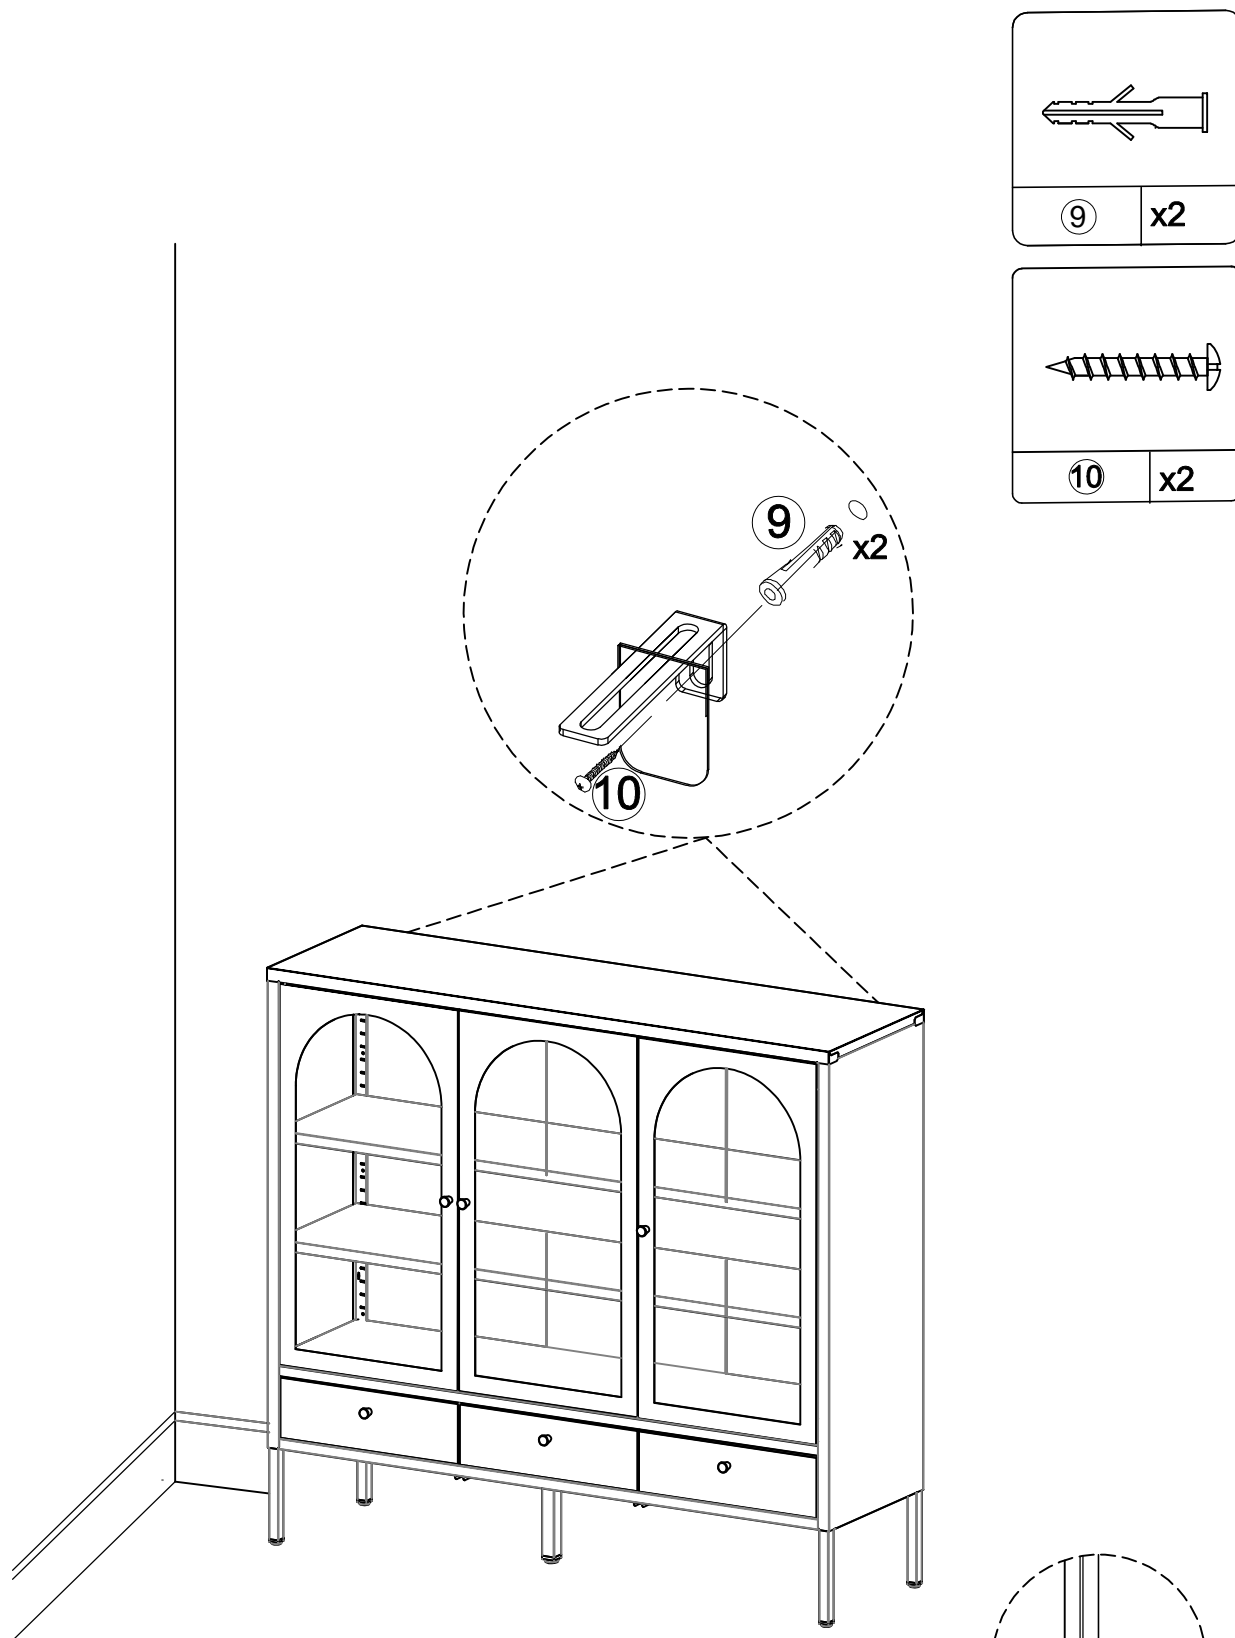

Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.