



Multifunctional storage

Assembly Instructions

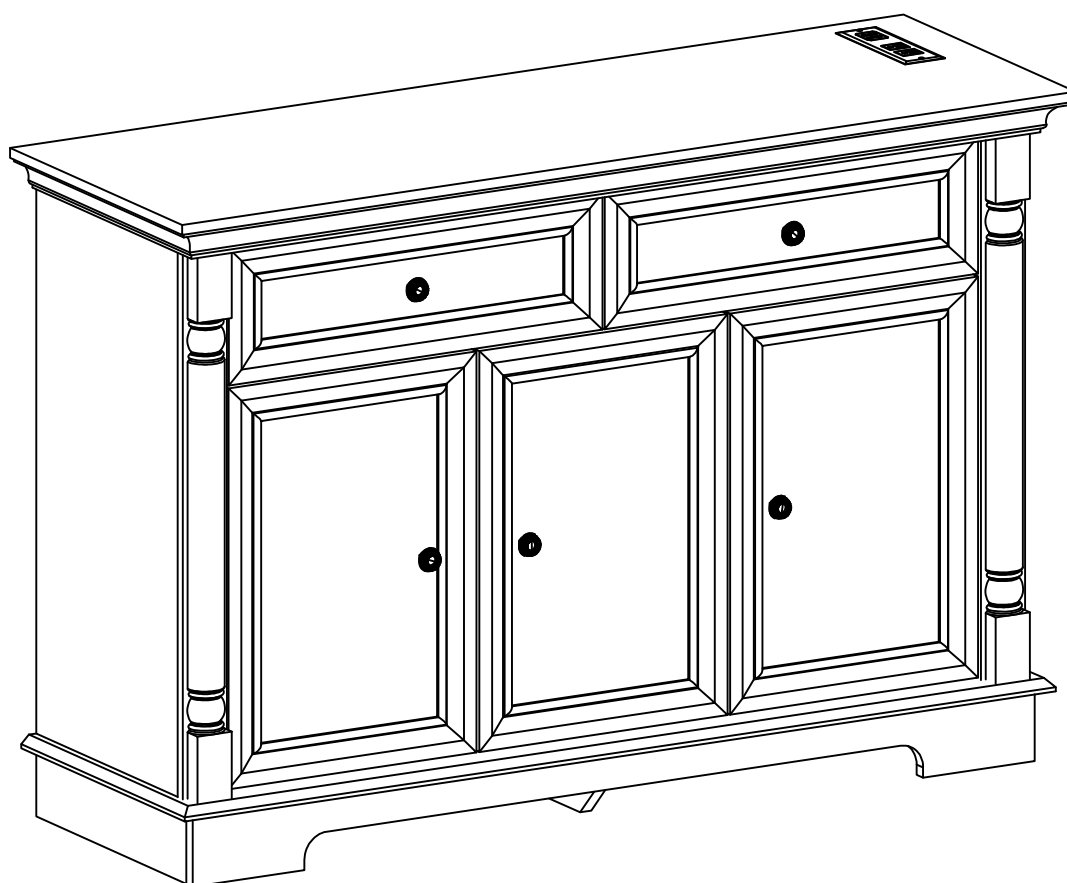


Parts List

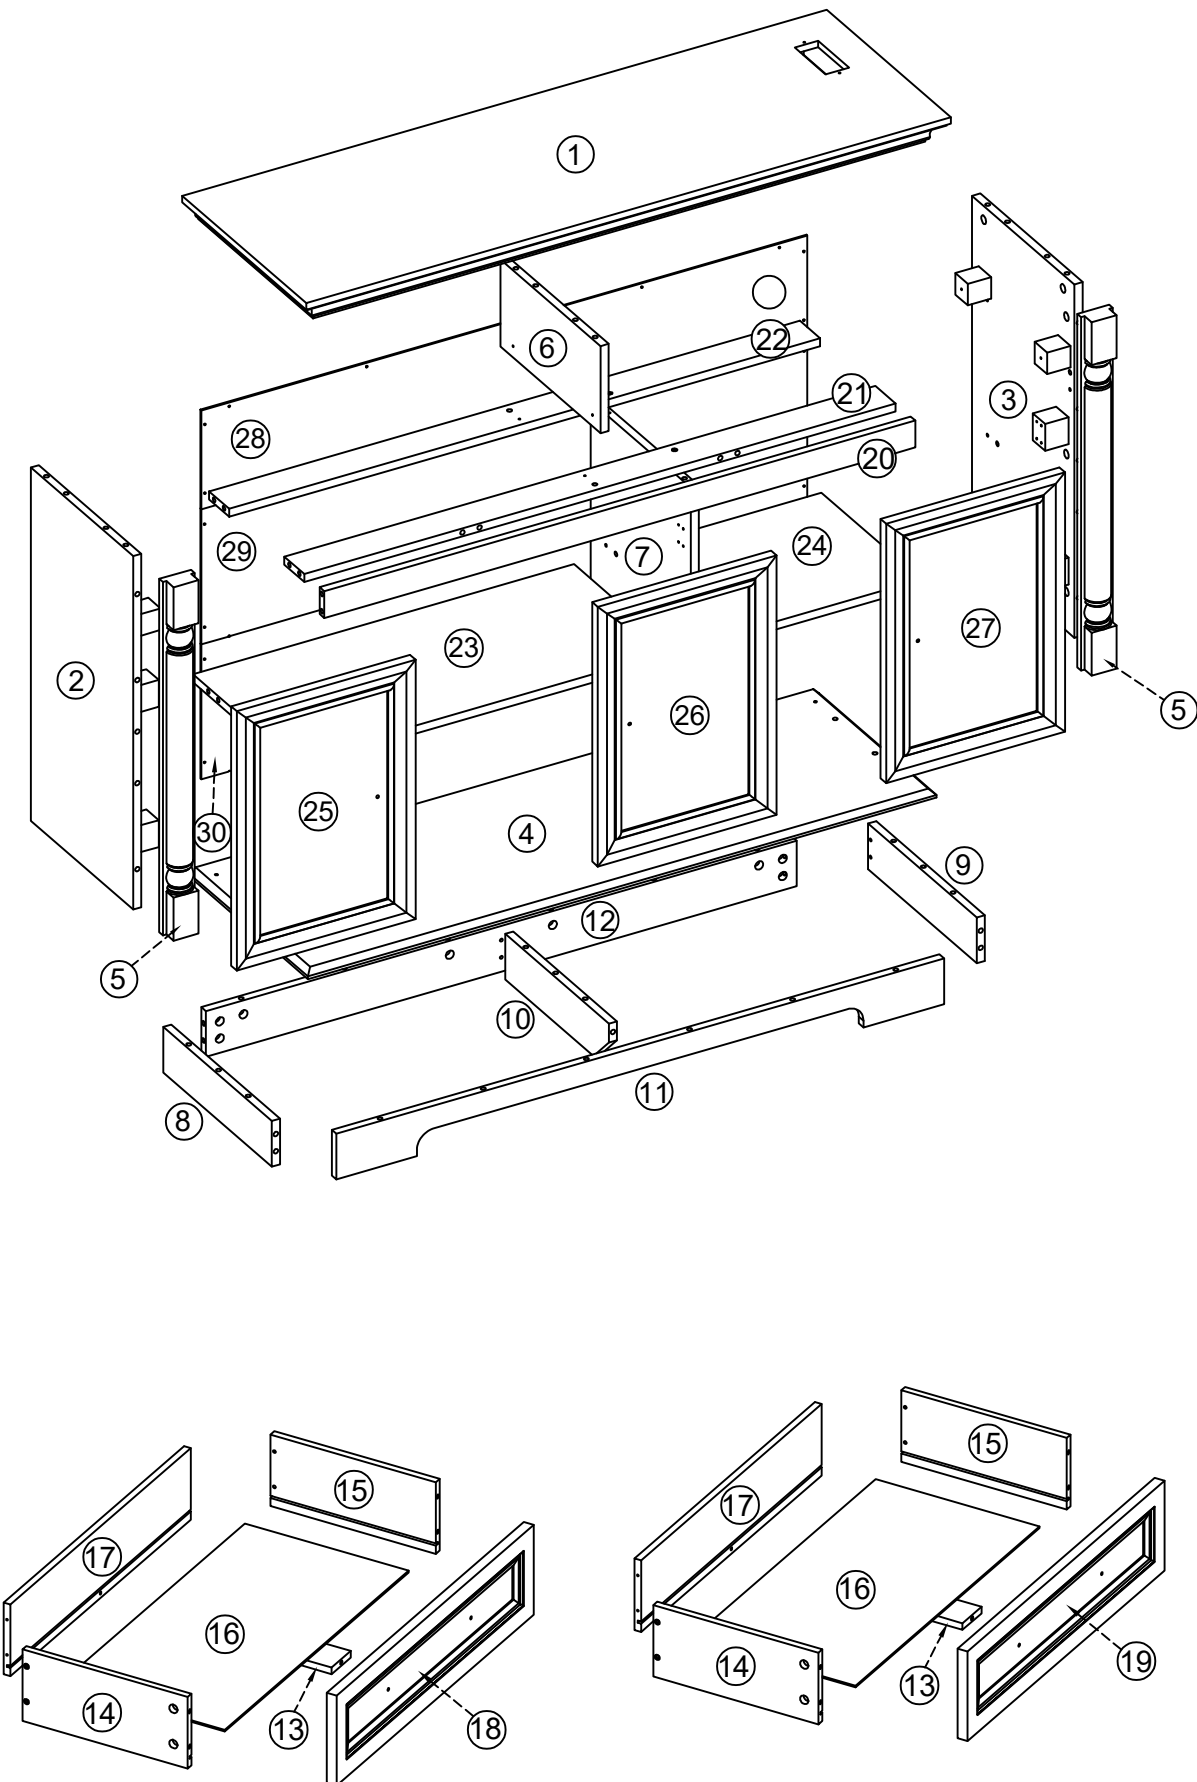


X1

X1

Hardware

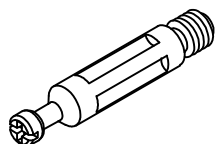


A x 64sets




Ø15X9.5MM

B x 64sets

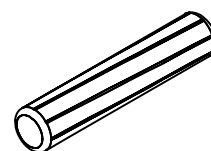


Ø8 x 30MM

C x 46pcs

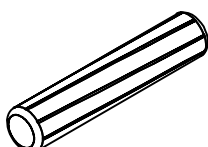


Ø6 x 30MM

D x 6pcs

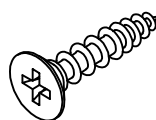


3.5 x 12MM

E x 56pcs

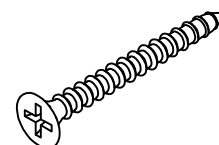


3.5 x 35MM

F x22pcs

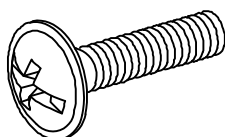


M4 x 16MM

G x 5pcs

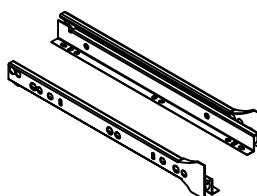


300MM

H x 2sets

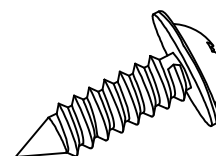


3.5 x 12MM


I x36pcs

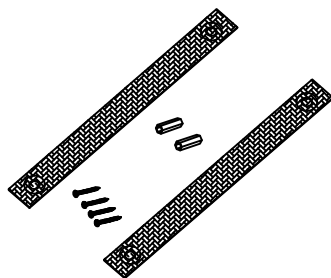


J x 1sets

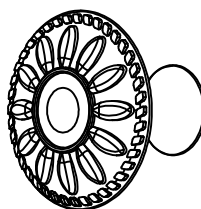


K x 5sets

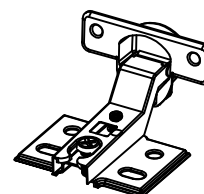


(L) x 4sets

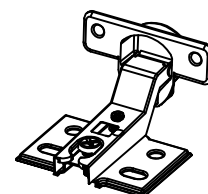

(M) x 2sets






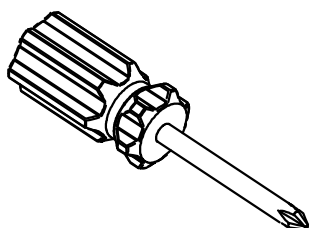









N x 1sets










O x 1sets







ASSEMBLY MATERIAL

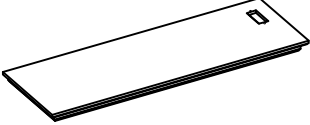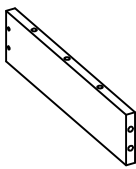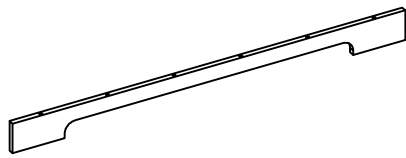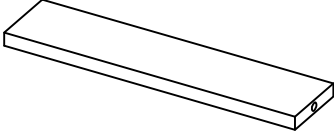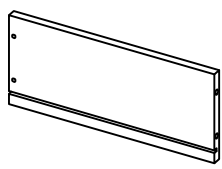Item no.	Reference Image	Oty.
①		X1
③		X1
⑤		X2
⑦		X1
⑨		X1
⑪		X1
⑬		X2
⑮		X2

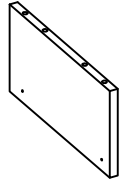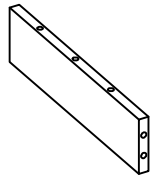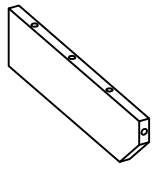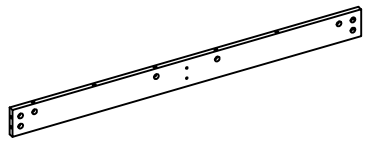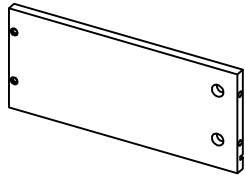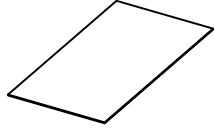Item no.	Reference Image	Oty.
②		X1
④		X1
⑥		X1
⑧		X1
⑩		X1
⑫		X1
⑭		X2
⑯		X2

ASSEMBLY MATERIAL

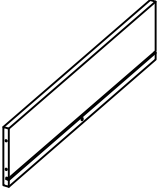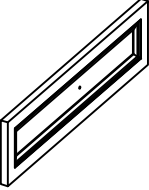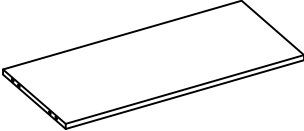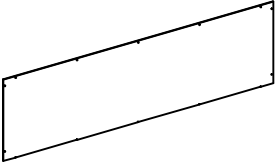Item no.	Reference Image	Qty.
17		X2
19		X1
21		X1
23		X1
25		X1
27		X1
29		X1

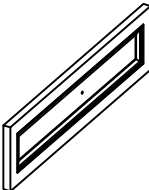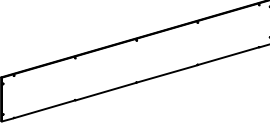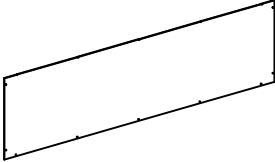Item no.	Reference Image	Qty.
18		X1
20		X1
22		X1
24		X1
26		X1
28		X1
30		X1


Step 1

(E)

Ø3.5*12mm
4X



(H)

300MM CL
2X

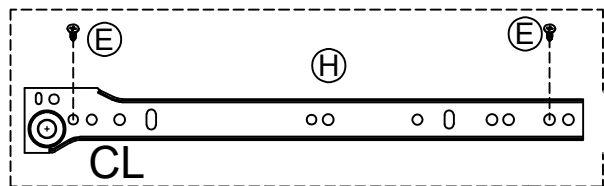


Install first rail on the left side of board.

Step:1







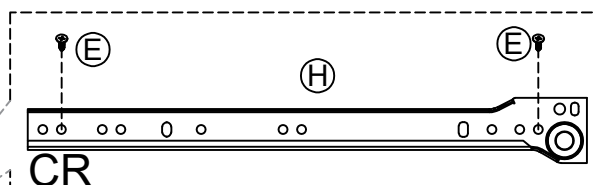
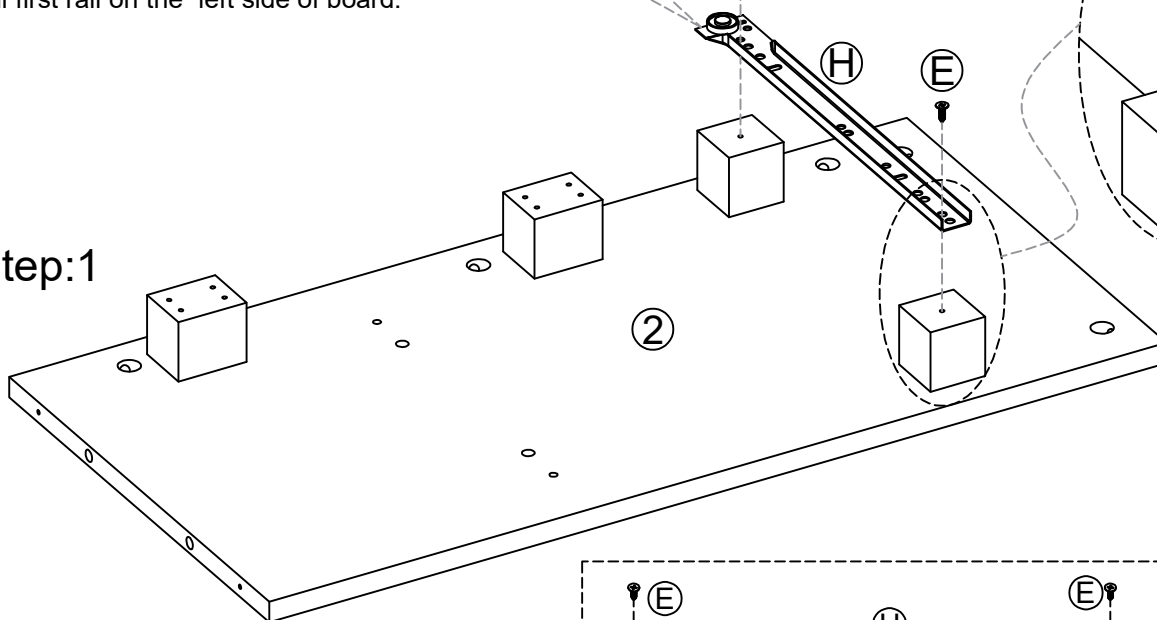


Install first rail on the right side of board.

Step:2

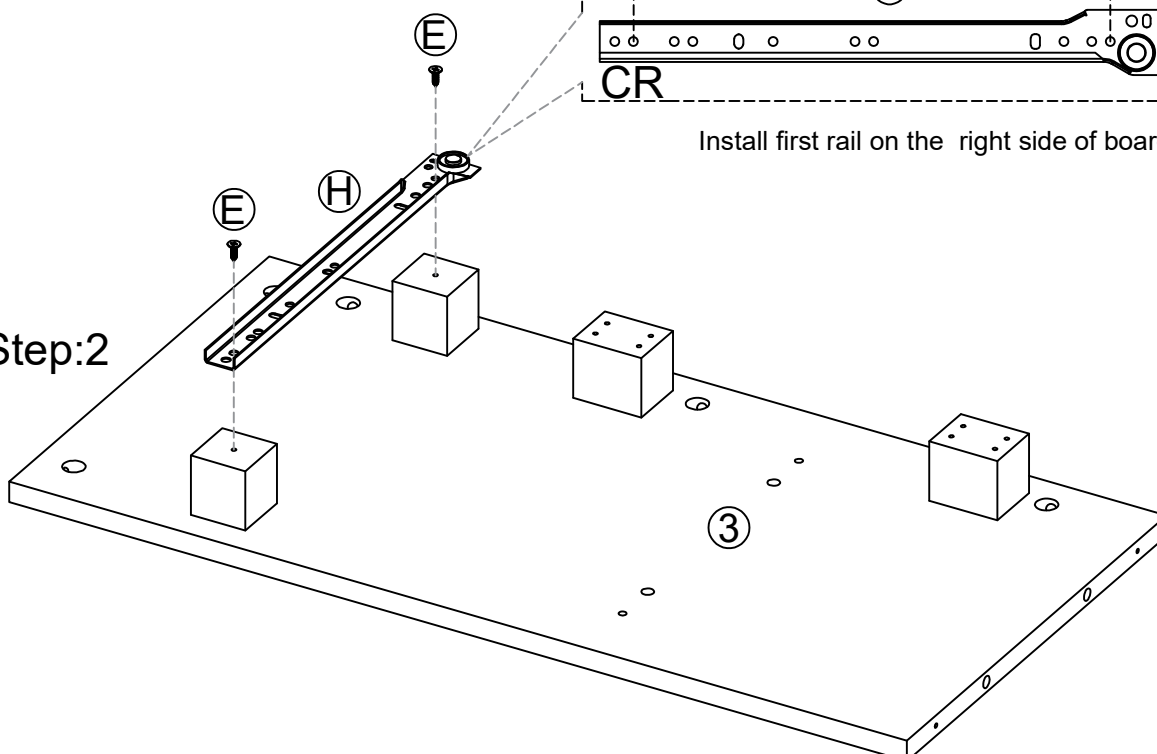


Step 2

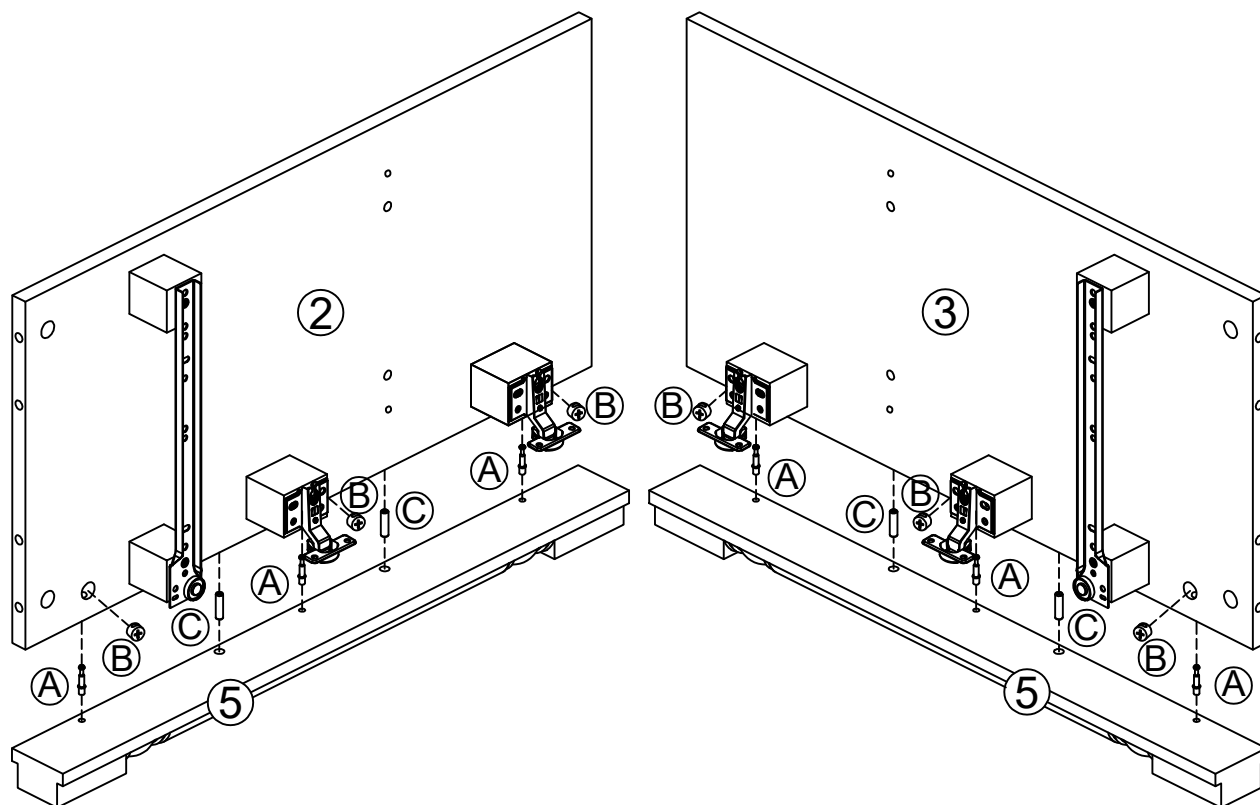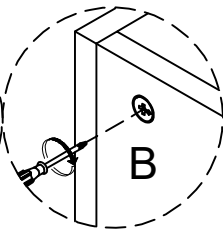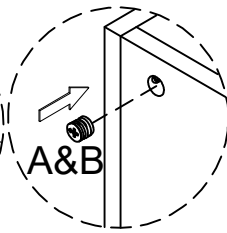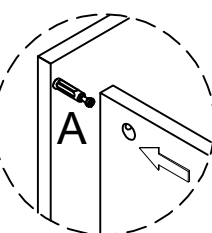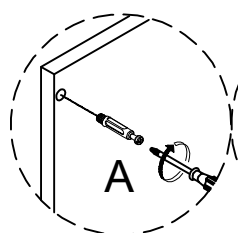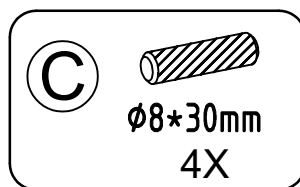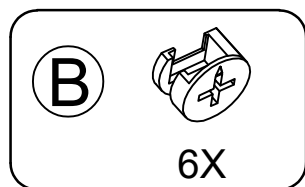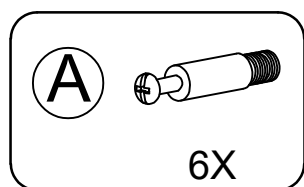

Step 3

(H)




HX1

(E)




Ø3.5*12mm
2X

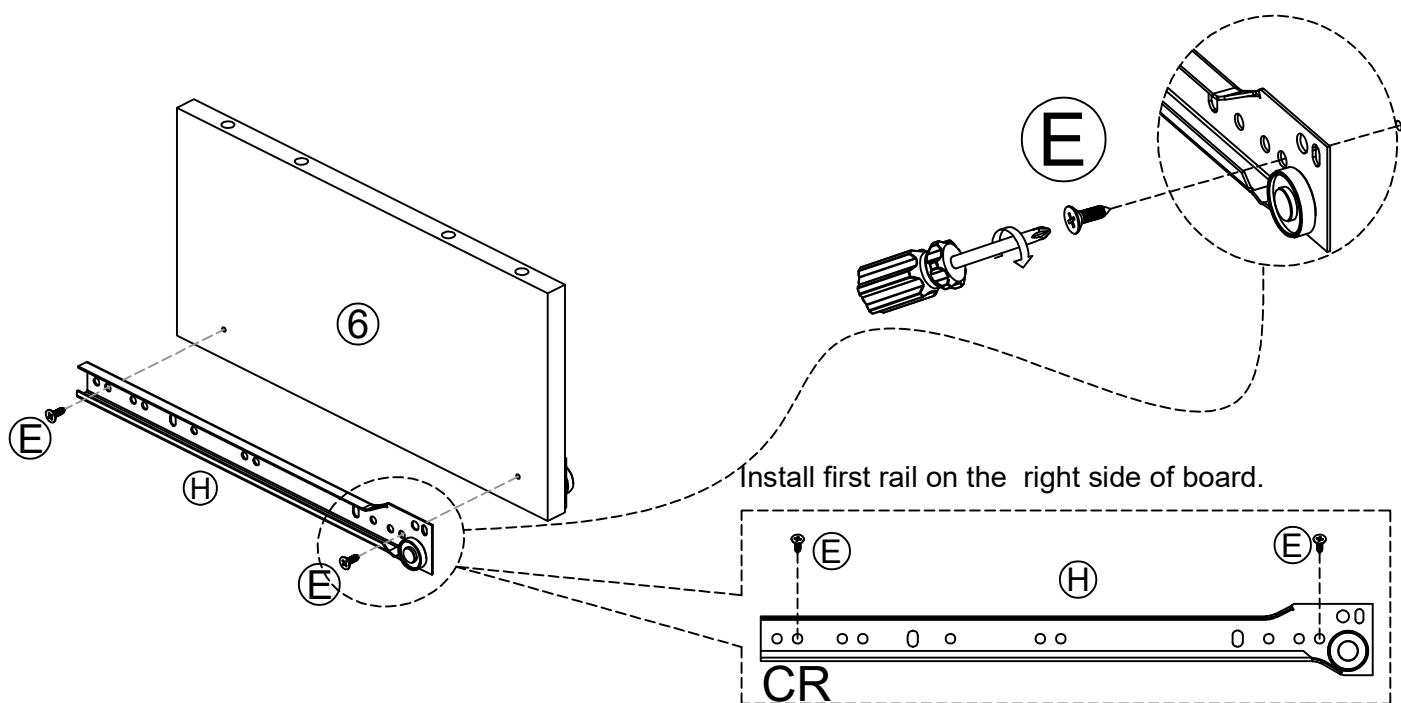

Step 4

(H)




HX1





(E)






Ø3.5*12mm
2X

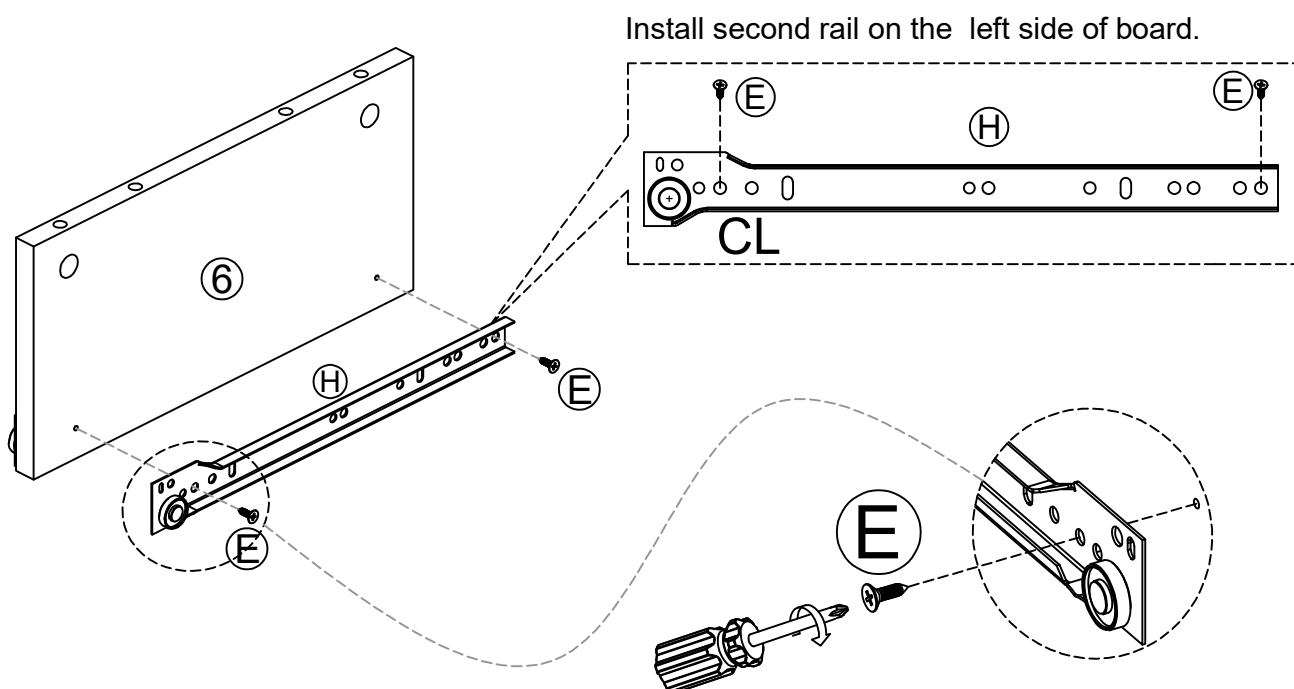









Step 5

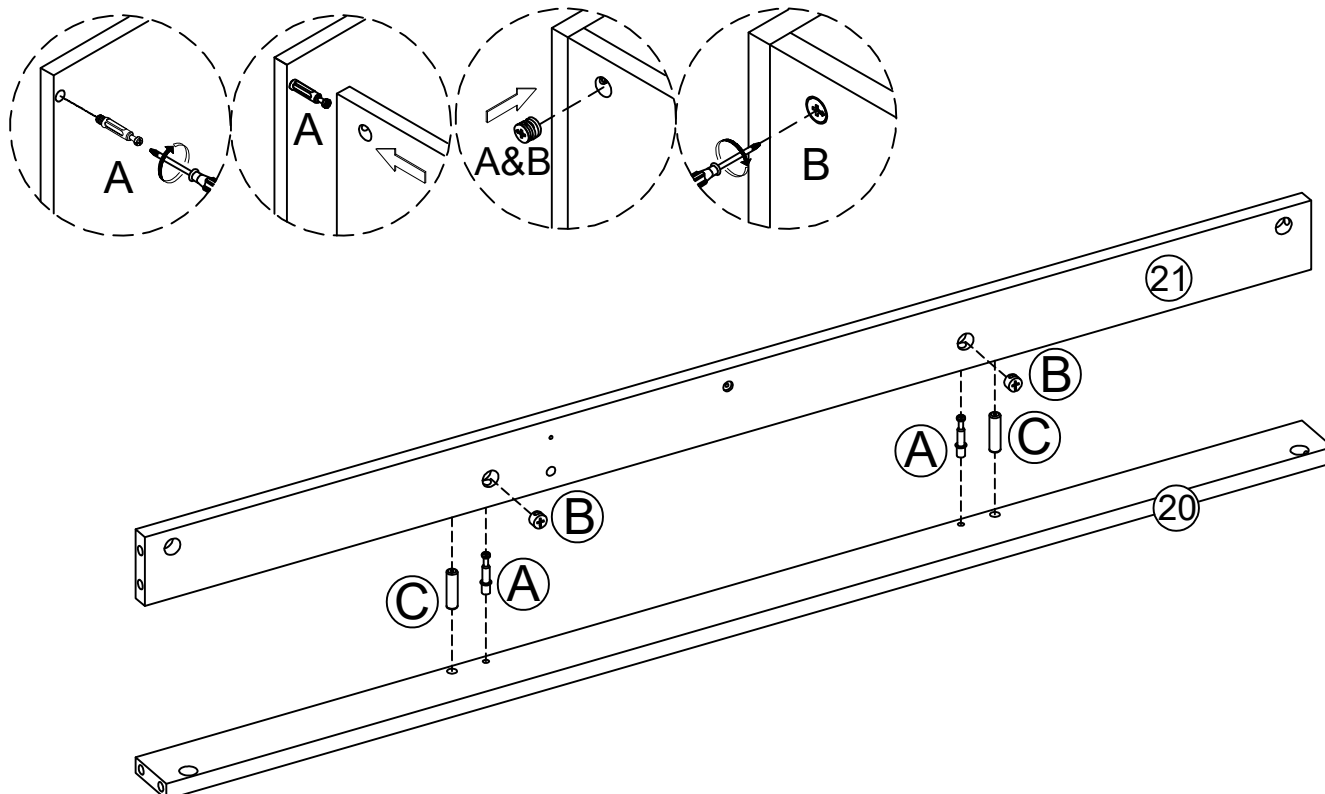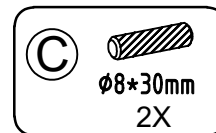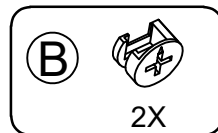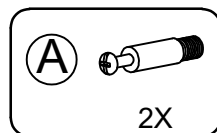









Step 6

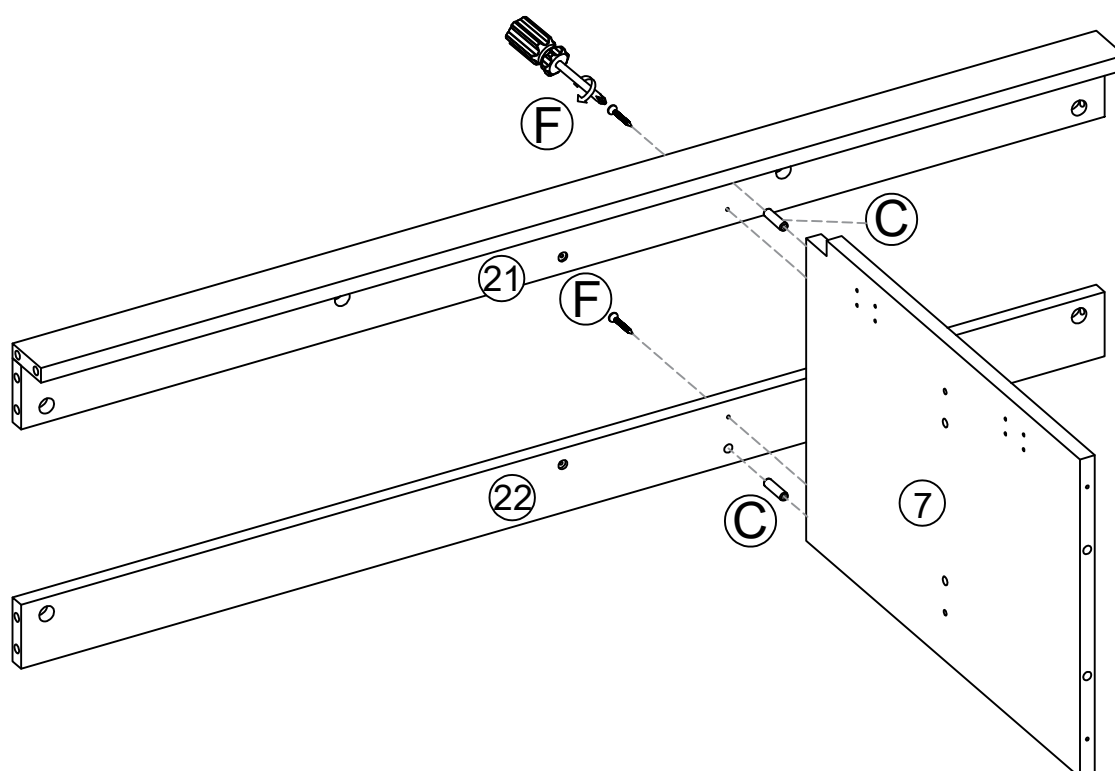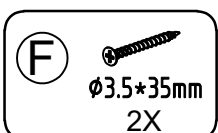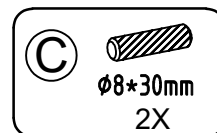




Step 7

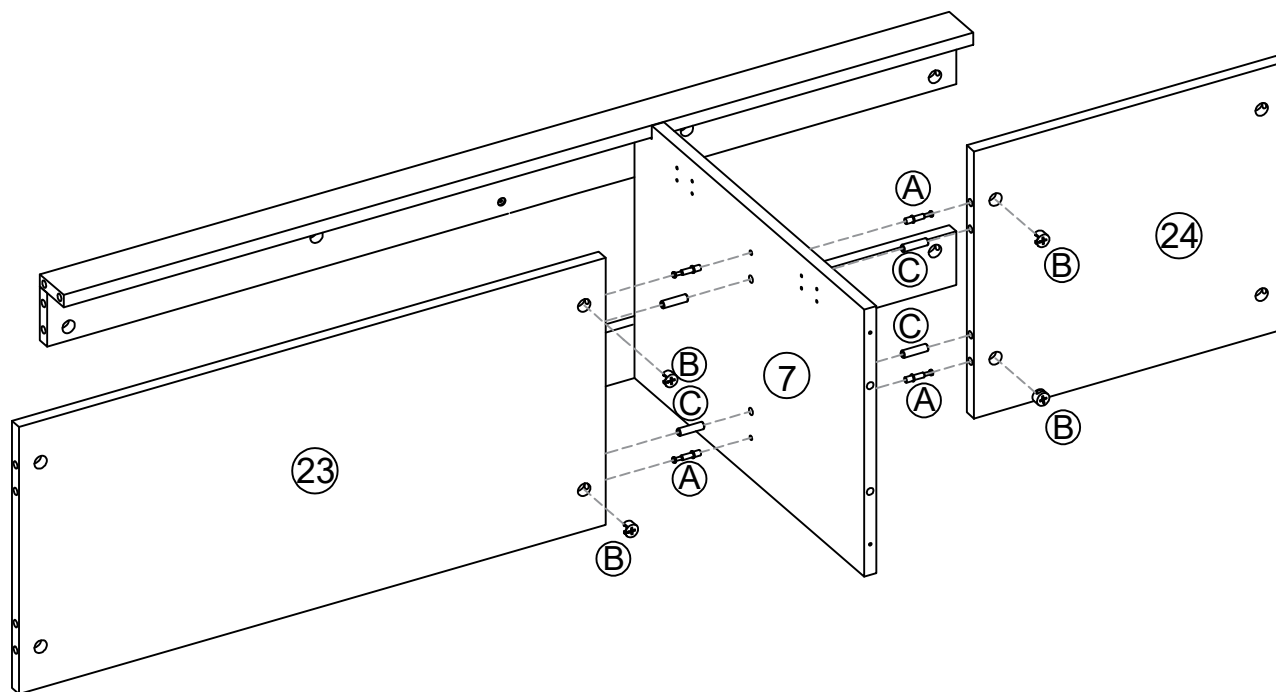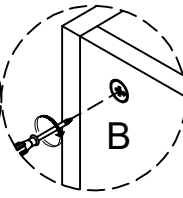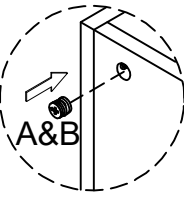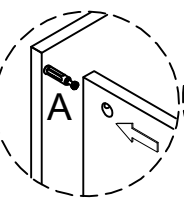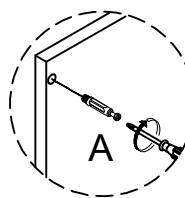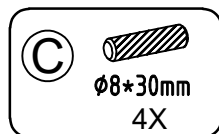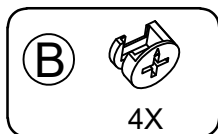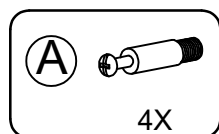





Step 8

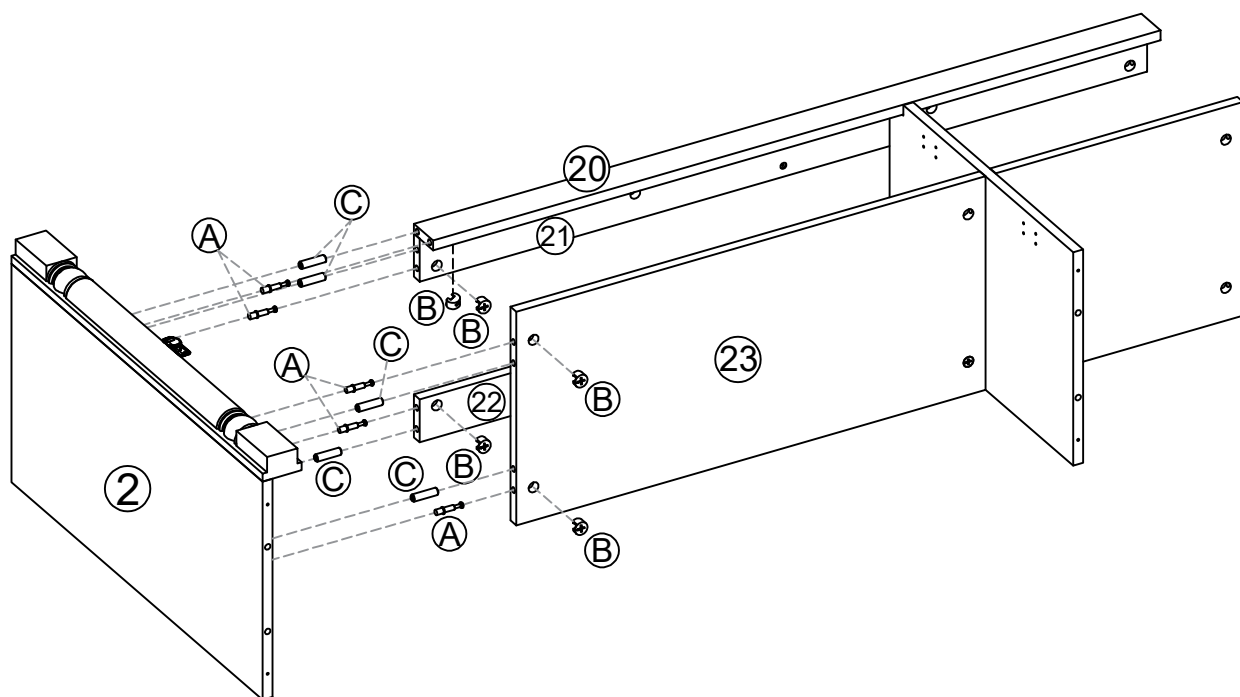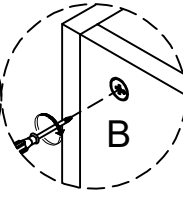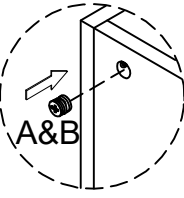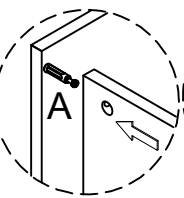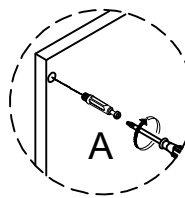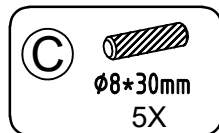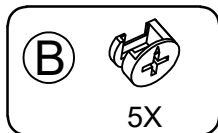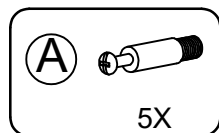





Step 9

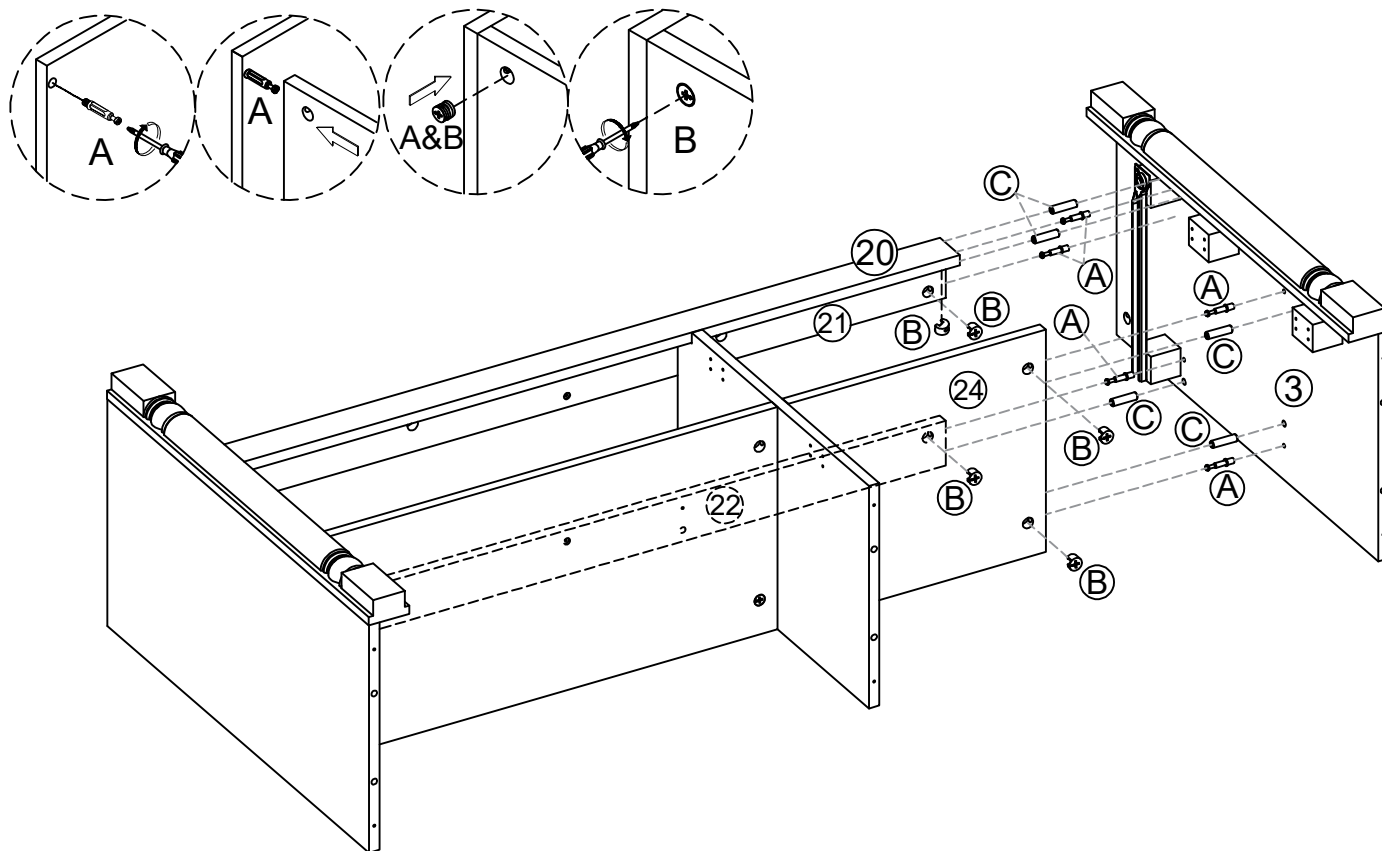




Step 10

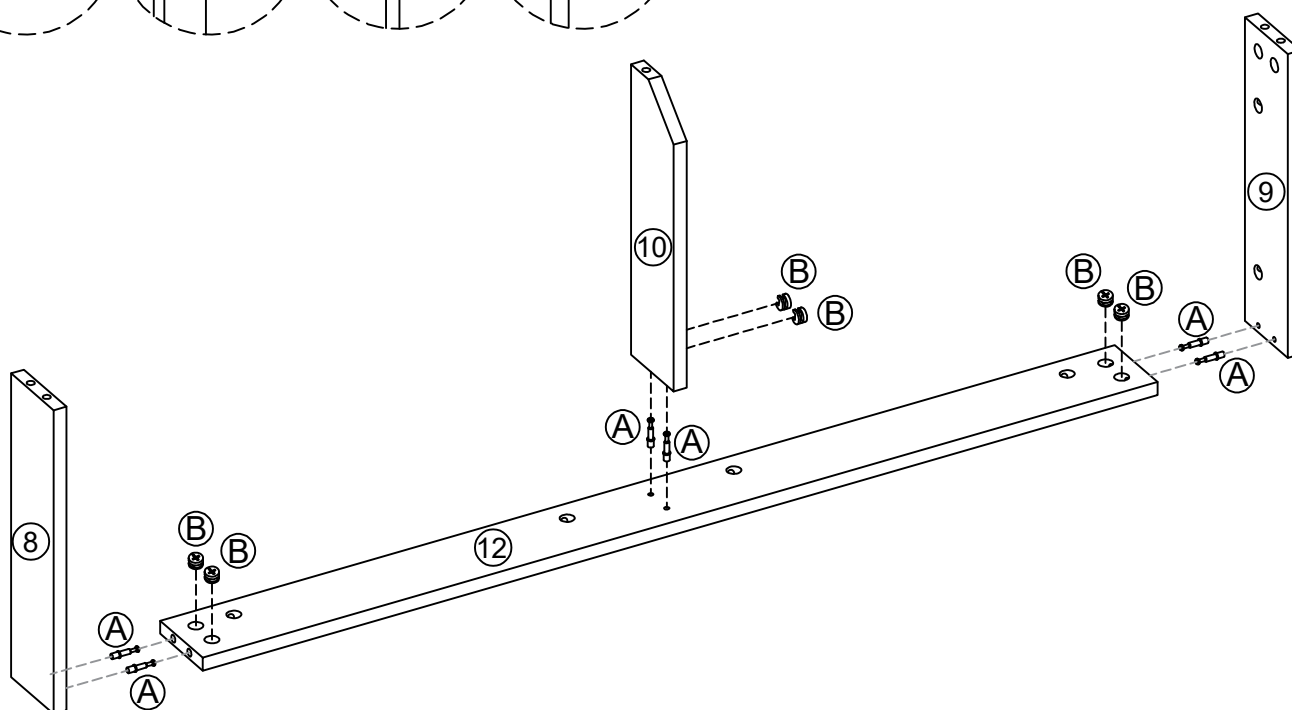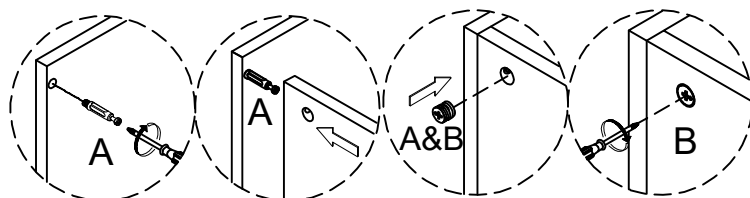

Step 11

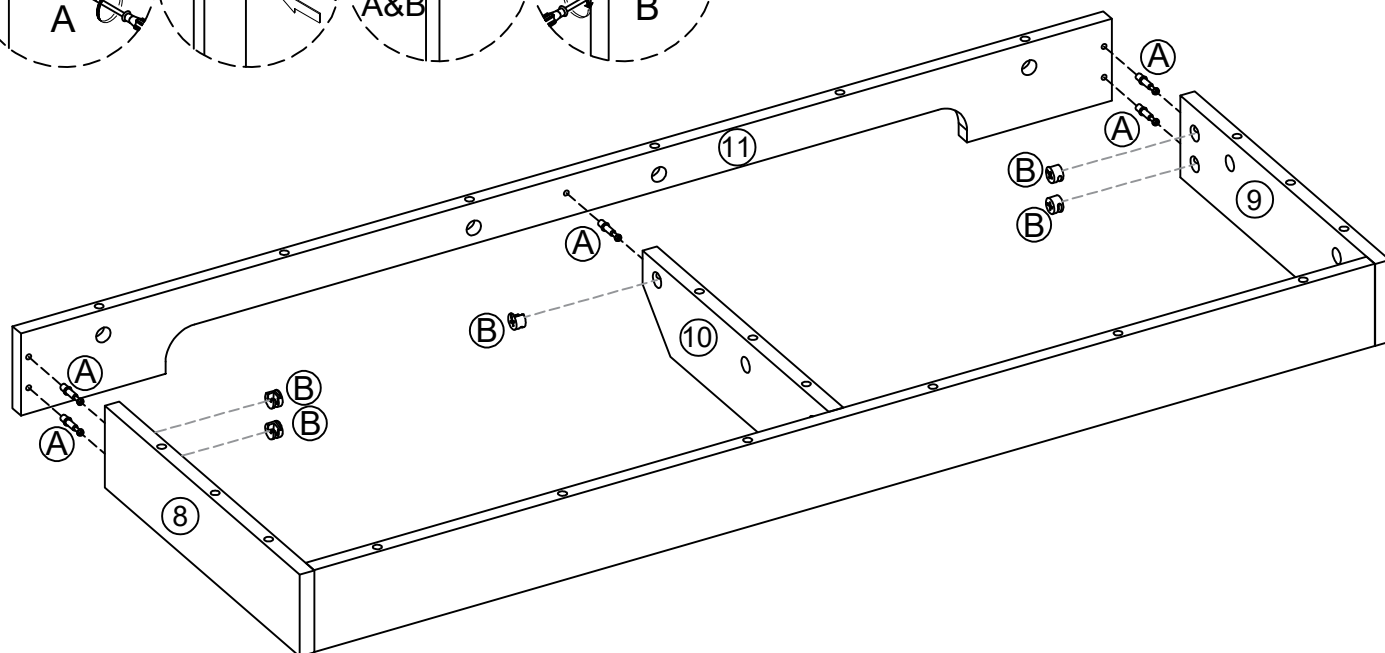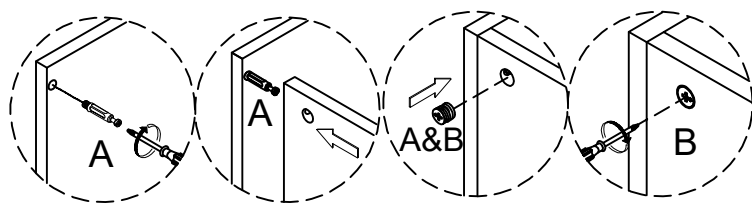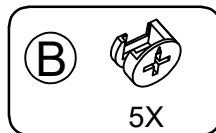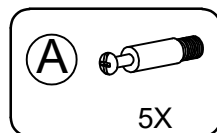

Step 12

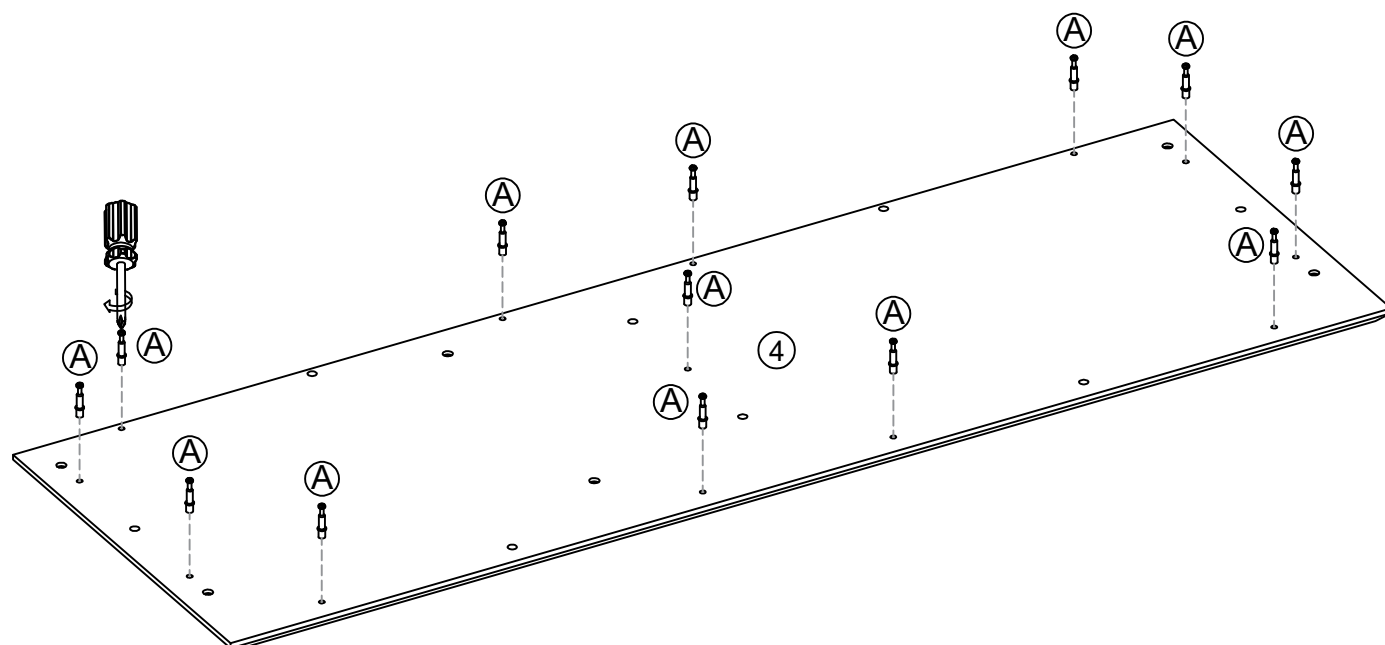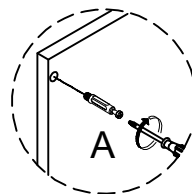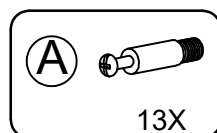


Step 13

(C)

Ø8*30mm
6X

(F)

Ø3.5*35mm
6X

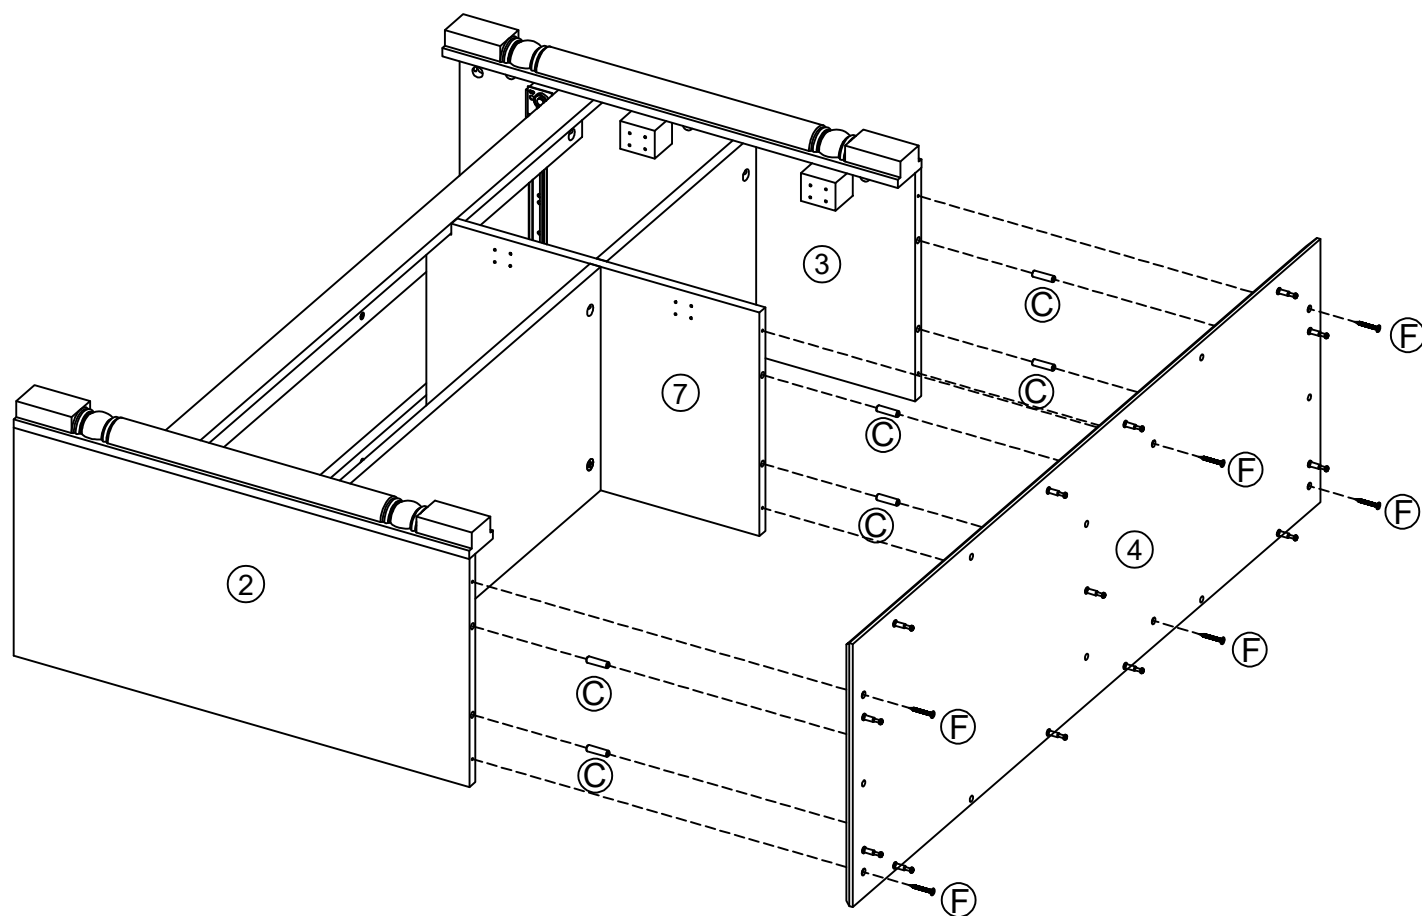

Step 14

(B)





13X

(C)






Ø8*30mm







8X

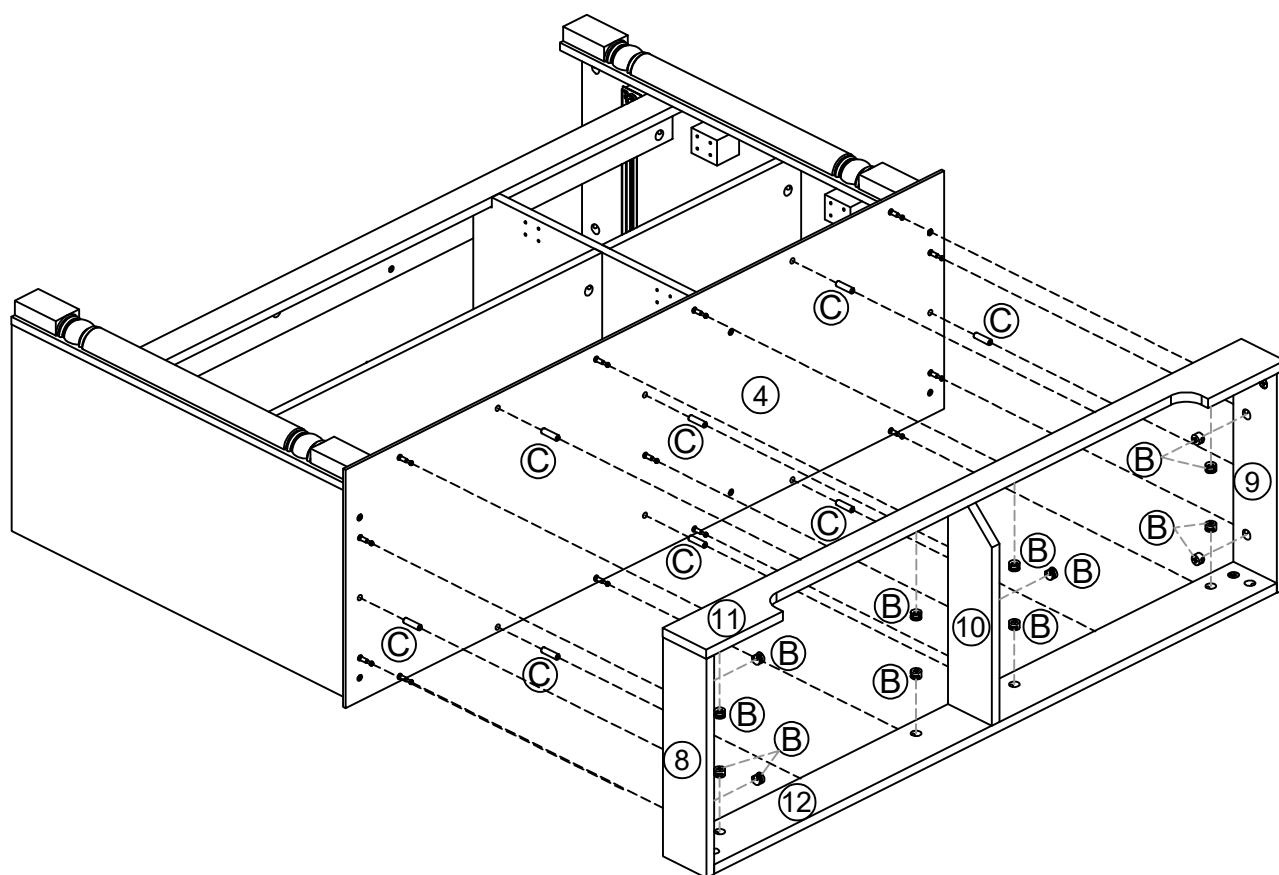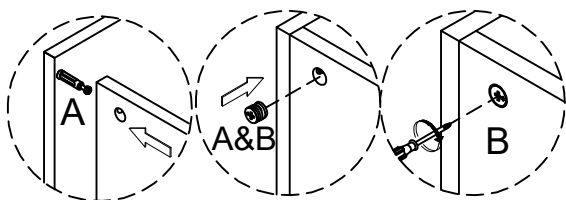

Step 15



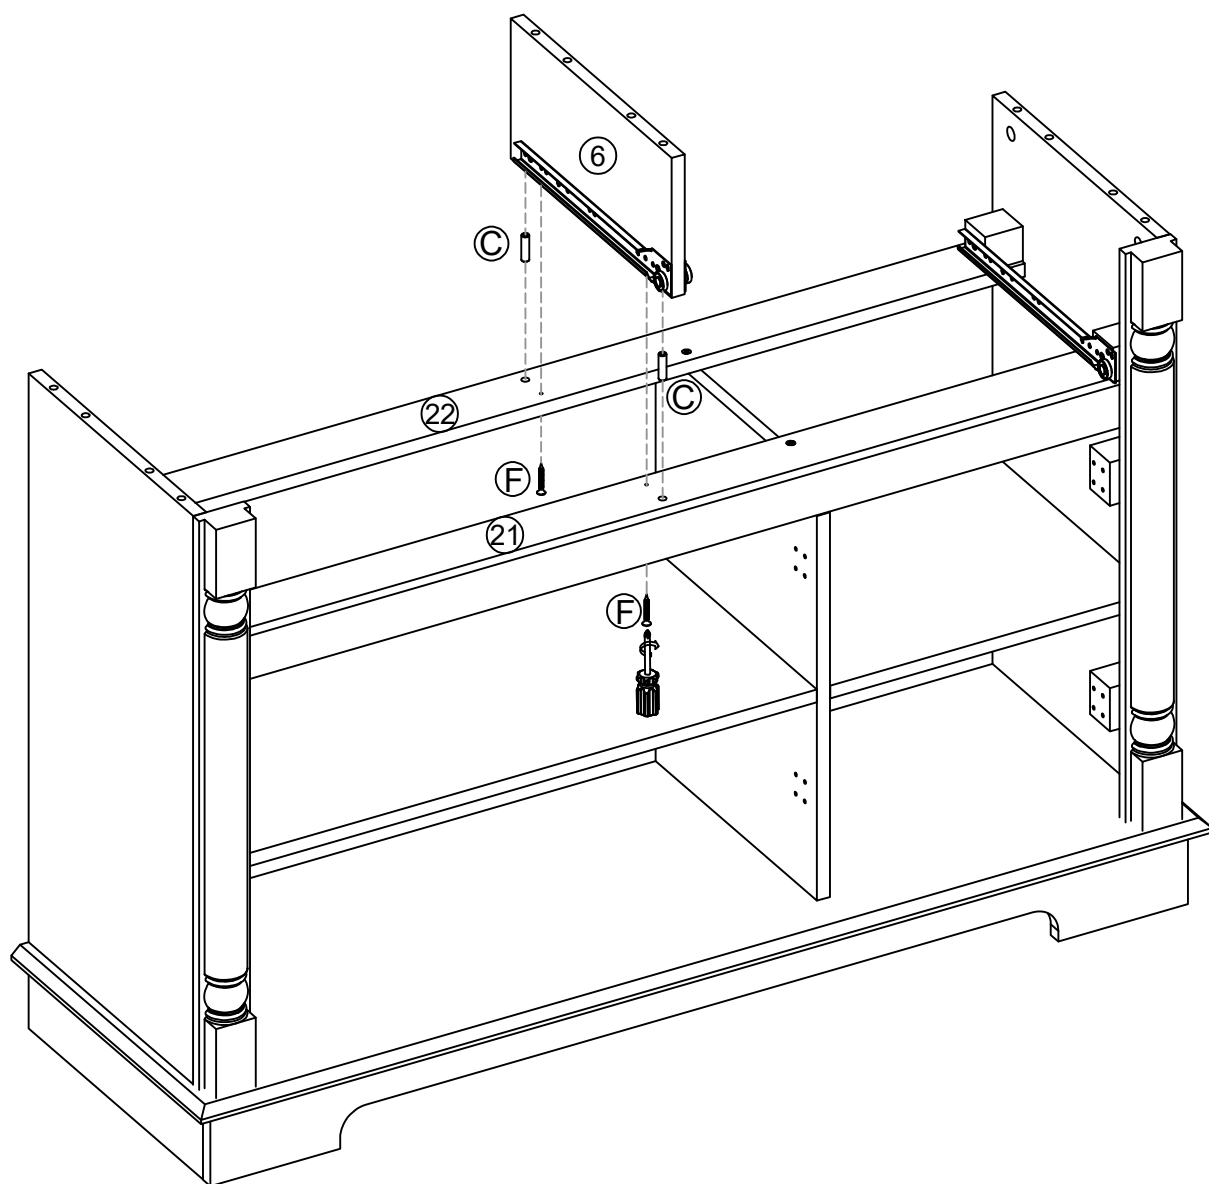
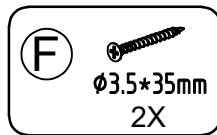
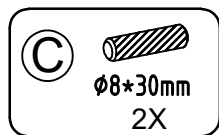


Step 16

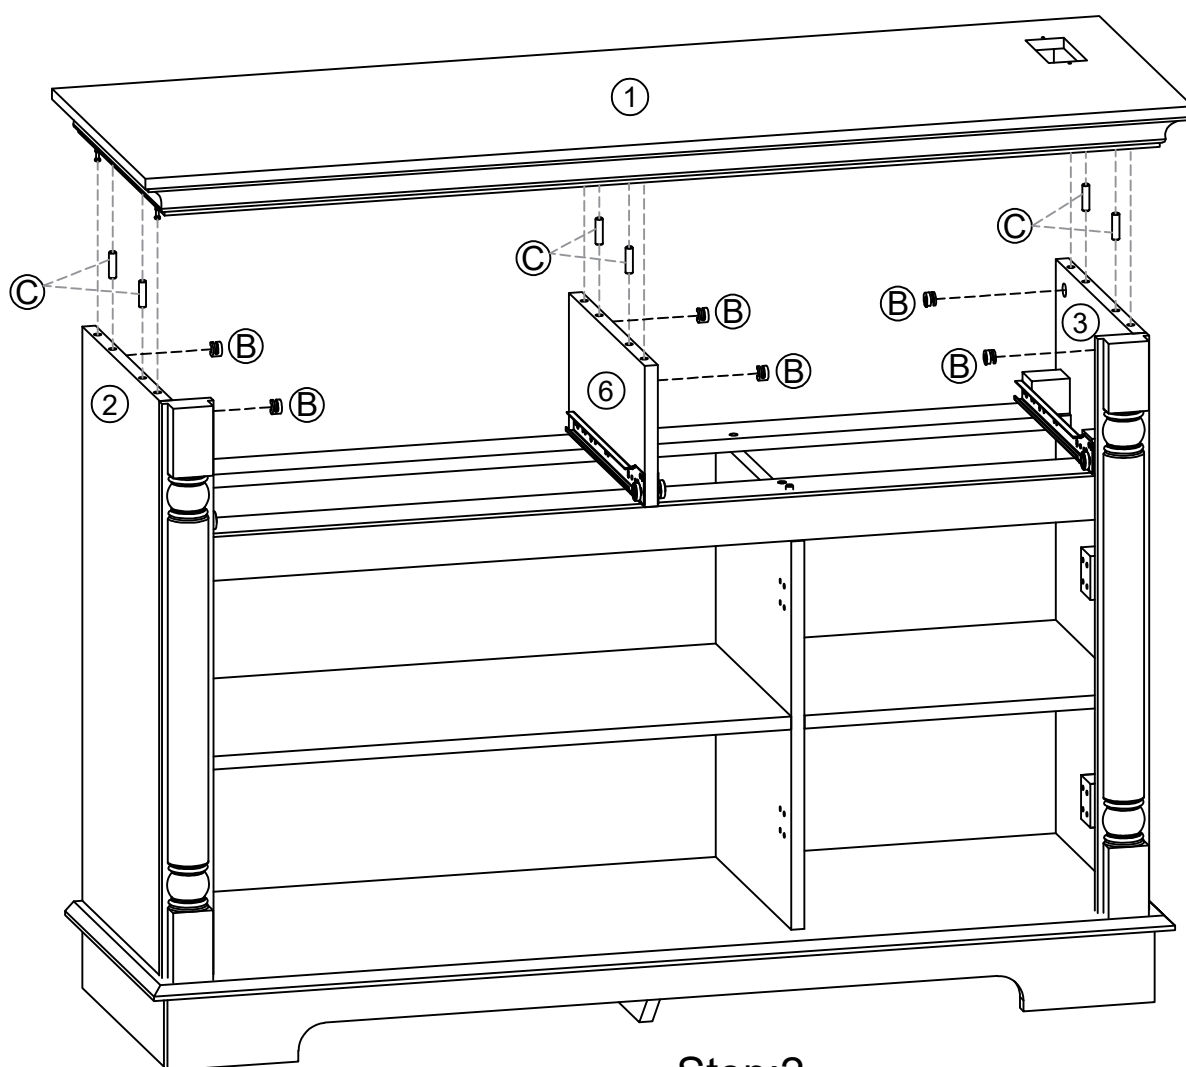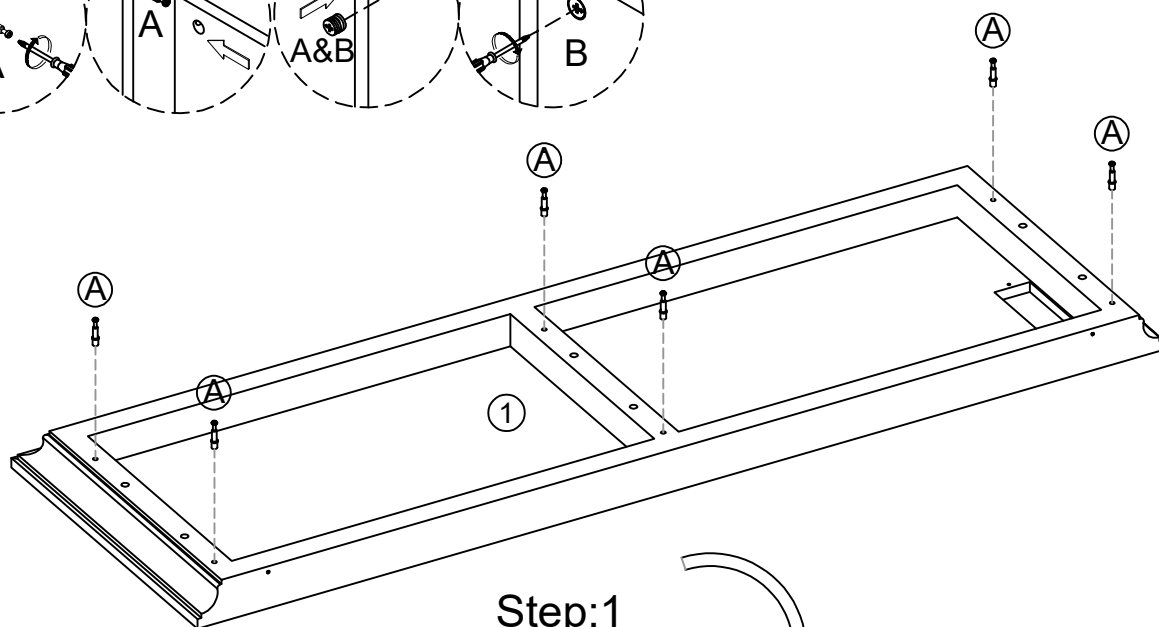
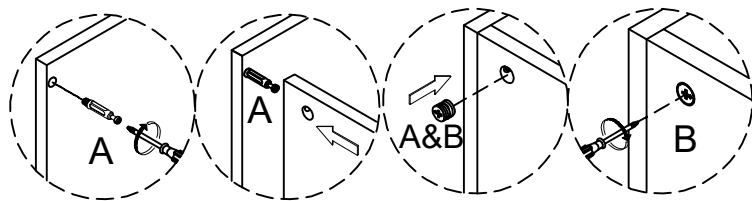
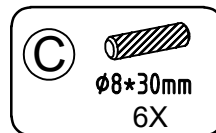
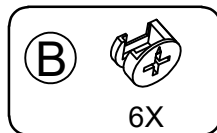
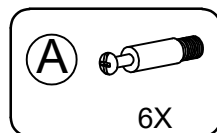


Step:2

Step 17

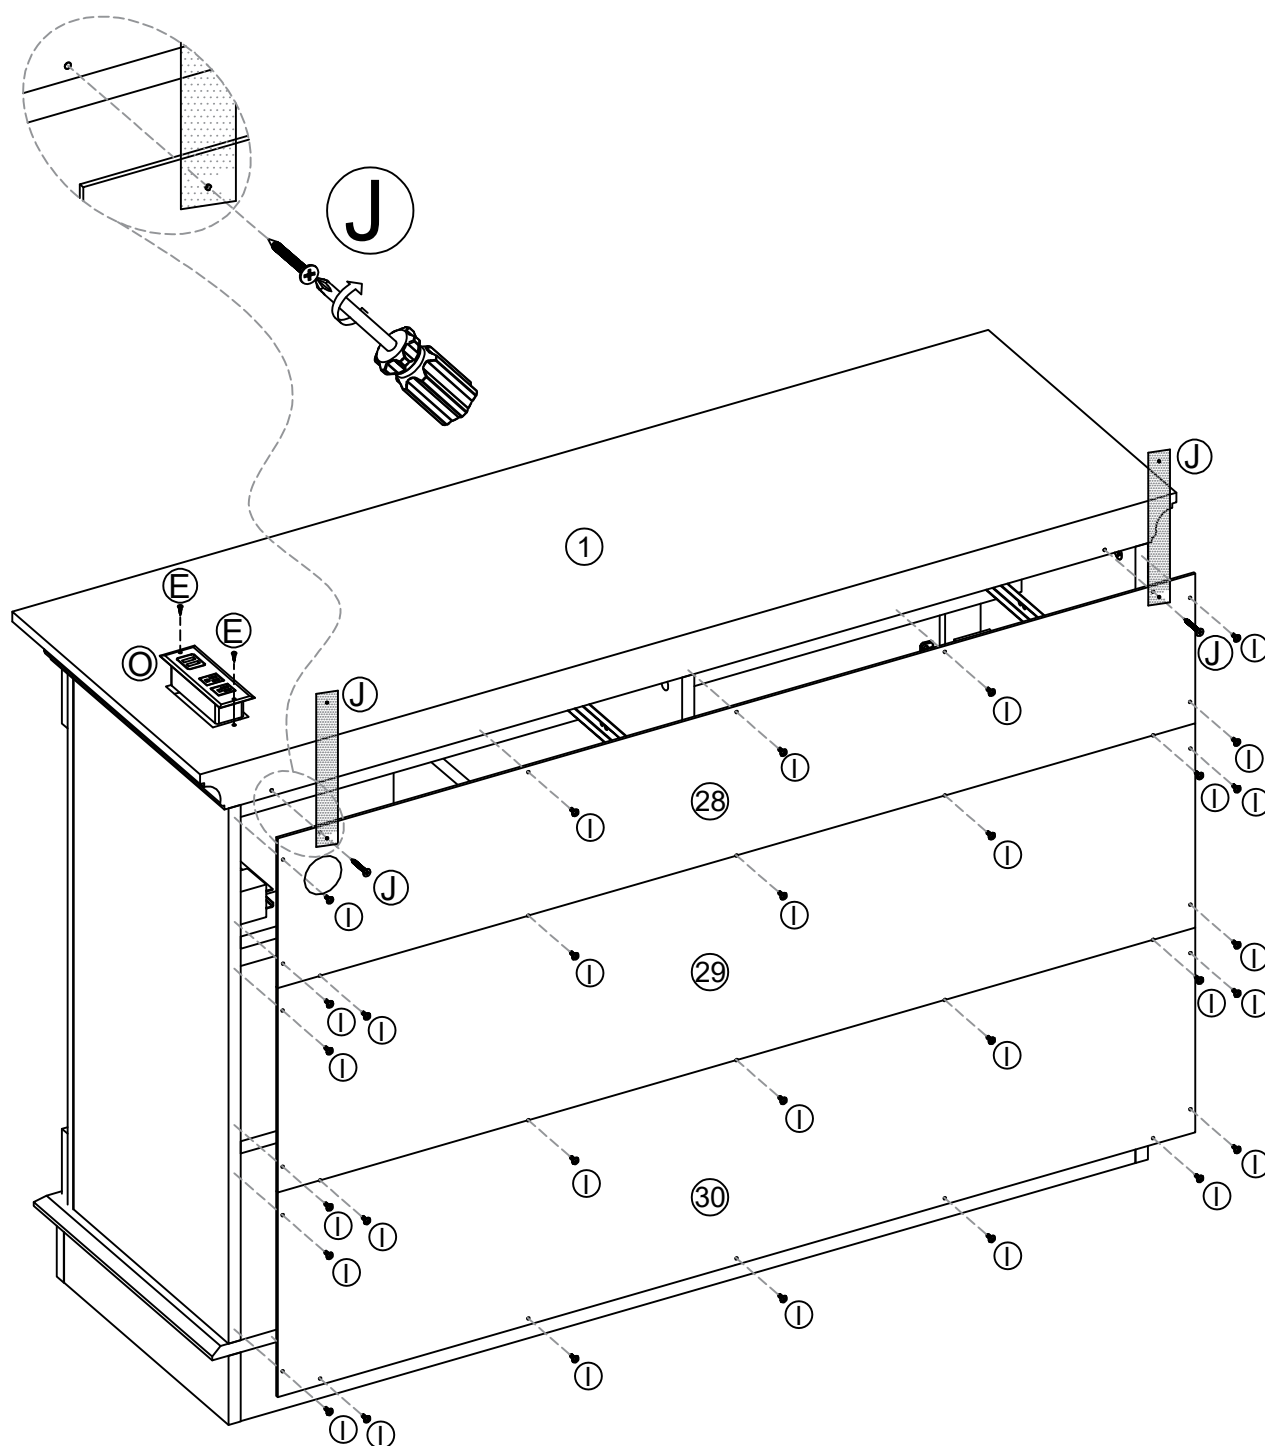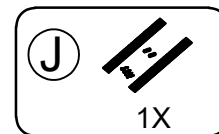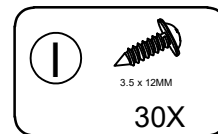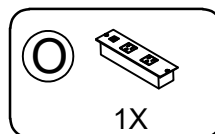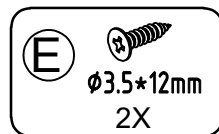


Step 18

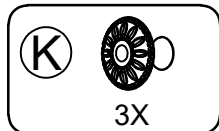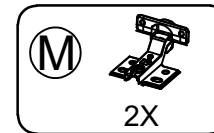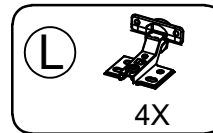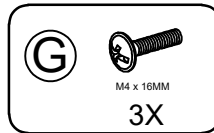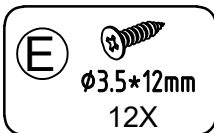


Clockwise rotation of the bolt increases the door hinge height;
counterclockwise rotation of the bolt decreases the door hinge height.

Loosen the screw to adjust
the length of the door hinge

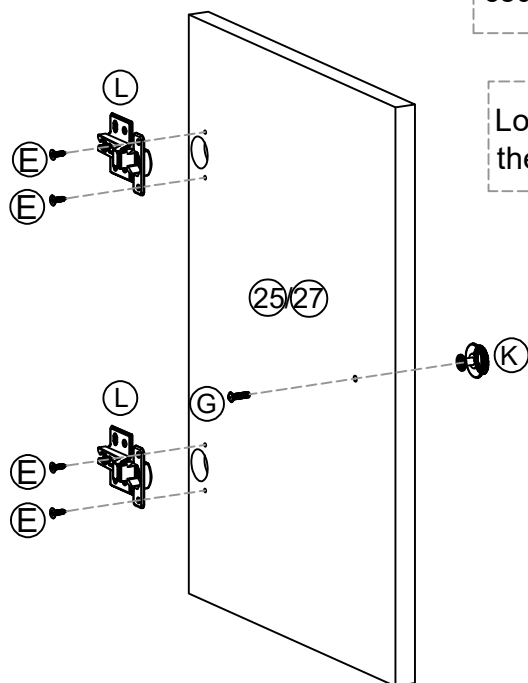


X2

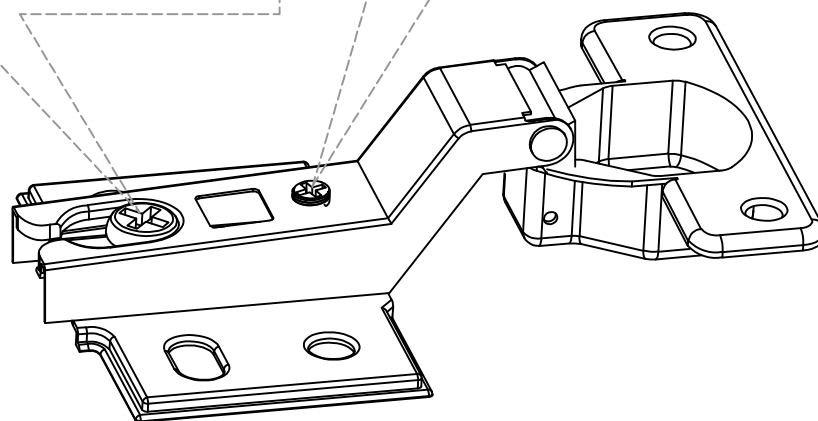


Hinge of big bend

Clockwise rotation of the bolt increases the door hinge height;
counterclockwise rotation of the bolt decreases the door hinge height.

Loosen the screw to adjust
the length of the door hinge







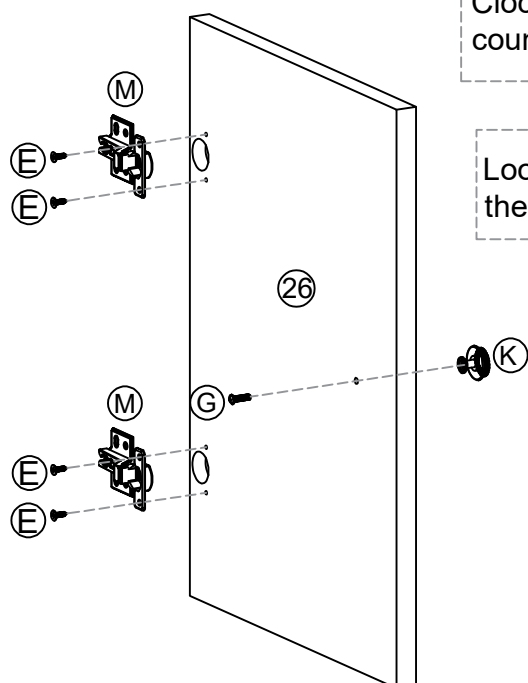


X1





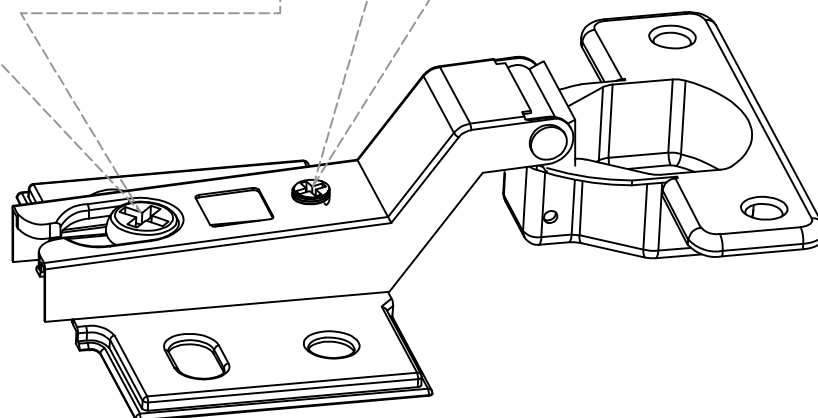


Hinge with a medium bend



Step 19

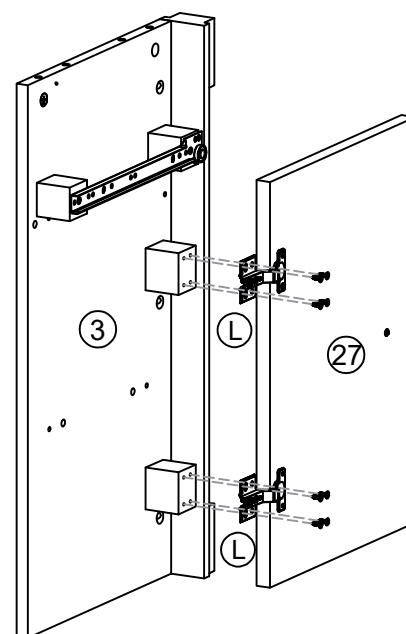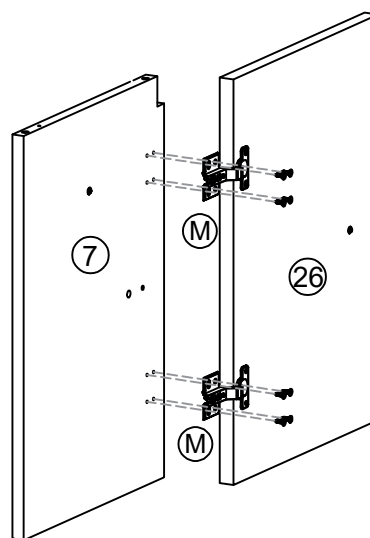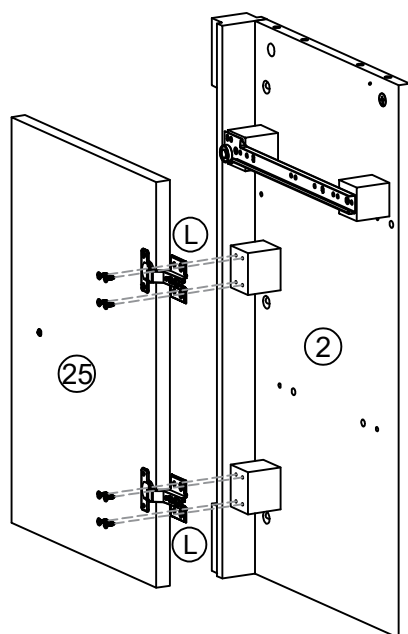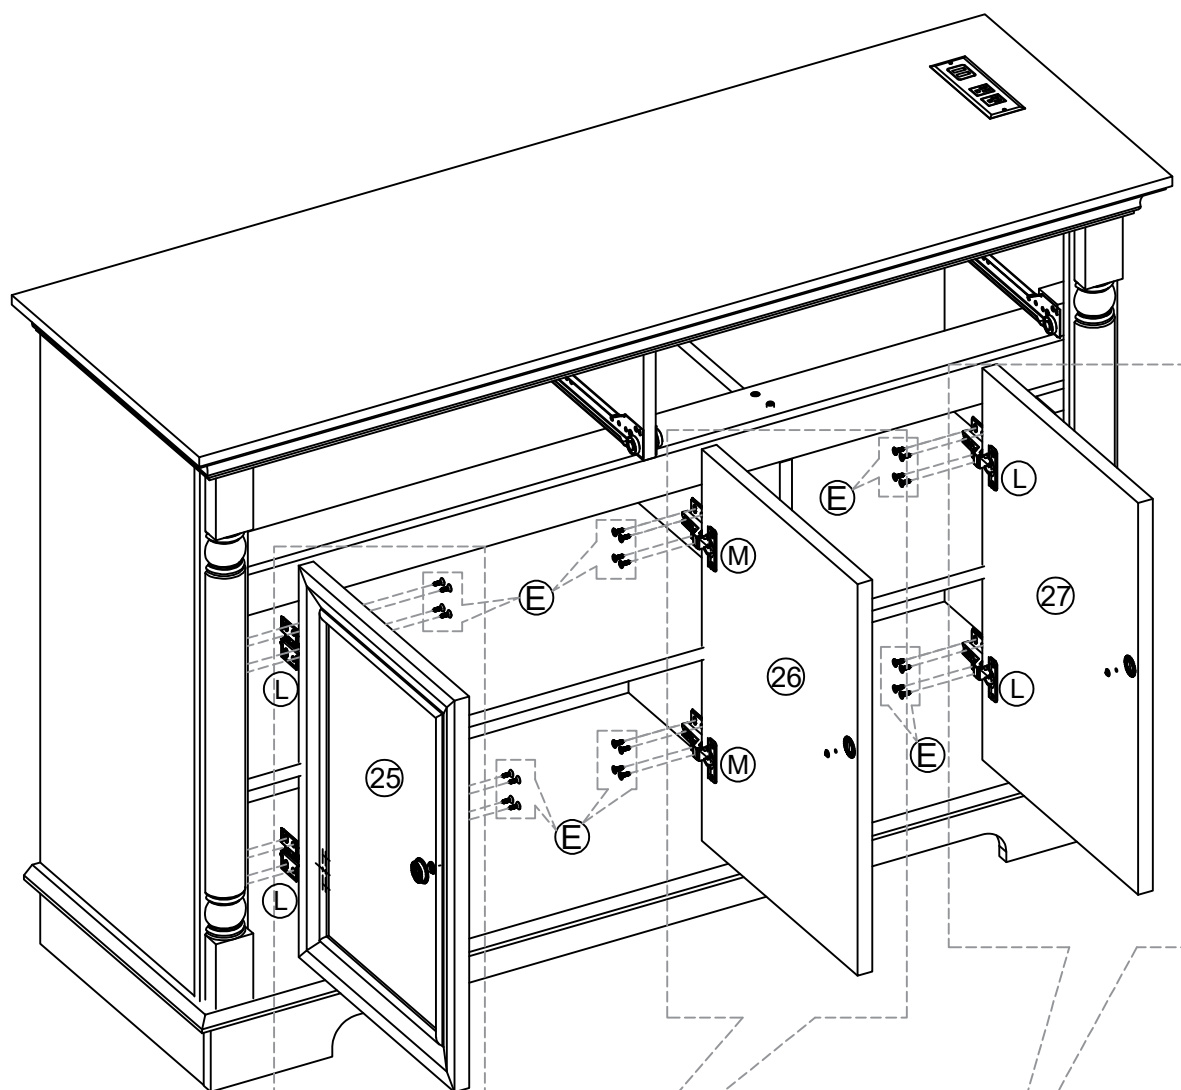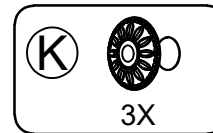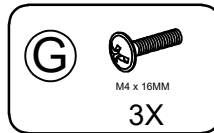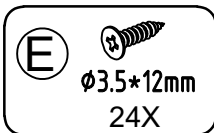


Step 20

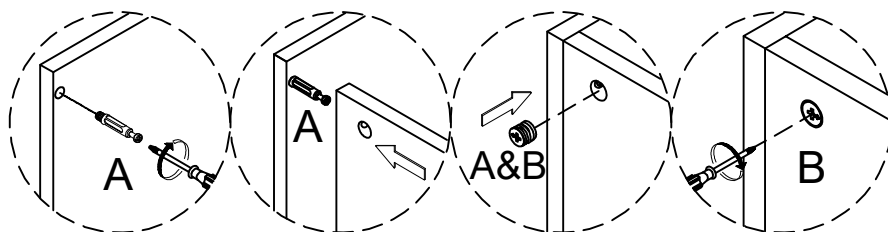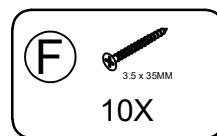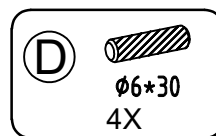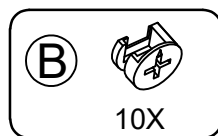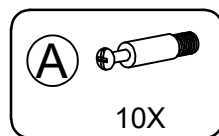






Step:1

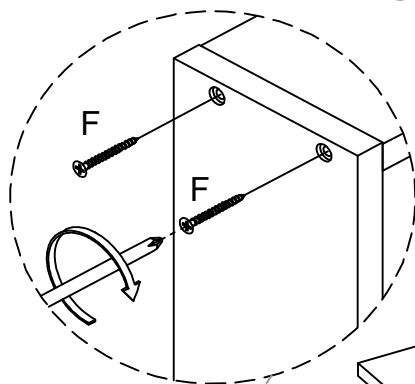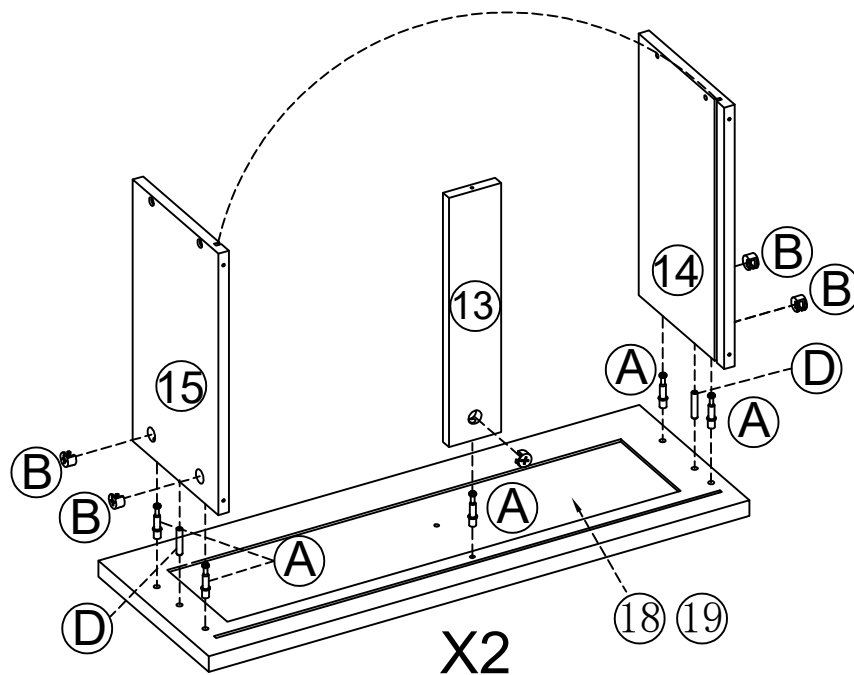



Step:2

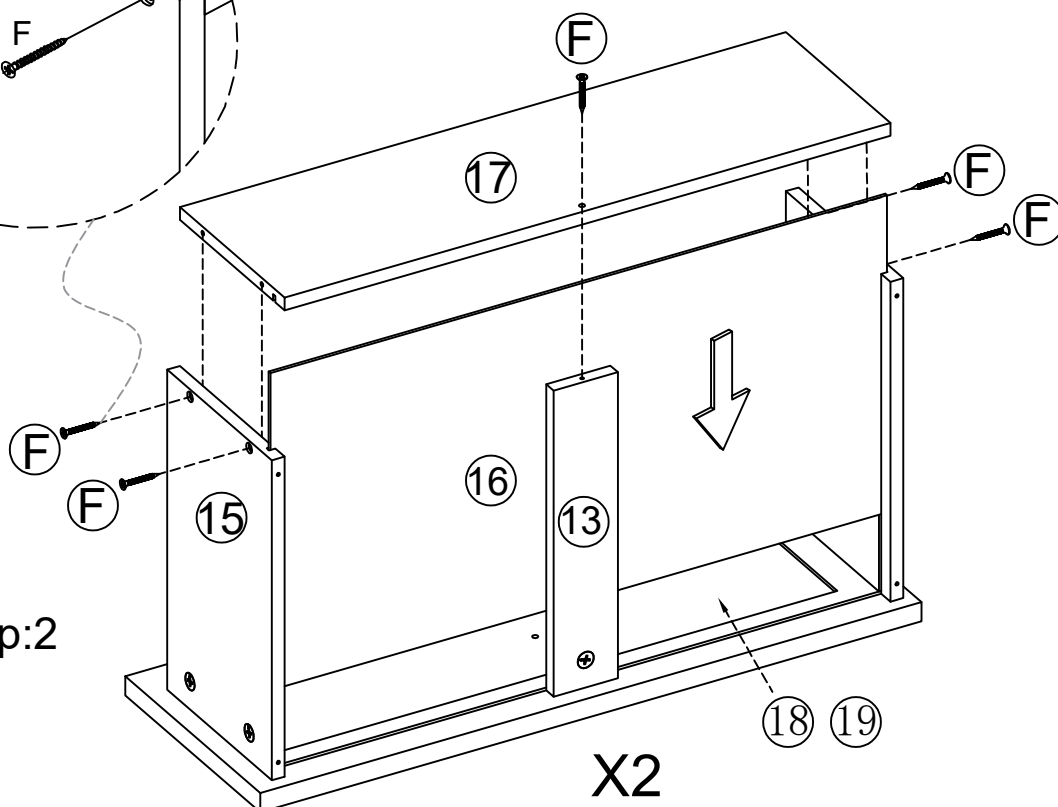



Step 21

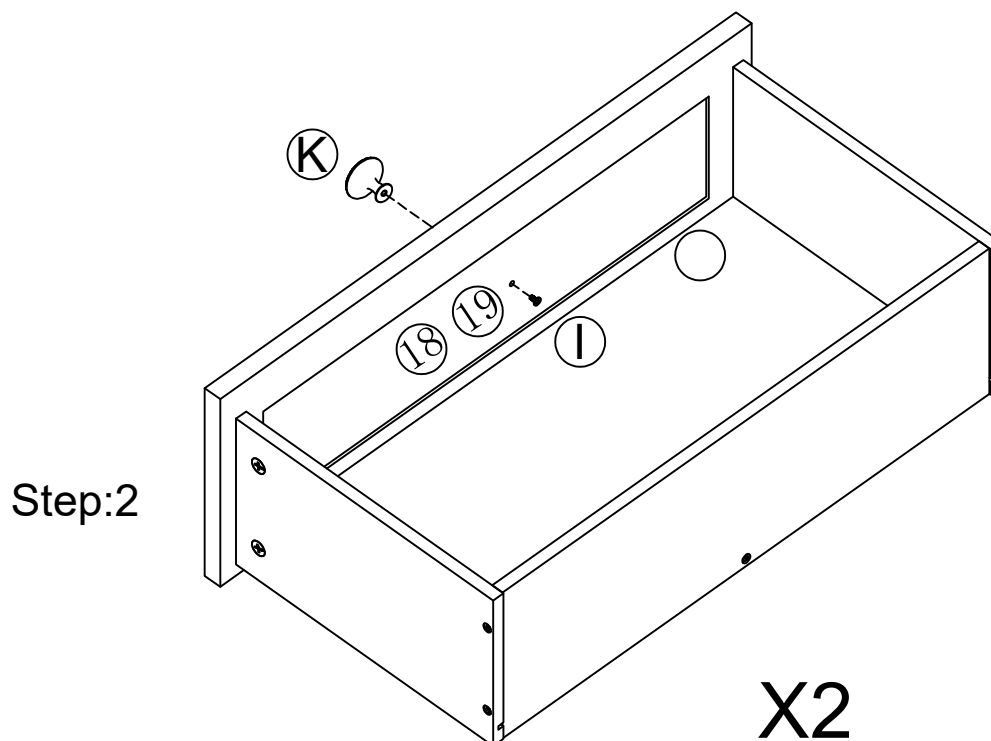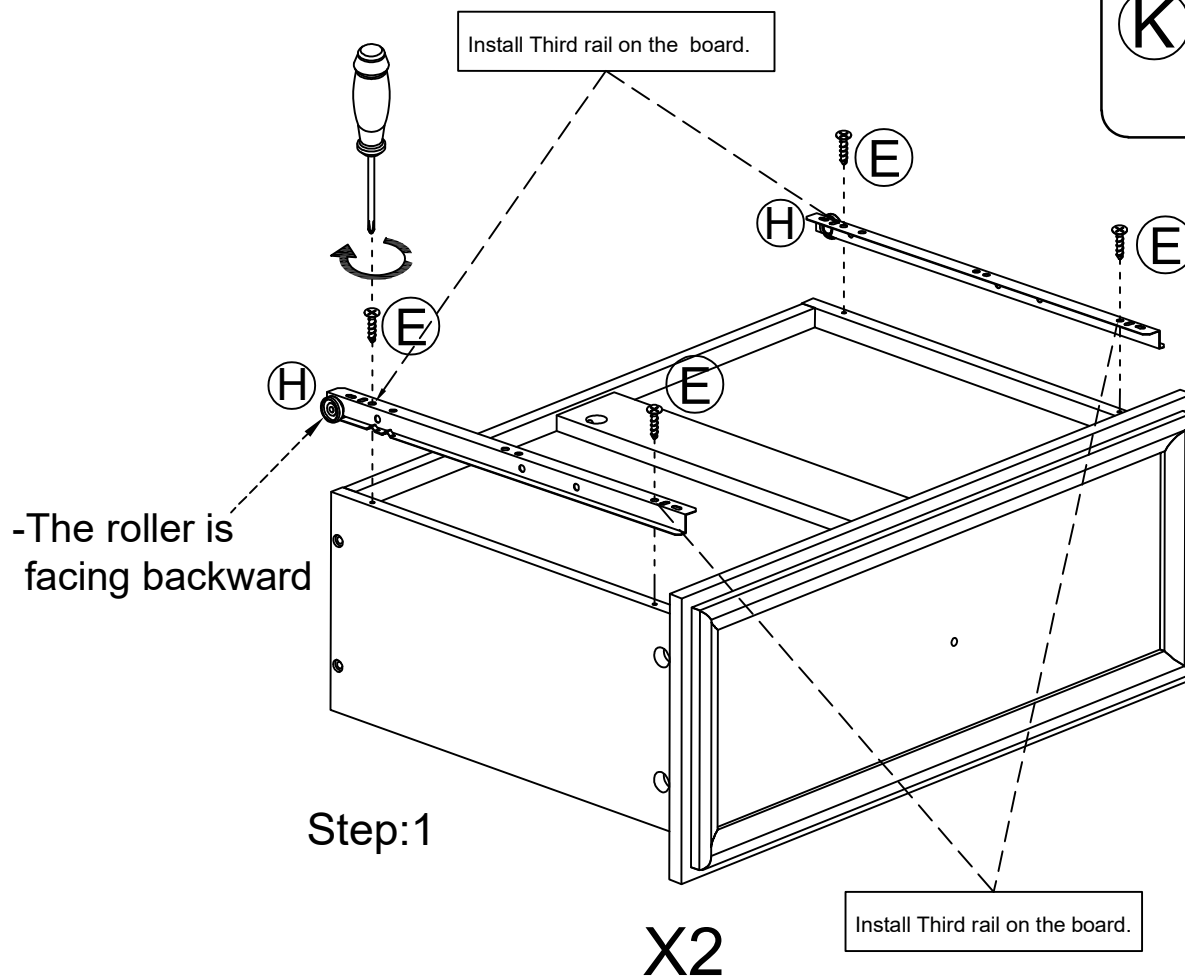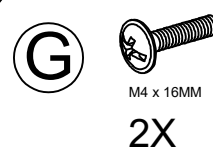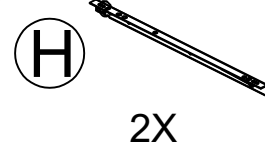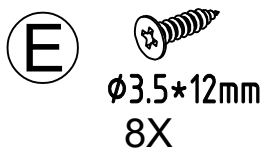

Step 22

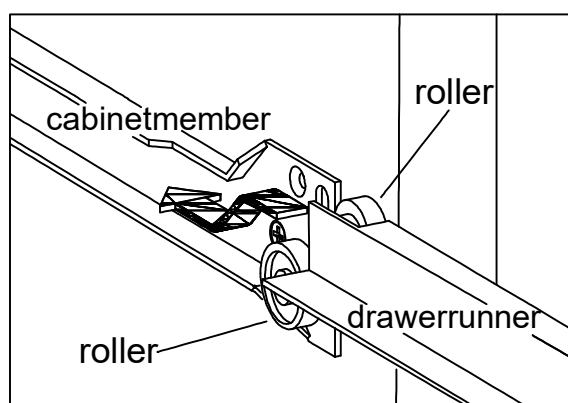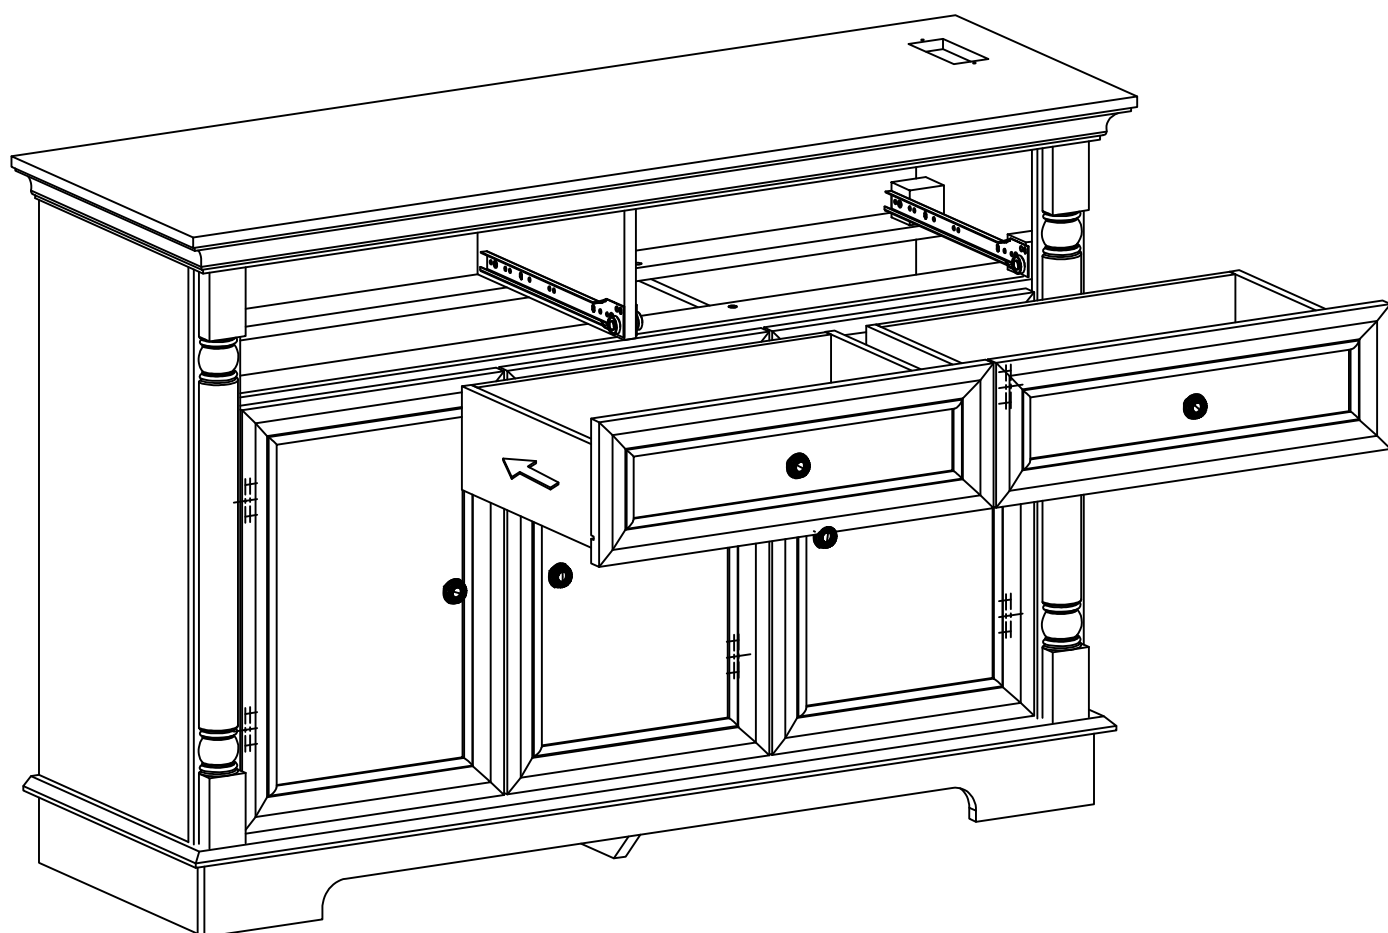

Step 23

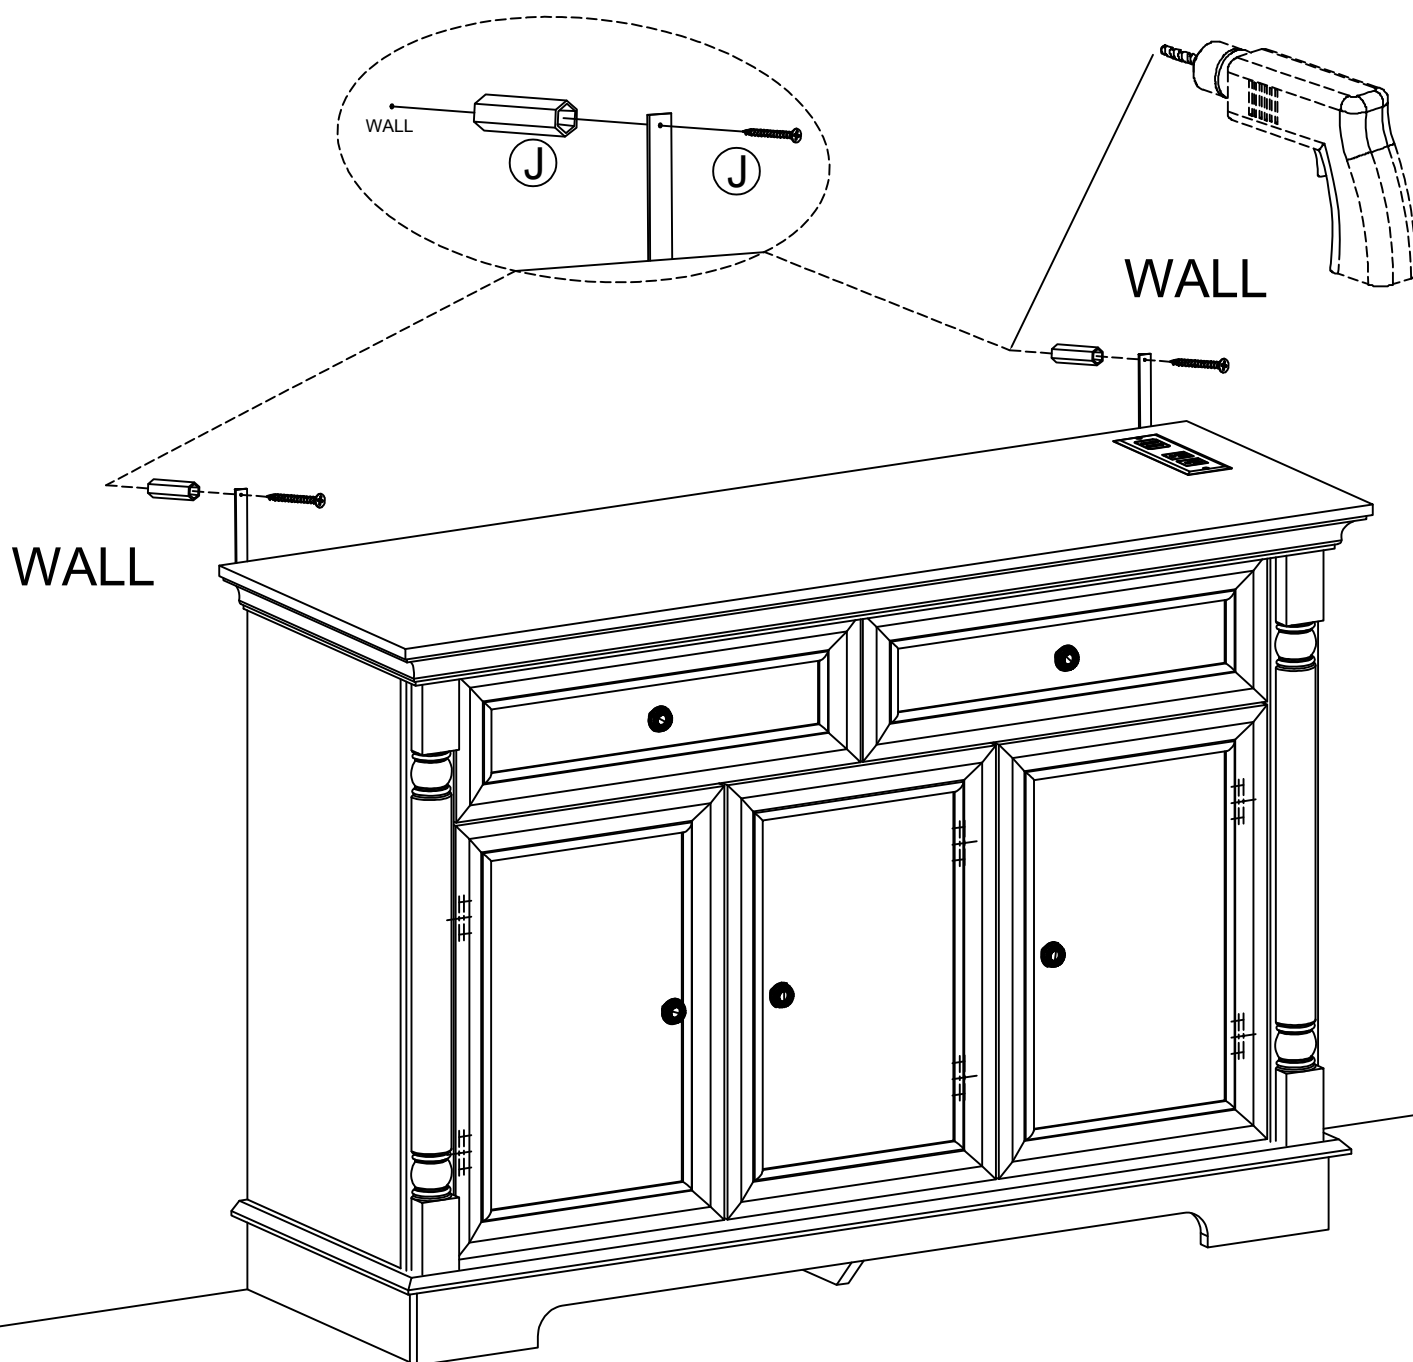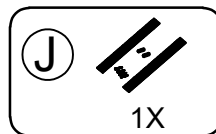

The furniture must permanently be fixed to the wall using the provided anti-tipping device to prevent it from tipping over.

- Mark the drill positions on the wall with a pencil.
- Drill a small hole on the marked positions.
- Insert a wall anchor into the drilled hole.
- Fix the anti-tipping strap to the wall using the provided screws.