
PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.

Tip #3: Read manual before assembling, it helps!


ITEM#:SP-26062

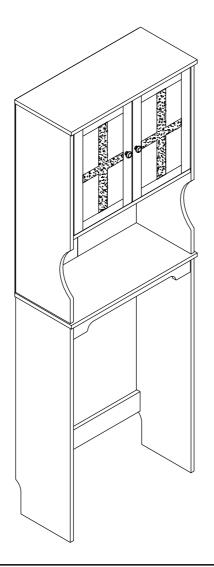

PAGE:1 OF 8

PARTS IDENTIFICATION

ITEM#:SP-26062

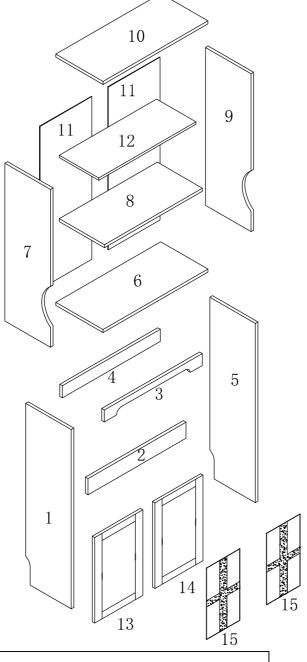

- (1) 1pc | (6) 1pc | (11) 2pcs
- (2) 1pc ¦ (7) 1pc ¦ (12) 1pc
- (3) 1pc | (8) 1pc | (13) 1pc
- (4) 1pc (9) 1pc (14) 1pc
- (5) 1pc (10) 1pc (15) 2pcs

PAGE:2 OF 8


HARDWARE IDENTIFICATION

ITEM#:SP-26062

| A | | L29 | 20pcs |
|---|-----------------------|---|-------|
| В | | Ø15 | 20pcs |
| С | (%) | Ø4×30 | 6pcs |
| D | | M6 | 4pcs |
| F | () —— > | | 28pcs |
| G | | ø5 | 4pcs |
| Н | | | 2pcs |
| I | | | 1pc |
| J | ~cca(%) | ø3×16 | 4pcs |
| K | | | 2pcs |
| L | ®)>>> | ø3×14 | 4pcs |
| M | | ø5 | 2pcs |
| N | | Ø4×22 | 2pcs |
| 0 | | | 2pcs |
| Р | | Ø8 | 2pcs |
| Q | | Ø18 | 8pcs |
| R | | ø8×25 | 18pcs |
| S | Estrito. | ø3. 5×12 | 8pcs |
| T | M | | 8pcs |
| U | | Glue: For securing please apply to wood dowel first before inserting into panel | 1pc |
| | | | |


PAGE:3 OF 8

ITEM#: SP-26062

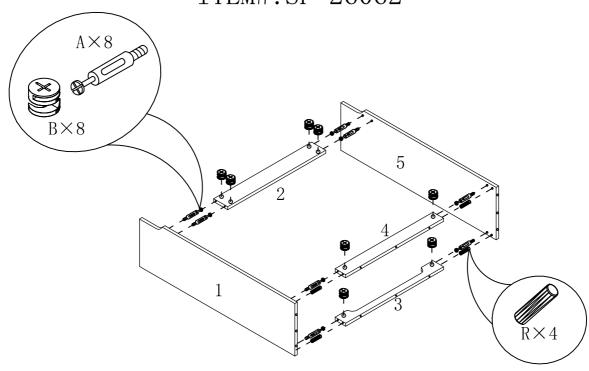


STEP1

STEP2

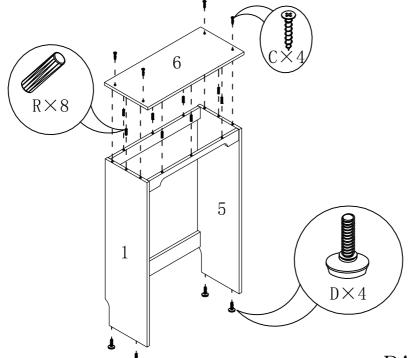


PAGE:4 OF 8

ITEM#: SP-26062

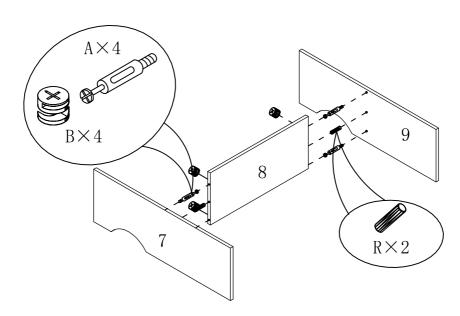


STEP3

STEP4

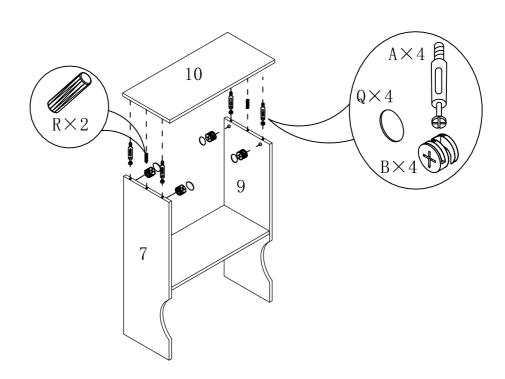


PAGE:5 OF 8

ITEM#: SP-26062

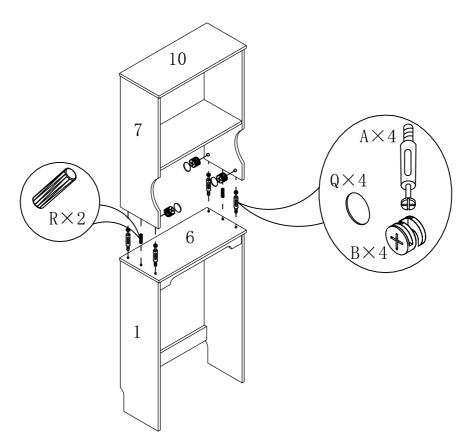


STEP5

STEP6

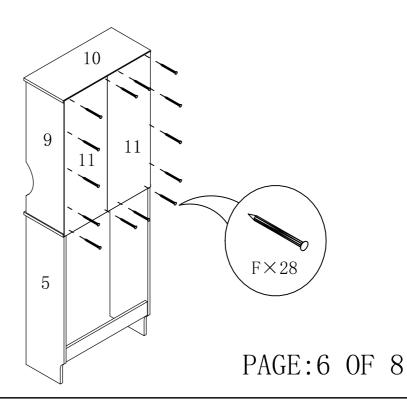


ITEM#: SP-26062

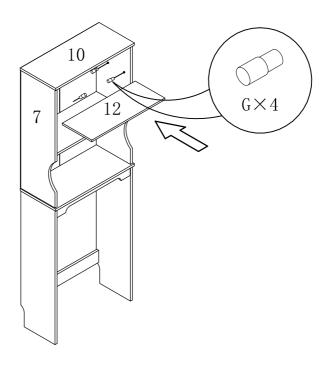


STEP7

STEP8

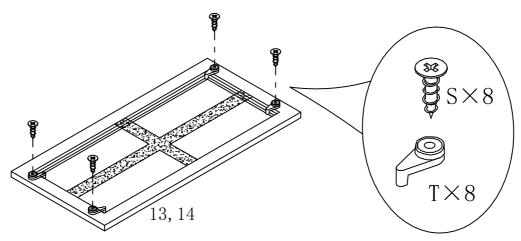

PAGE:7 OF 8

ITEM#: SP-26062

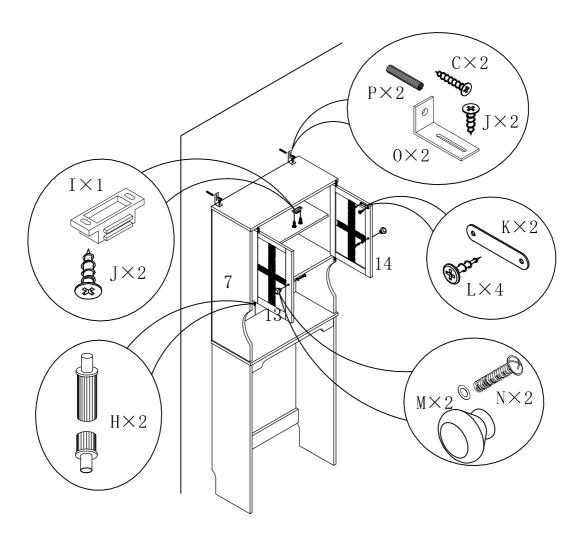

STEP9 PAGE:8 OF 8