

ASSEMBLY INSTRUCTIONS

MODEL : HD101A / HD102A
TWIN (4+0)

(Box 1)
BOX OF HEADBOARD & FOOTBOARD

No	ITEM	Qty
A	Headboard 	1 pc
B	Footboard 	1 pc
C	Headboard Leg (L) 	1 pc
D	Headboard Leg (R) 	1 pc
E	Footboard Leg (L) 	1 pc
F	Footboard Leg (R) 	1 pc
G	Bed Slats 	4 pcs

(Box 2)
BOX OF SIDE RAIL


No	ITEM	Qty
H	Side Rail 	2 pcs

(Box 1)
HARDWARE LIST


No	ITEM	Qty
1	Csk M4 x 32mm 	8 pcs
2	JCBC M6 x 35mm 	12 pcs
3	JCBC M6 x 50mm 	2 pcs
4	SPRING WASHER 1/4" Rbw 	14 pcs
5	Flat Washer 1/4" ID x 13mm OD Blk 	12 pcs
6	Band Washer m4x65mm Blk 	2 pcs
7	Wood Dowel 	4 pcs
8	ALLEN KEY m4x65mm Blk 	1 pc
9	ALLEN KEY m5x65mm Blk 	1 pc
10	UNITAR SCREW m7 x 60mm 	2 pcs

STEP 1.1 : Attach Head Board Leg (C) & (D) to Head Board (A) . using JCBC BOLT (2) with Spring Washer (4) , Flat washer (5) and securing with ALLEN KEY (8) .

STEP 1.2 : Using Unitar Screw (10) and securing with ALLEN KEY (8) .

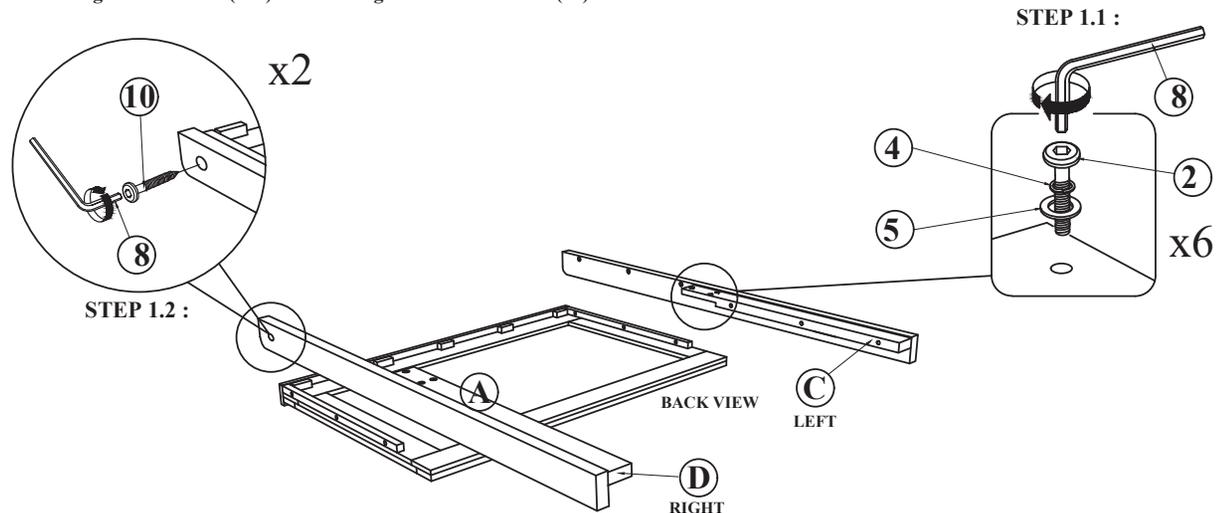


STEP 2 : Using JCBC BOLT (2) with Spring Washer (4) , Flat washer (5) and securing with ALLEN KEY (8) as shown .

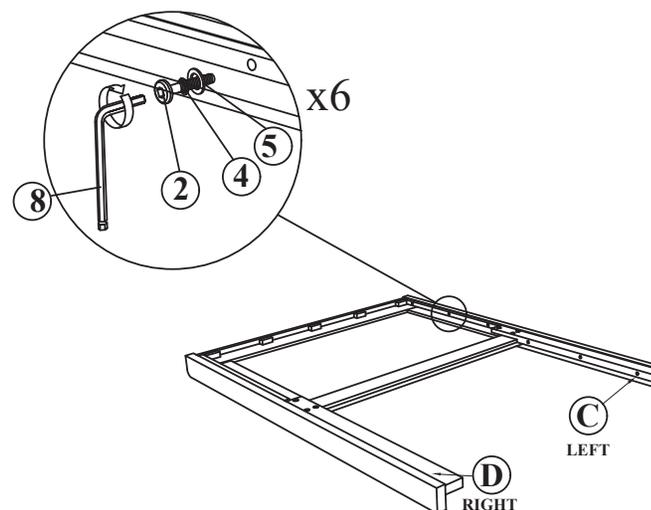


NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

ASSEMBLY INSTRUCTIONS


STEP 3 : Attach Footboard Leg (E) & (F) to Footboard (B) as shown using Wood Dowel (7) and fix it as shown.

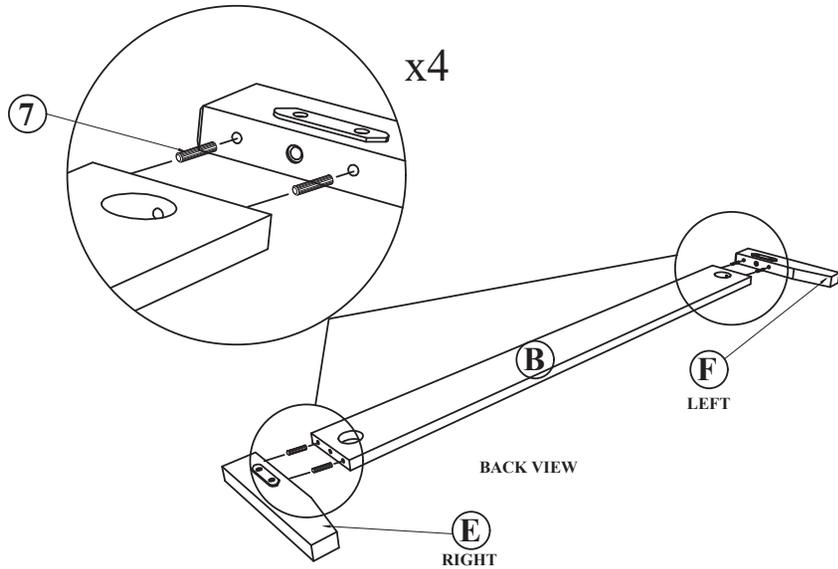


STEP 4 : Using JCBC BOLT(3) with Spring Washer (4), Band washer (6) and securing with ALLEN KEY (8) as shown .

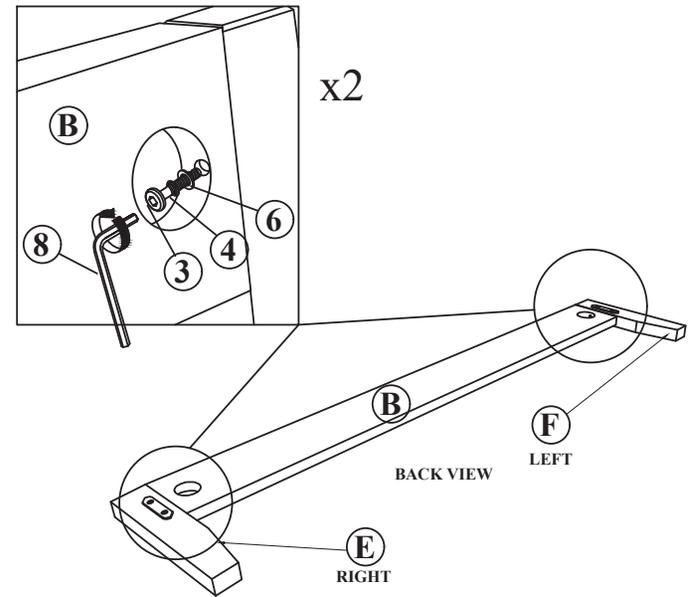

STEP 5 : Hook SIDE RAIL (H) TO HEAD BOARD (A) closely and push down to fit. repeat step 2 with other end of rail to hook onto FOOTBOARD (B).

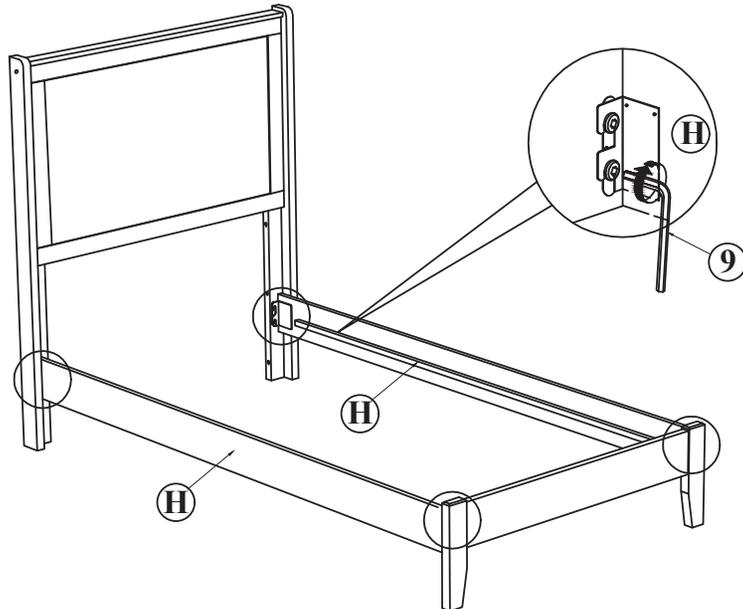

STEP 6 : Tighten the 4 Corner with Allen Key (9). Install the bed slat (G) to side rail (H) and tighten with Csk Screw (1) as per diagram shown. (NOTE: THE SETUP MUST DONE AT THE DECIDED LOCATION FOR THE BED TO OBTAIN PERFECT STABILITY)

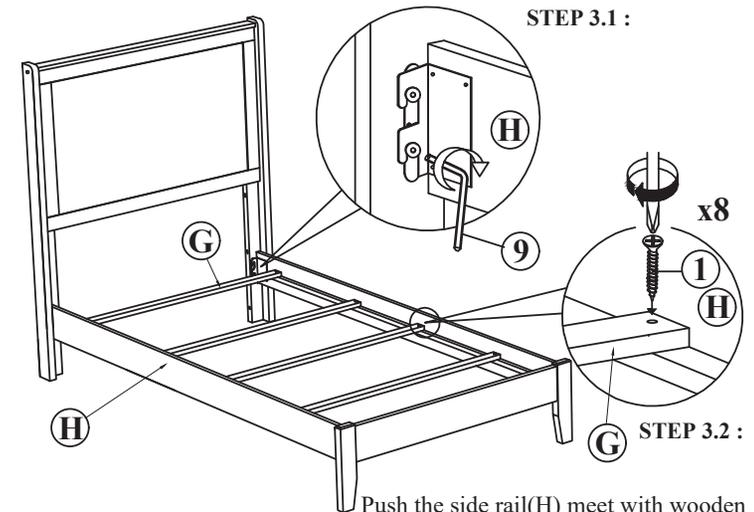

Push the side rail(H) meet with wooden slat(G) and fix the CSK screw (1) by using the Screw Driver.

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.