
ASSEMBLY INSTRUCTIONS

ITEM#: OF4901

Important Safety Instructions:

- Please read all instructions before beginning assembly
- Please make sure receive all the parcels to start the assembly
- For your safety and convenience, assembly by two people is recommended
- Use the parts and hardware lists to identify and separate each of the components included
- Save all packing materials until assembly is completed to avoid the accidental discarding of smaller parts or hardware

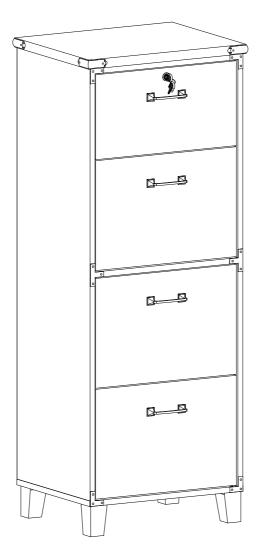


THANK YOU FOR PURCHASING

PARTS LIST

1 X1 2 X1 3 X1 4 X1 5 X1

1 X1 2 X3 3 X3 4 X3 5 X4

16 X1

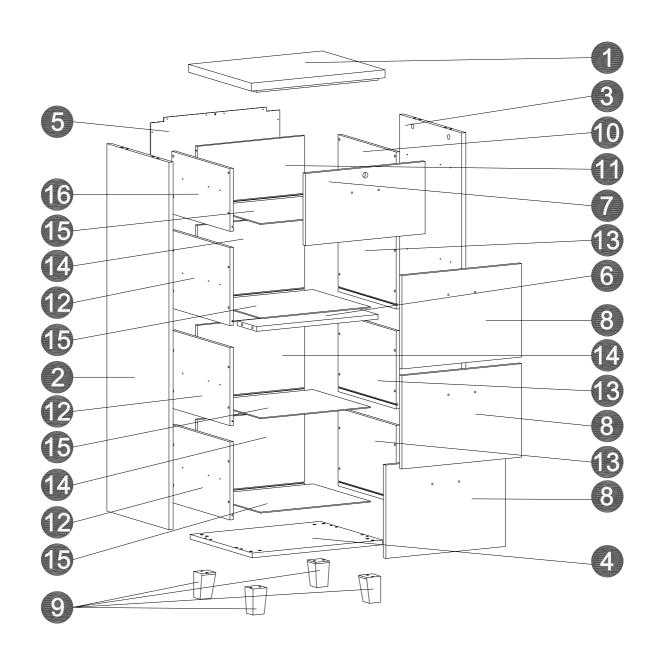


HARDWARE LIST

Name	Part	Qty.	Spare
А		6	1
В		6	1
С		10	1
D		1	
Е		3	
F		4	
G	7/8" Screw	8	1
Н	√ 3/4" N ail	22	1
I	5/8" Screw	4	
J	№ .50 .53	8	
K	2" Screw	12	1
L	1-1/2" Screw	16	1
М	9/16" Screw	16	1

Name	Part	Qty.	Spare
N	1/2" Screw	64	5
Ο		18	2
Р		4	
Q		2	
R	5/6" nail	8	2
S		4	
Т		3	
U		1	
V		6	
DD		8	
U1	E management of the control of the c	2	
U3		2	
U4	O RAID	1	
U5		1	


Slides Must Be Separated Before Assembly. After Separated, Set Aside Until Needed for Assembly.

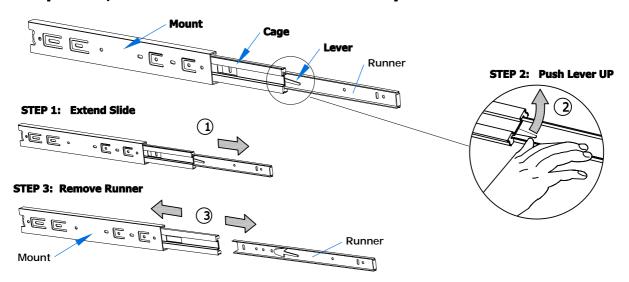



STEP








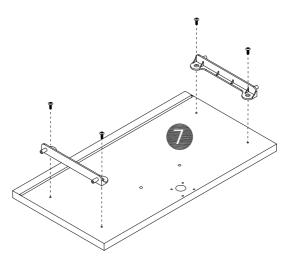


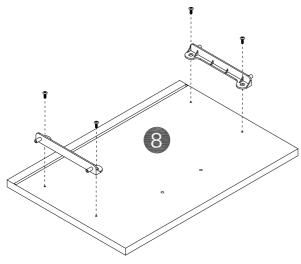


x3




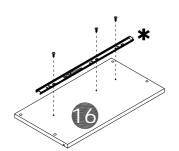


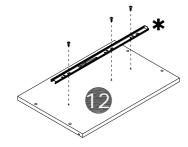


x3





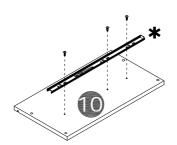

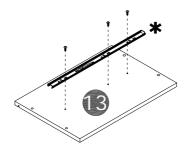



x3

STEP 3




Do not use power screw driver, use manual screw driver.

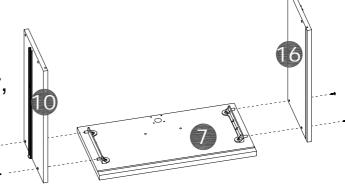

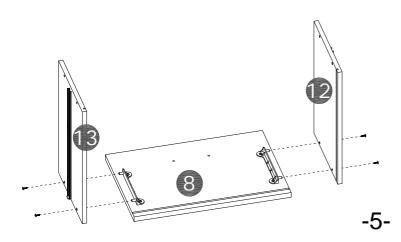


x3

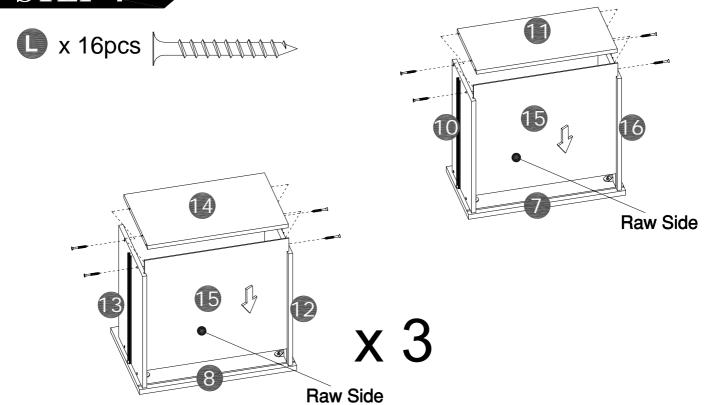


STEP 5







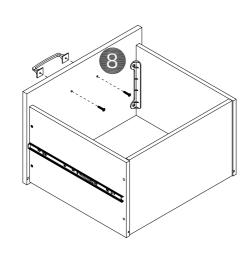


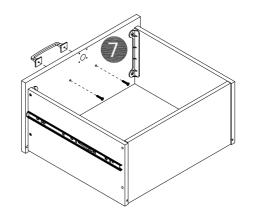



x 3

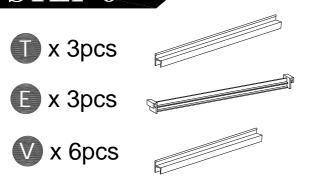


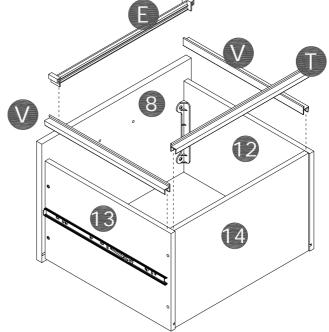


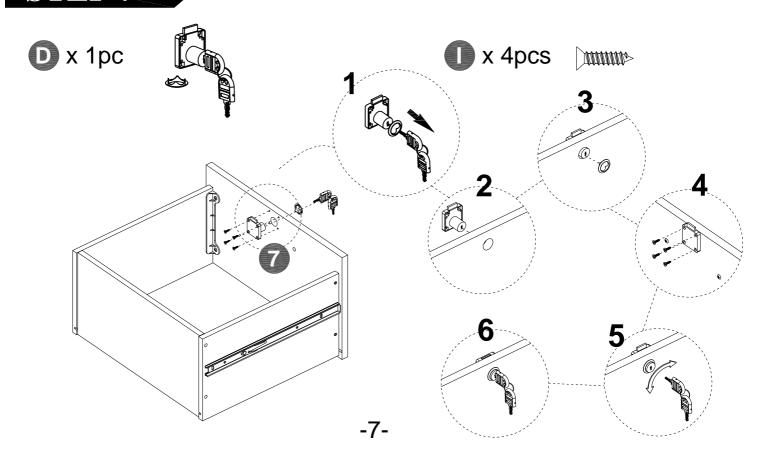


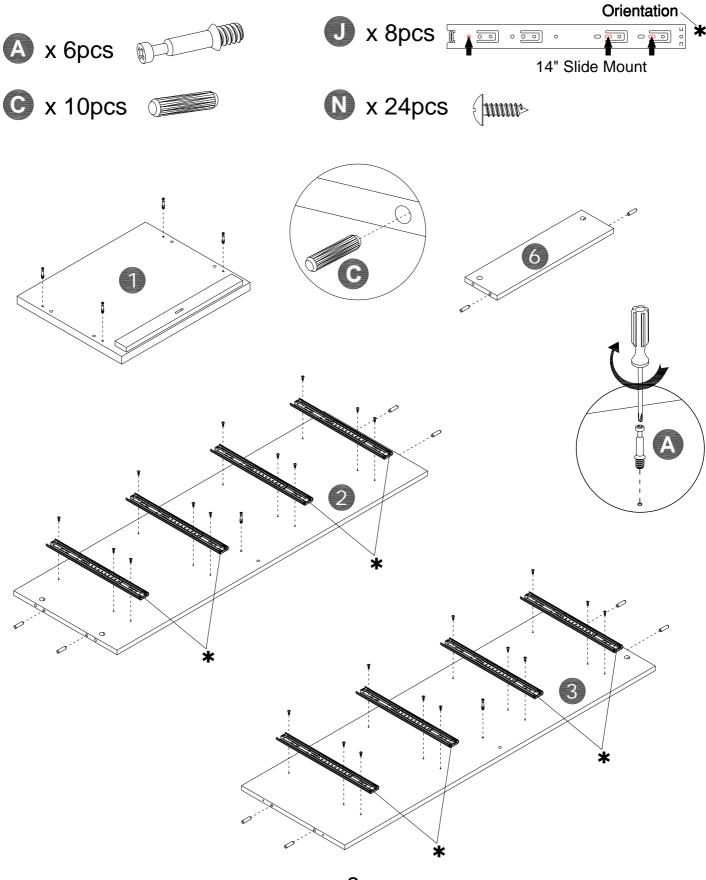


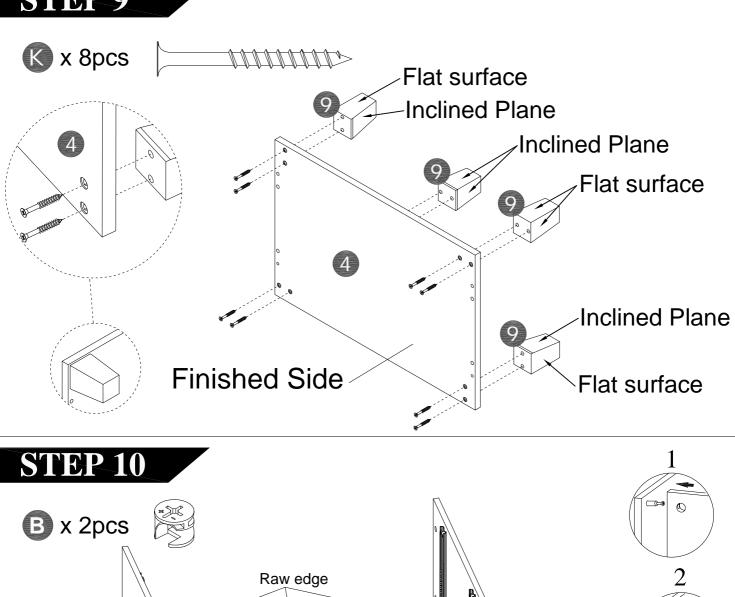

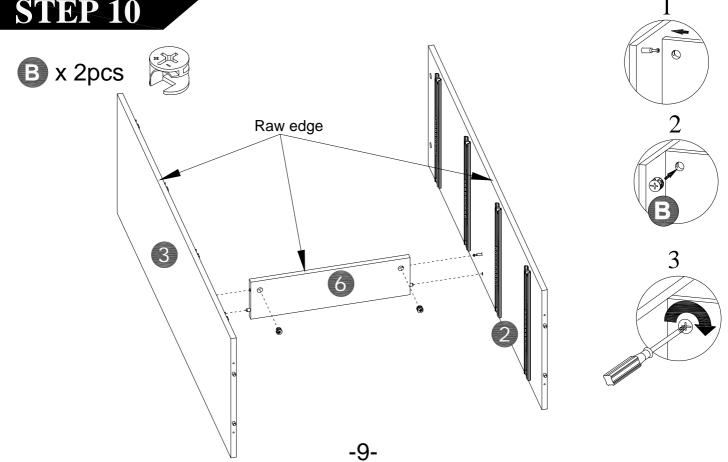





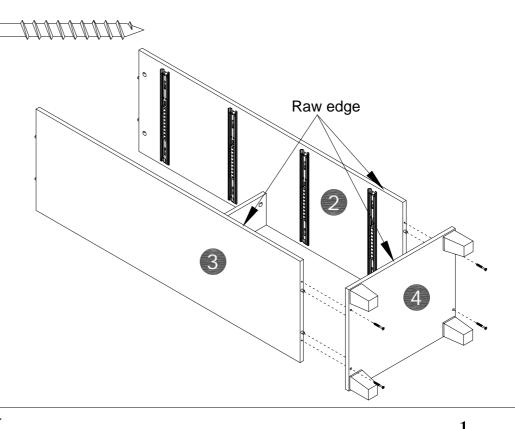






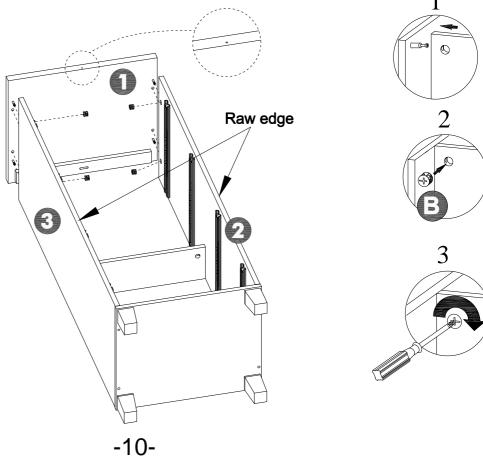

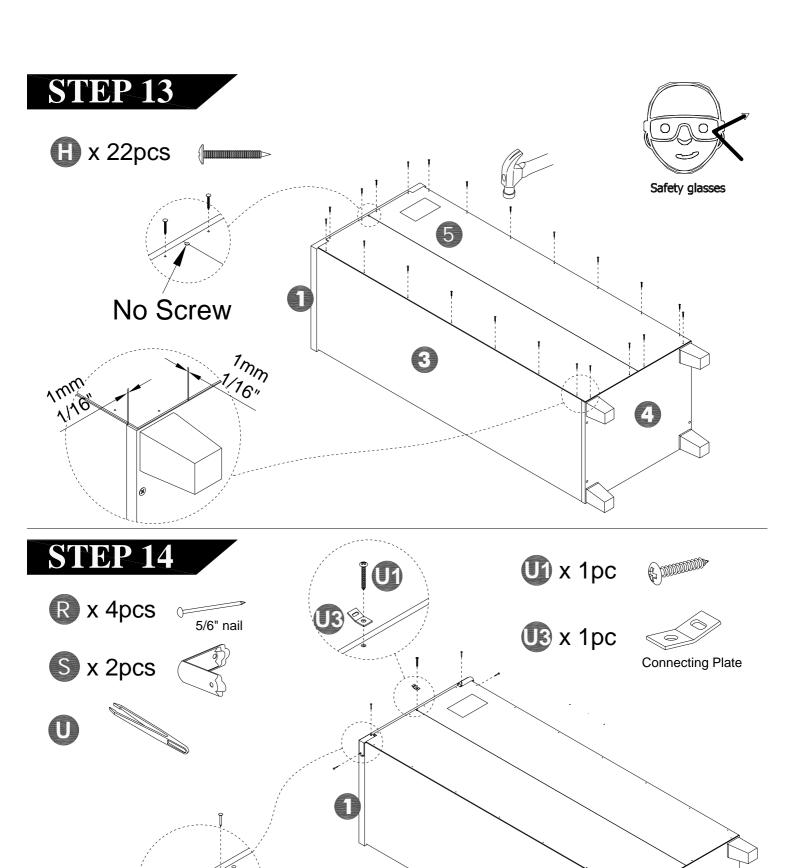


-11-


With assistant carefully flip unit over.

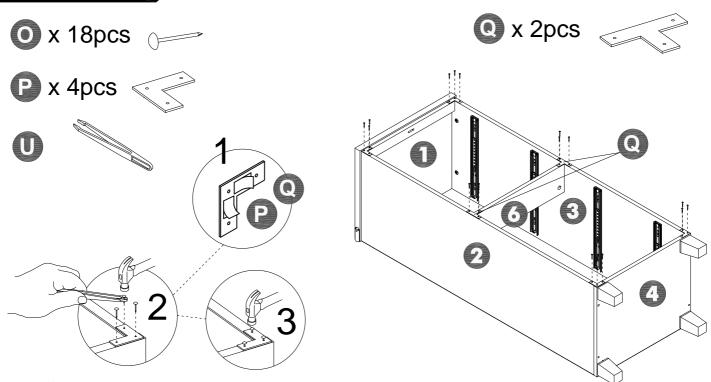

Peel off the adhesive sticker's protective paper and bond it onto the designated position before secure with nails.

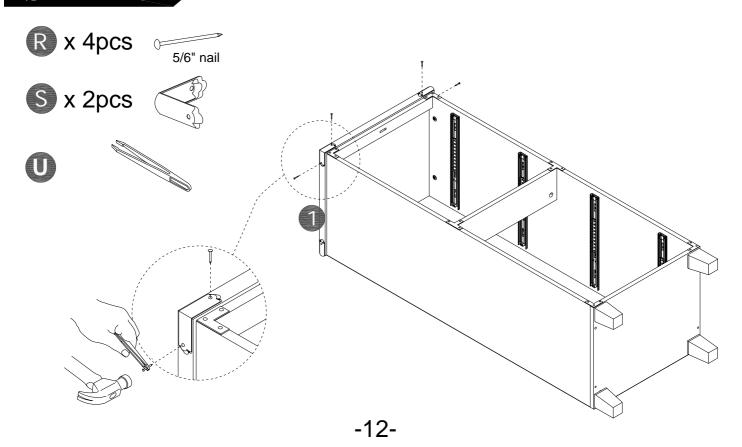

- -Move unit to final location.
- -Adjust drawer fronts as shown below.
- Step1--Loosen screws on back of drawer front brackets as shown.
- Step2--Position drawer front as required.
- Step3--Tighten screws while holding drawer front in position.

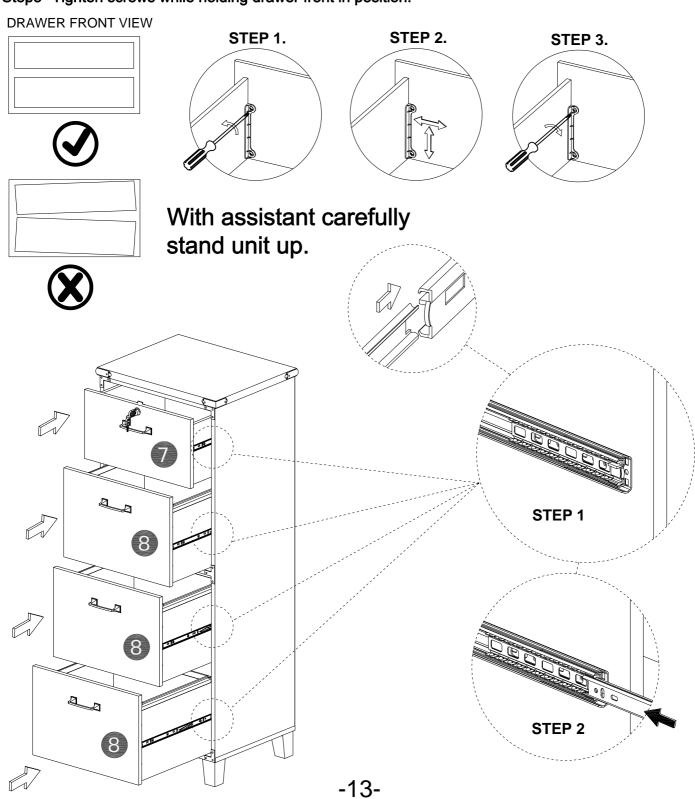

U₄ x 1pc

- 1. Place unit in desired location.
- 2. Mark stud location on the wall, 1" below top and side of unit.
 3. Drill 5/16"hole 2" deep at marks on
- the wall.

