
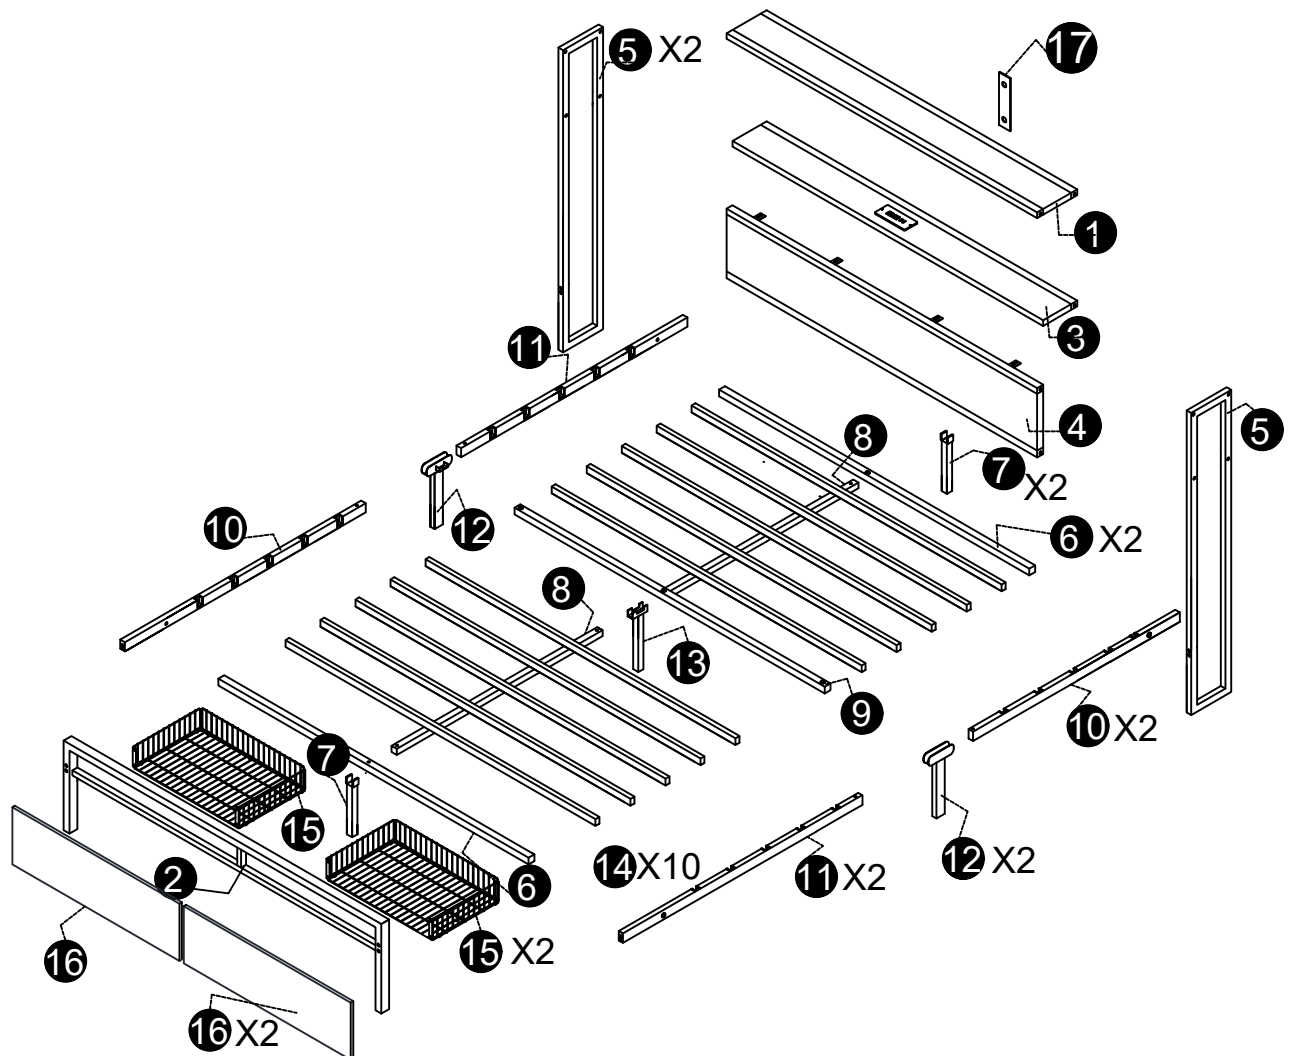
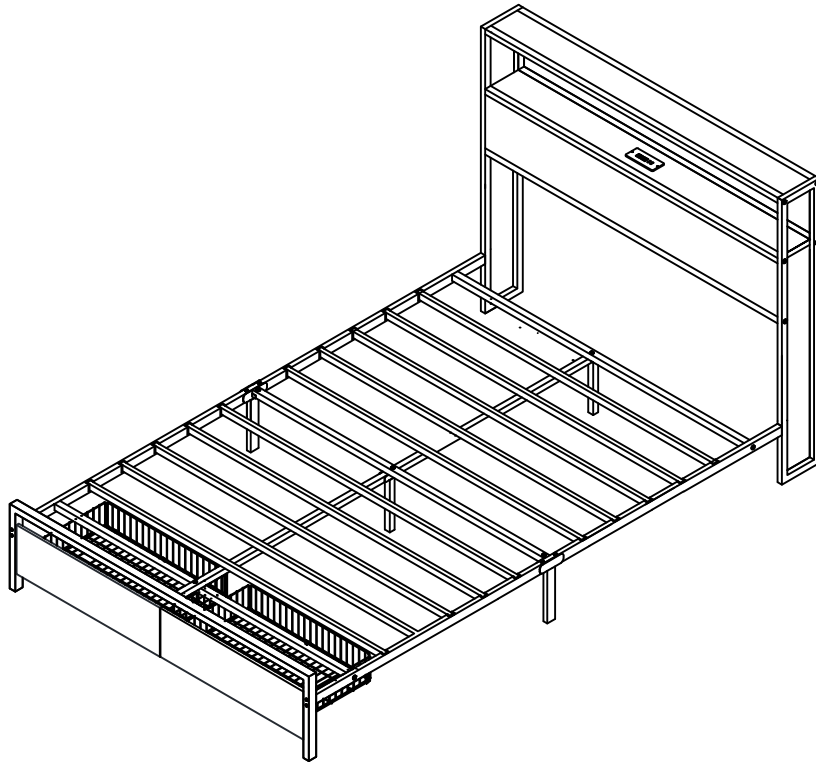

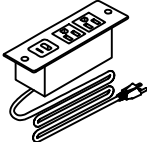




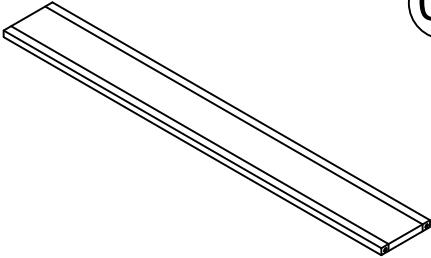
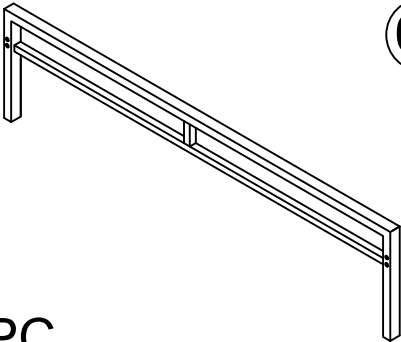
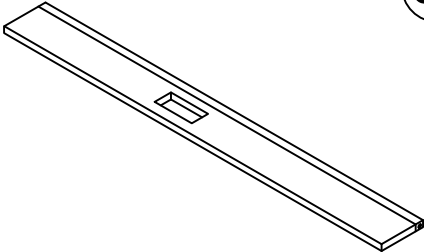
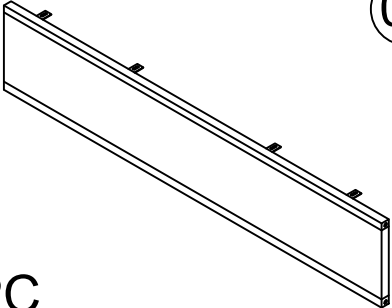
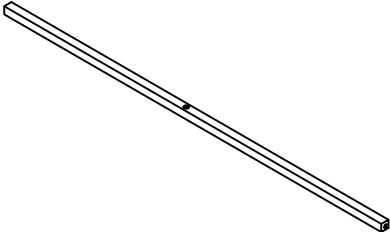
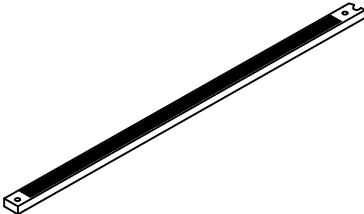



KING BED ASSEMBLY

Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

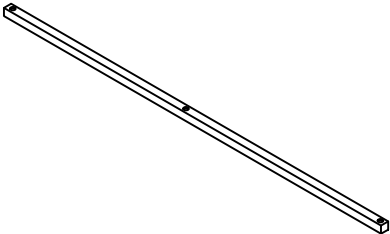


A		M8*40mm	12PCS	H	 M4	1PC
B		M8*55mm	7PCS	I		1PC
C		M6*40mm	14PCS	J		2PCS
D		M6*12mm	16PCS	K		4PCS
E		M4*12mm	2PCS	L		8PCS
F		M6*16mm	2PC	M		4PCS
G		M5	1PC			

 01	 02	 03
1PC	1PC	1PC
 04	 05	 06
1PC	2PCS	2PCS
 07	 08	 09
2PCS	2PCS	1PC

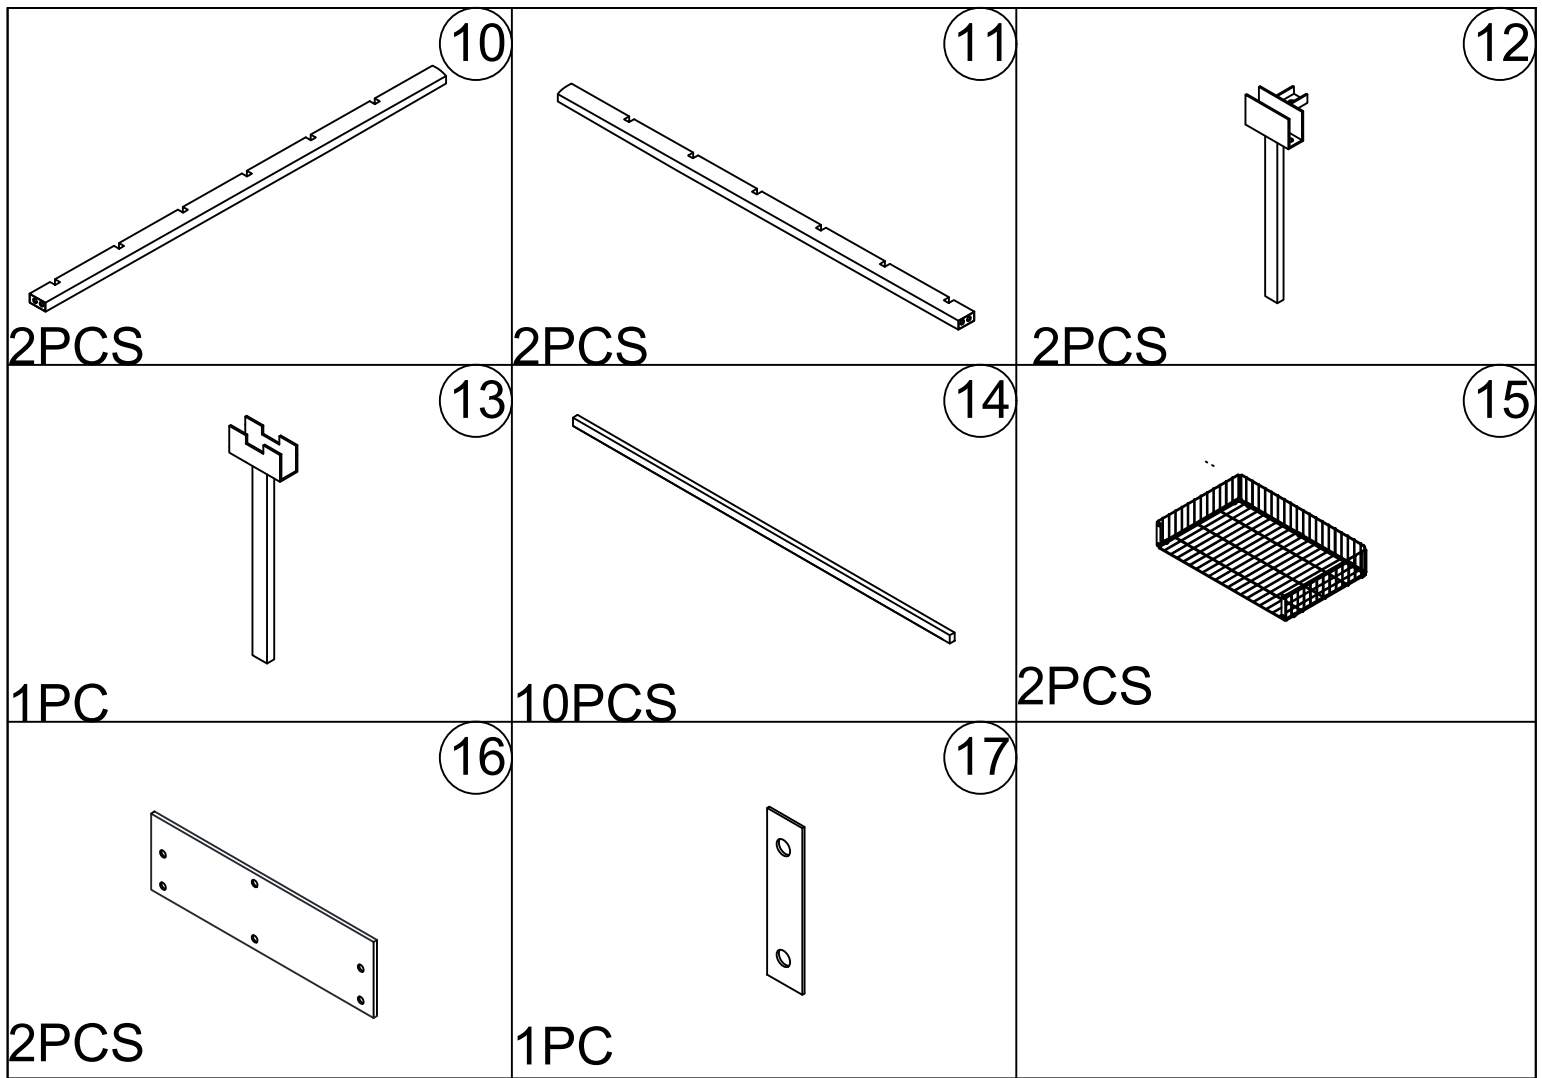


Step1

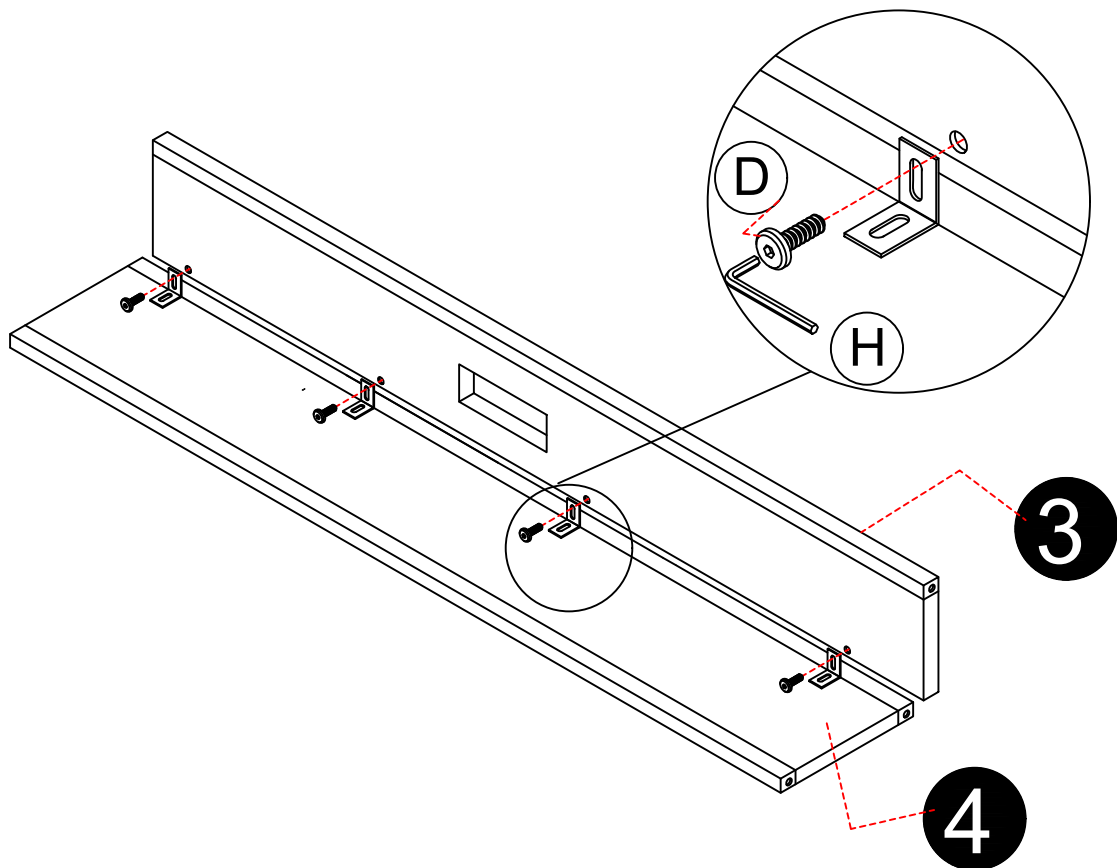


D	 M6*12MM	4pcs
H	 M4	1pc


Step2

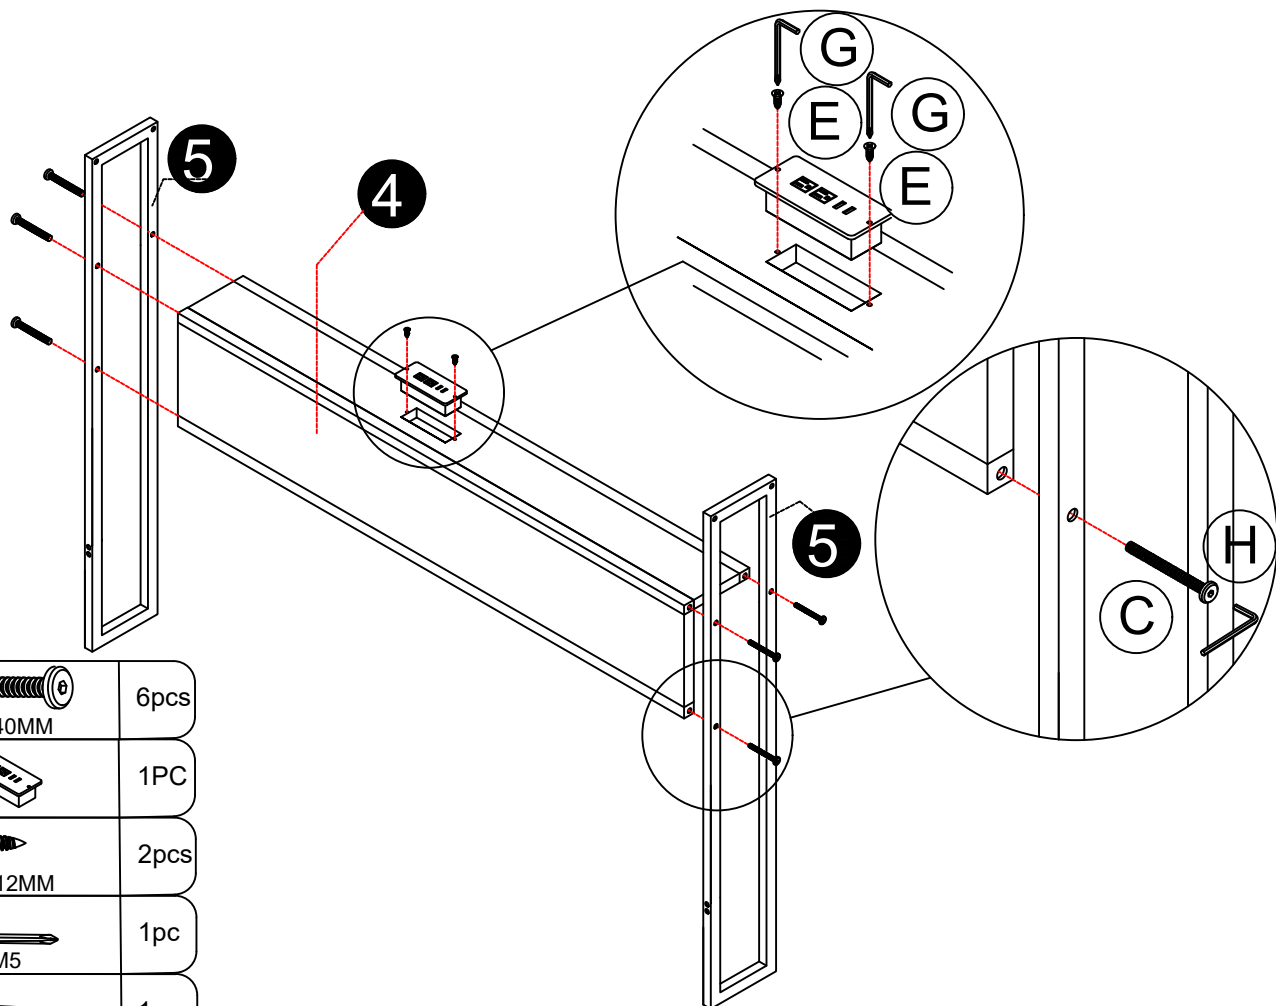

Step3

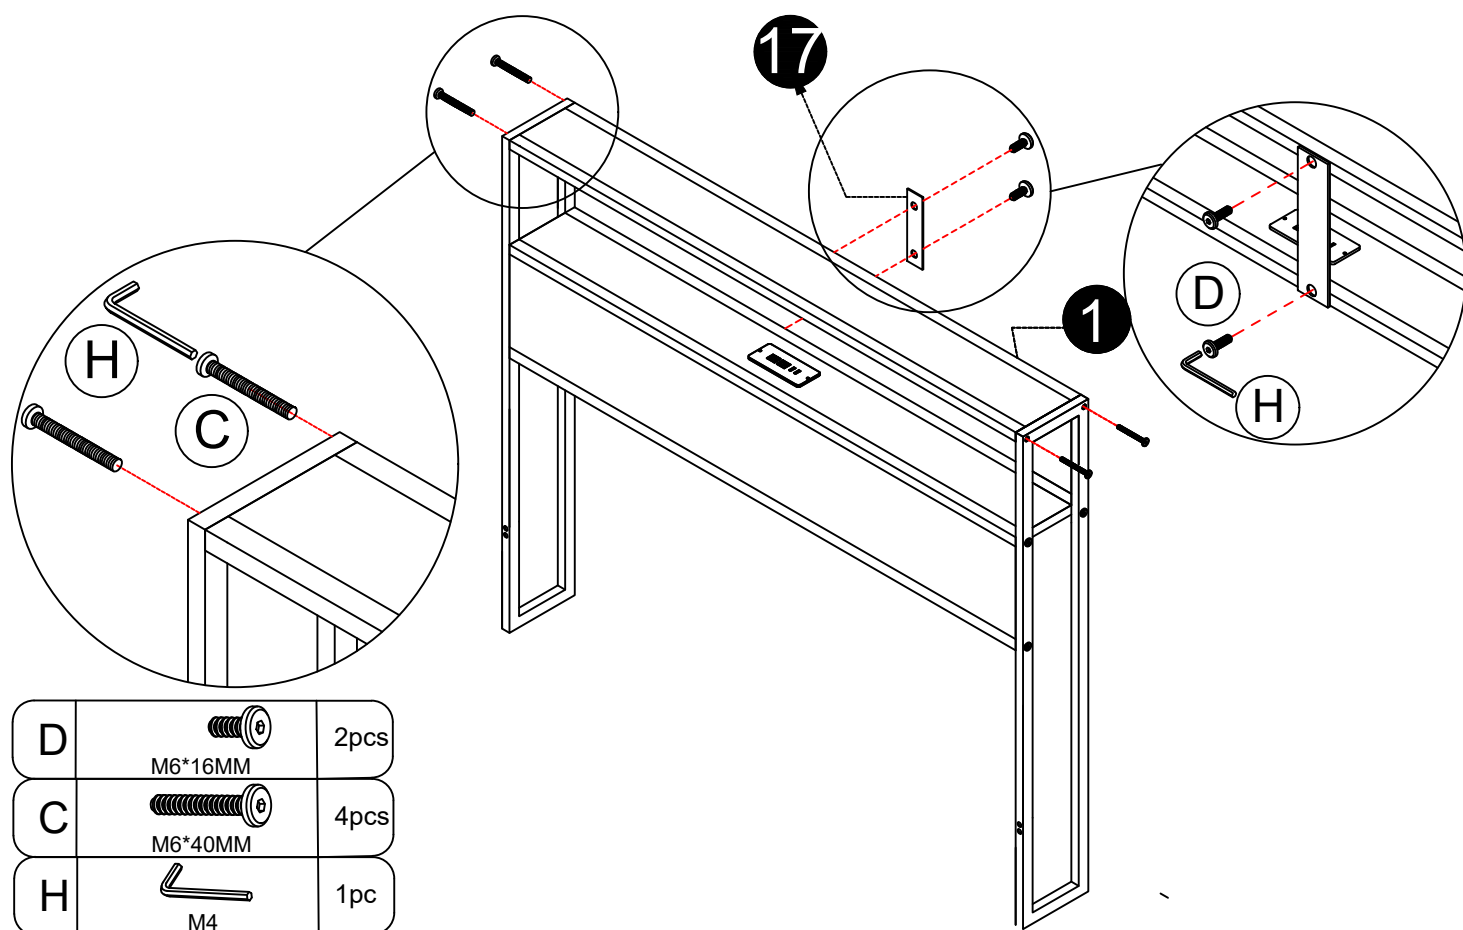


Step4

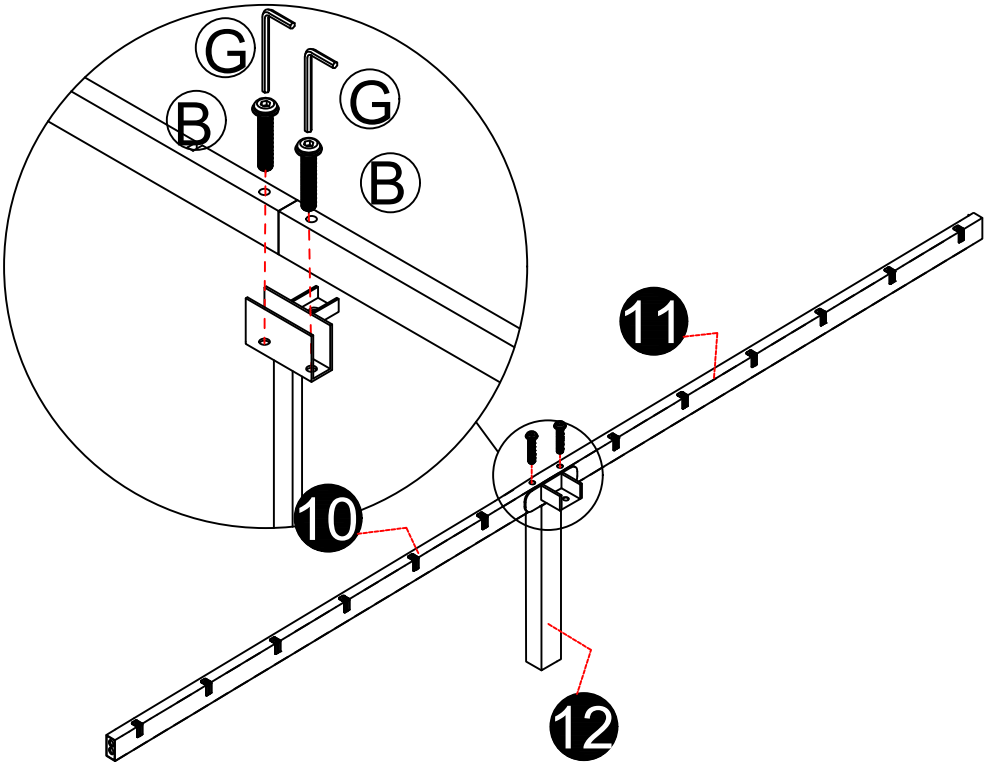


B	 M8*55MM	4pcs
G	 M5	1pc


X 2

Step5

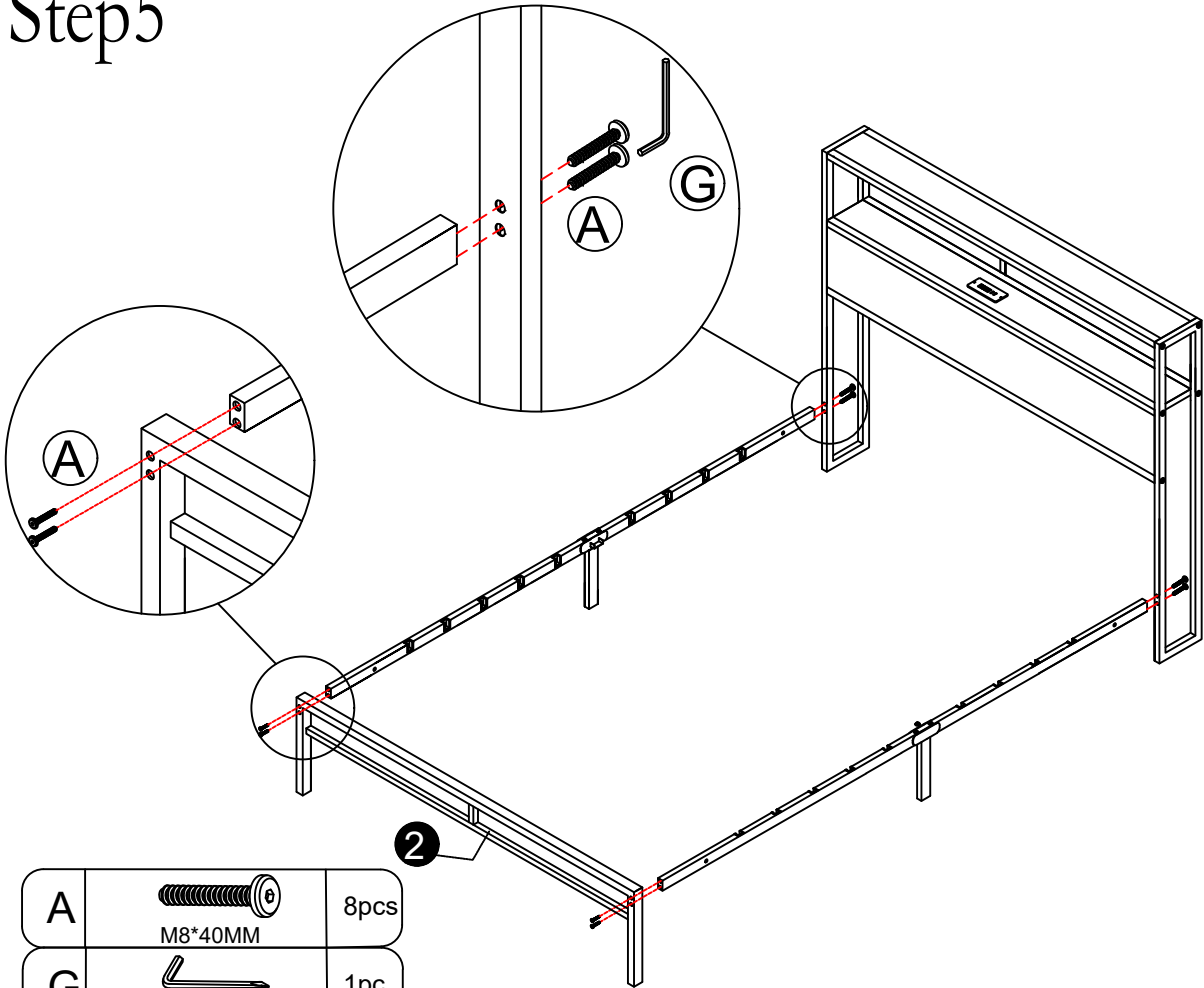


A	 M8*40MM	8pcs
G	 M5	1pc

Step6

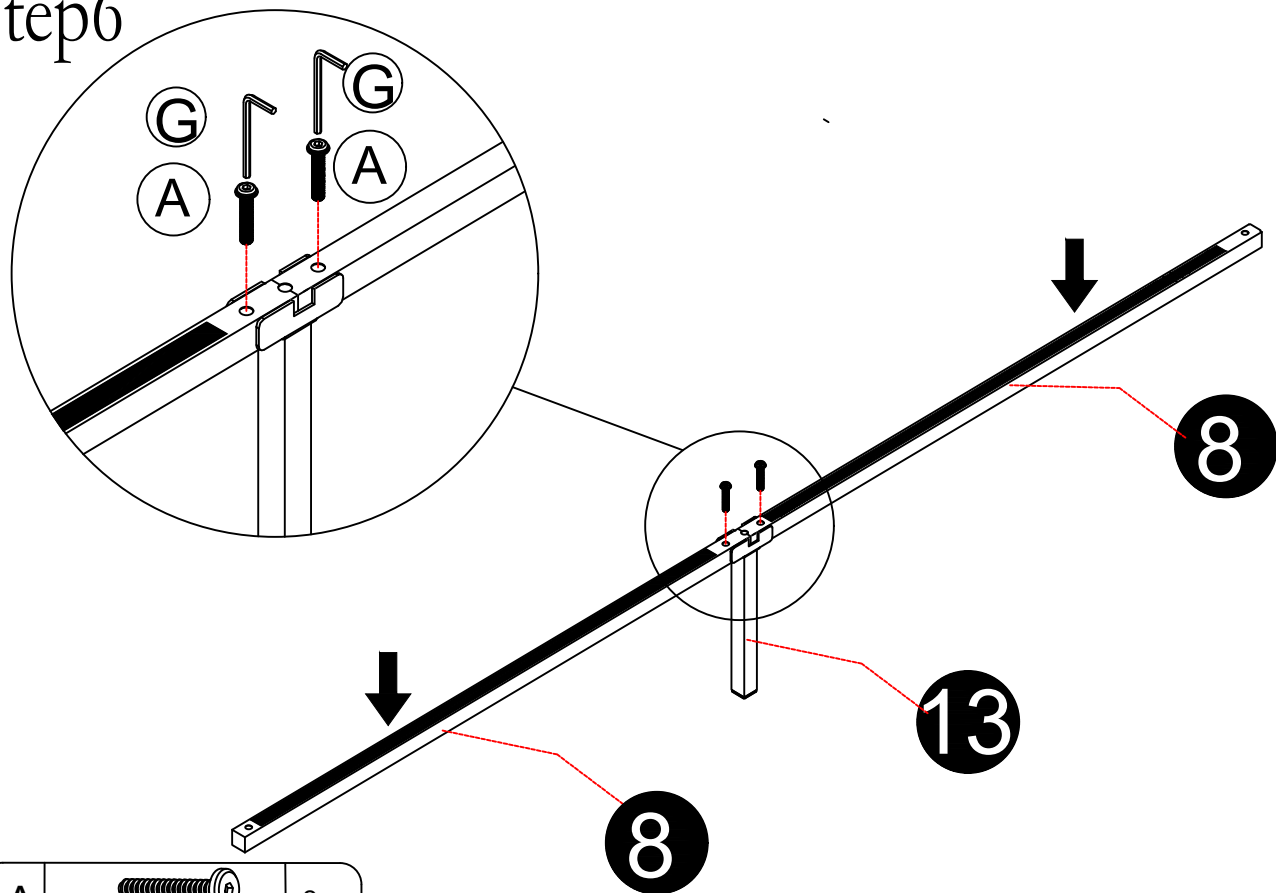


A	 M8*40MM	2pcs
G	 M5	1pc



Step7

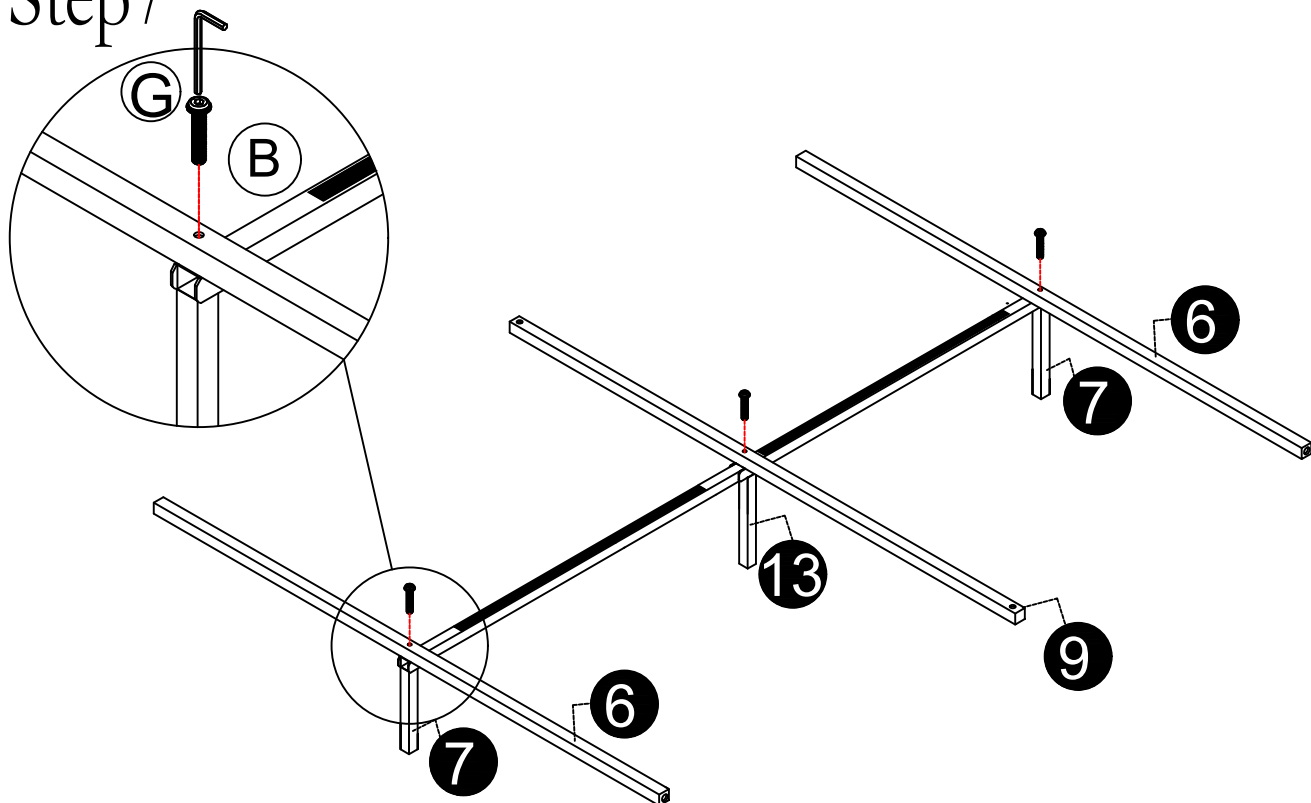

B	 M8*55MM	3pcs
G	 M5	1pc


Step8

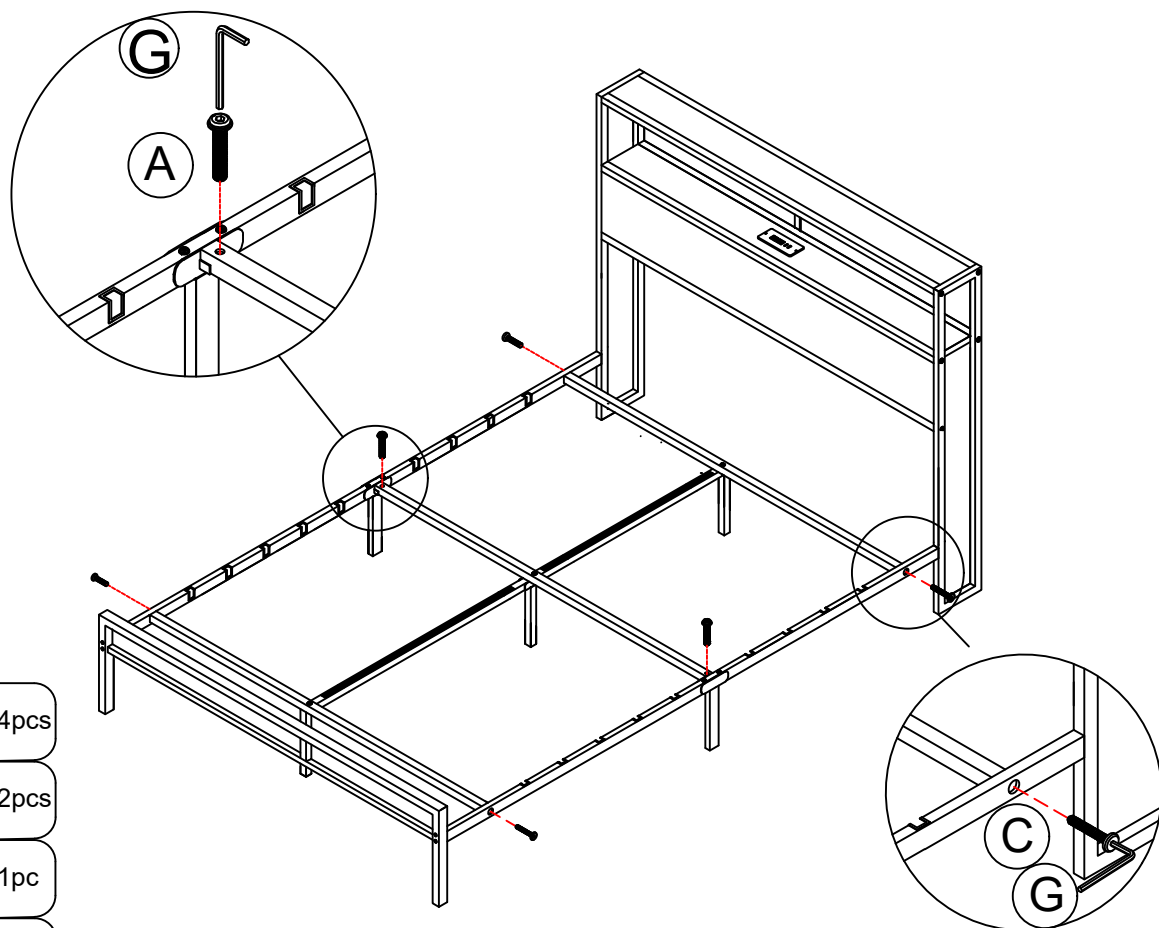


C	 M6*40MM	4pcs
A	 M8*40MM	2pcs
G	 M5	1pc
H	 M4	1pc

Step9

Tear off the protective paper on the back of the four anti-collision corner protectors and stick them on the corners at the head and tail of the bed to prevent collision

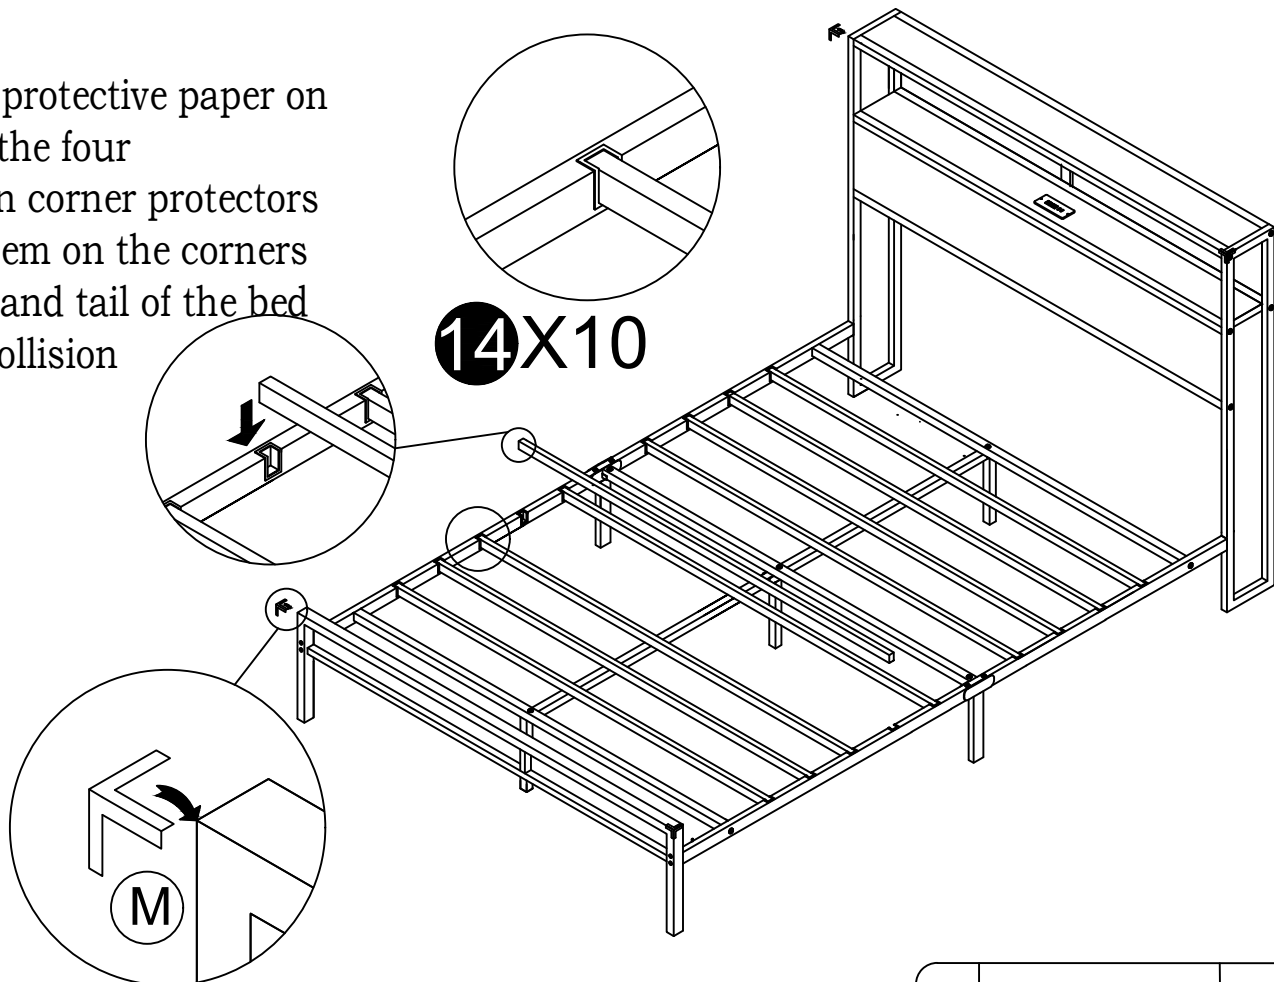


M		4pcs
---	---	------

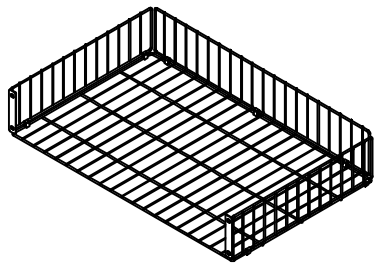

15

2PCS

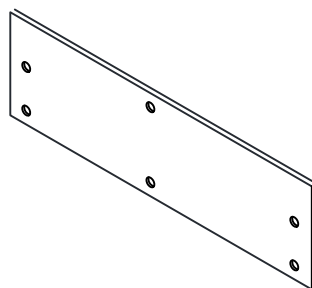

16

2PCS



M6*12MM

D


10PCS



M6*16MM


F

2PCS

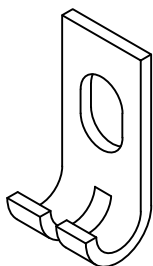


J

2PCS

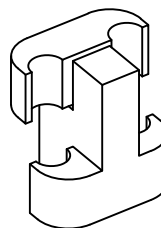


K

4PCS

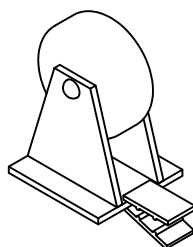

L

8PCS

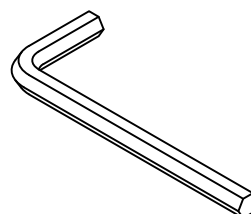


H

1PC

M4

Step10

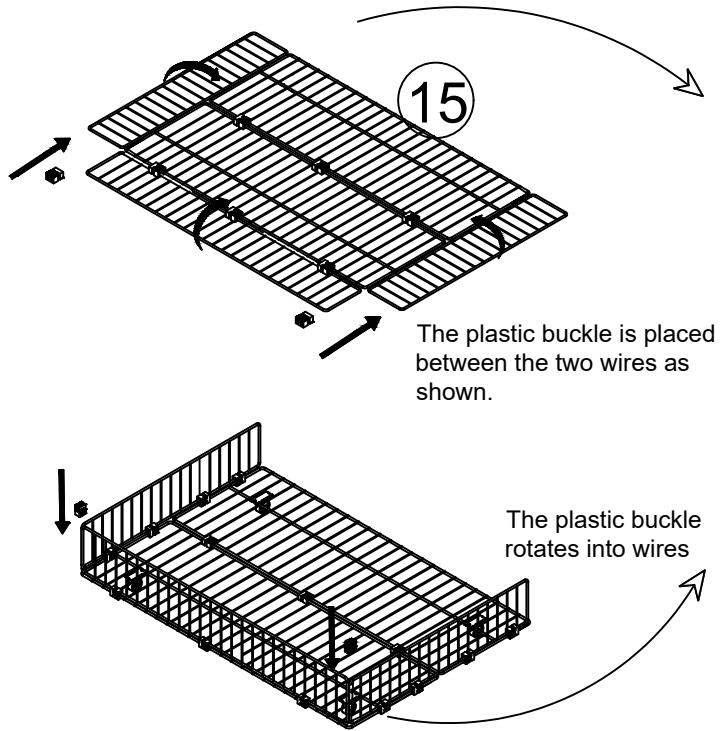


K



4PCS

Step11

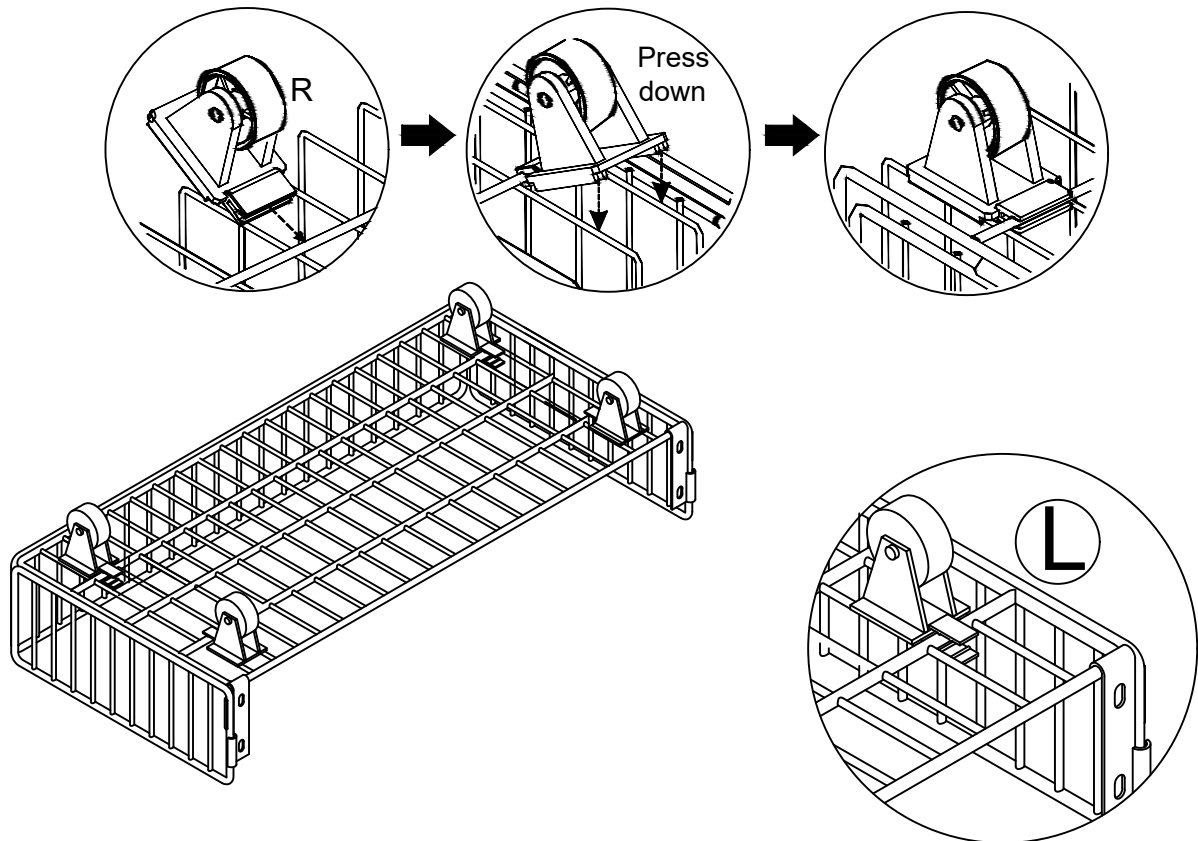


L




8PCS

Step12

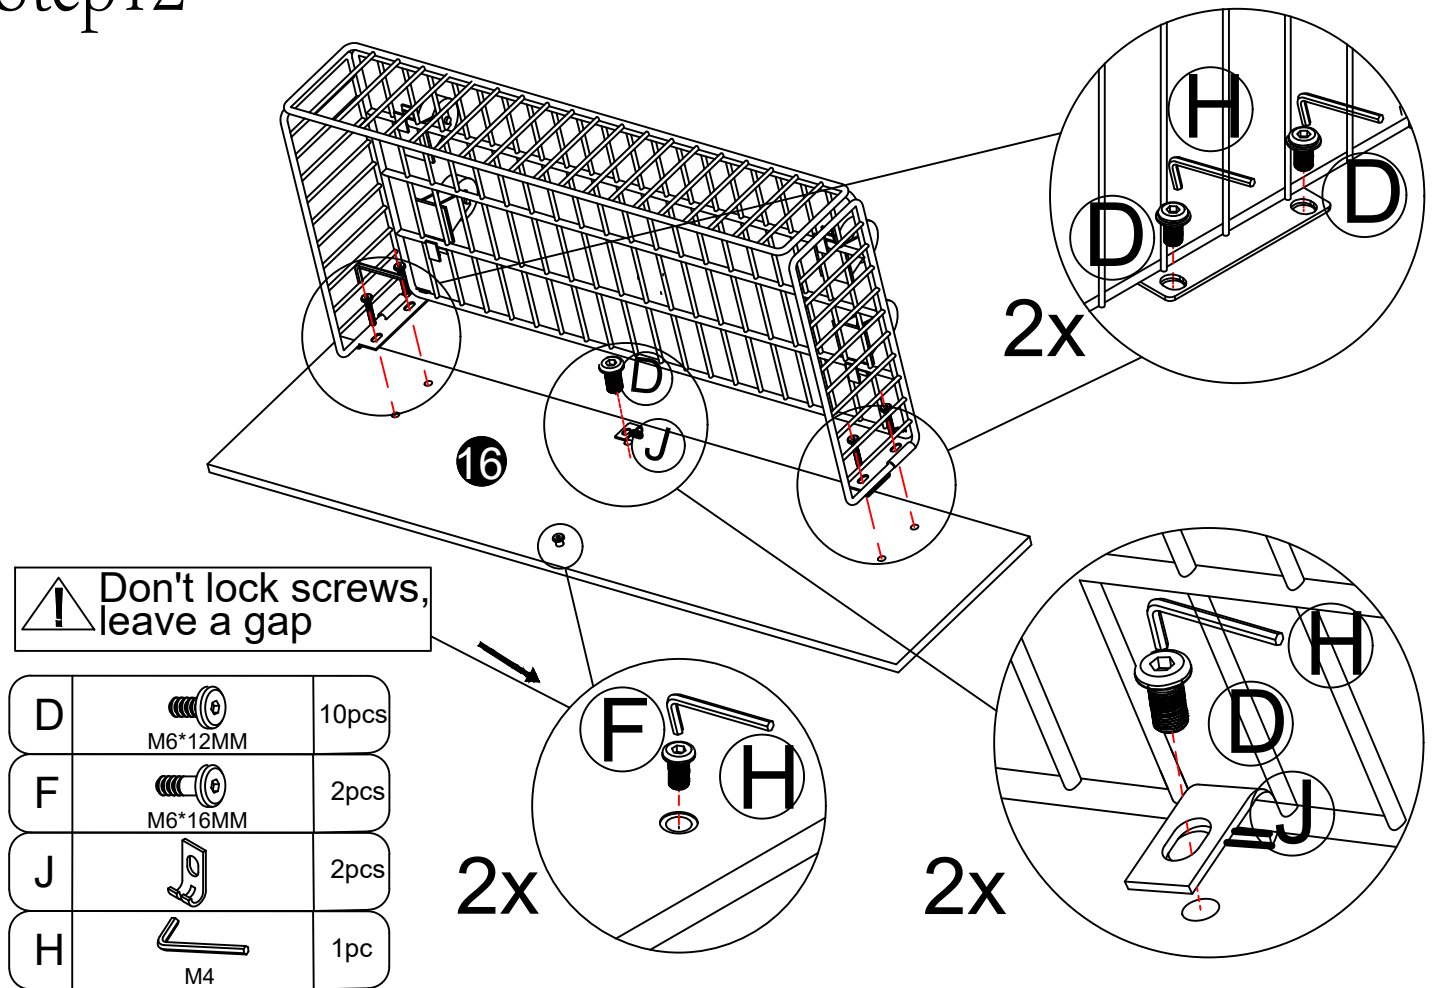

Step13

- 1) Hold the rear screw to the tail hole of the bed.
- 2) Press the drawer to push the screw out of the hole.

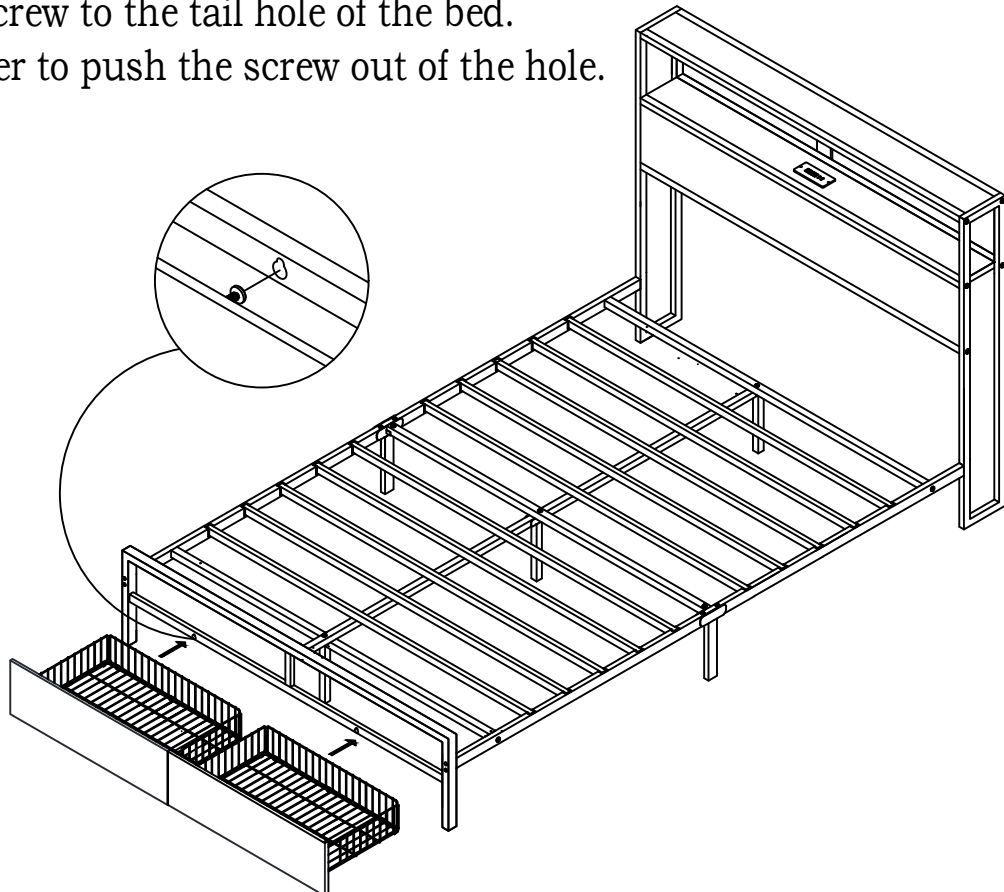

Step14

