


## ASSEMBLY INSTRUCTIONS

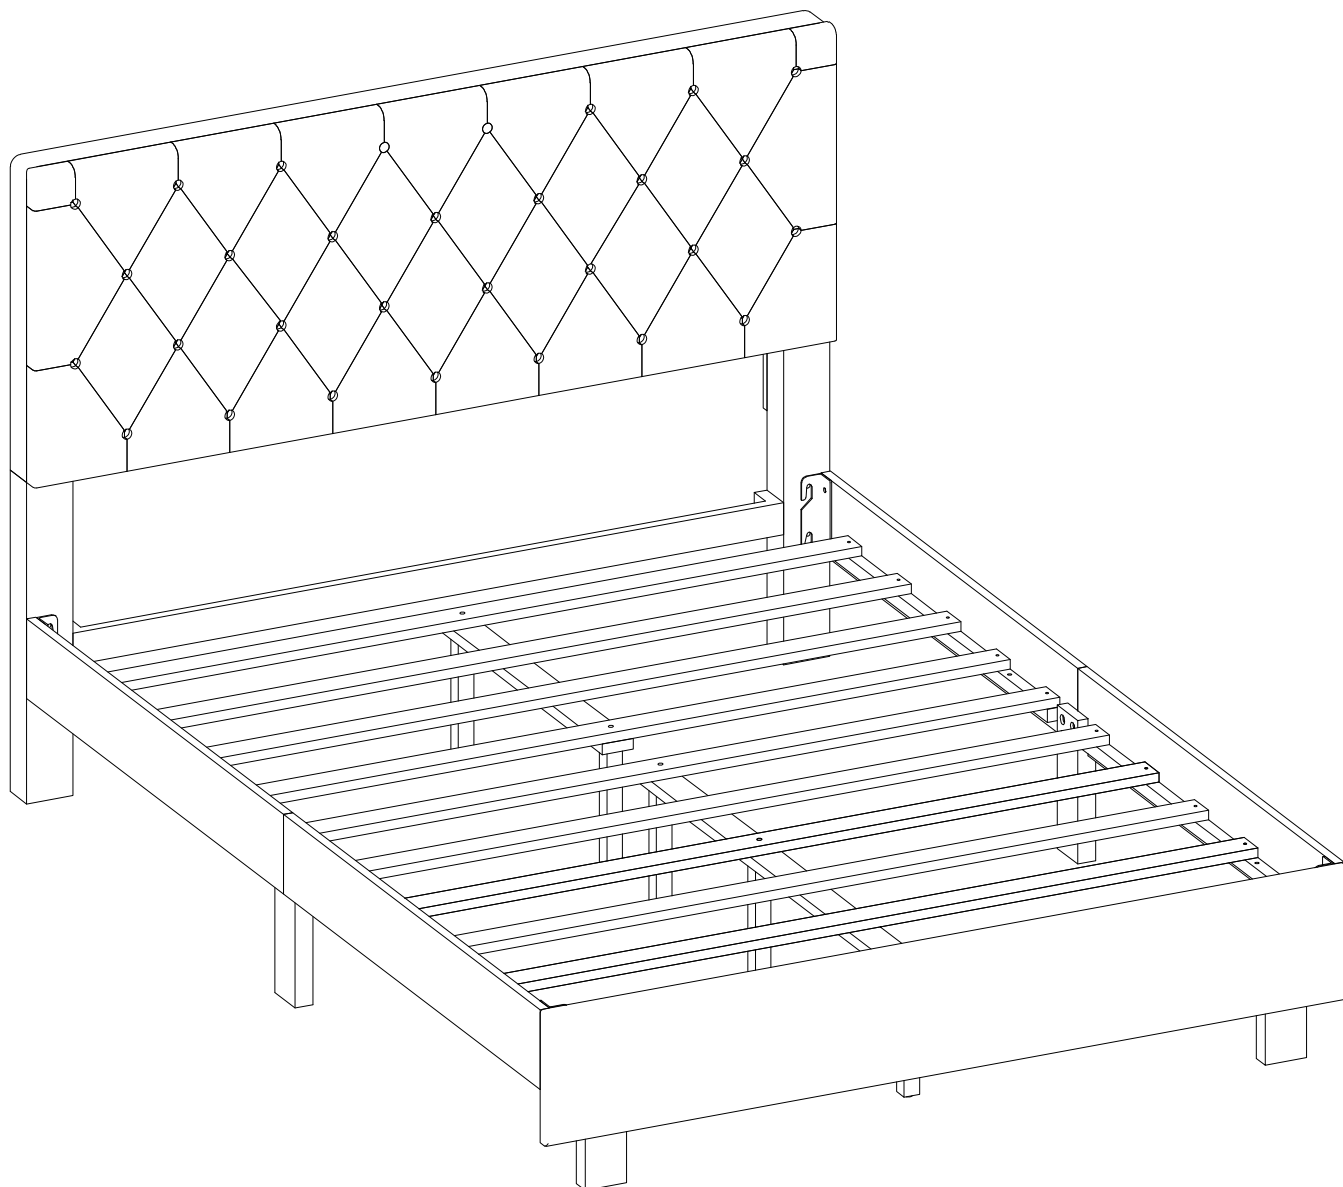






Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipment.




# ASSEMBLY INSTRUCTIONS









Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipment.
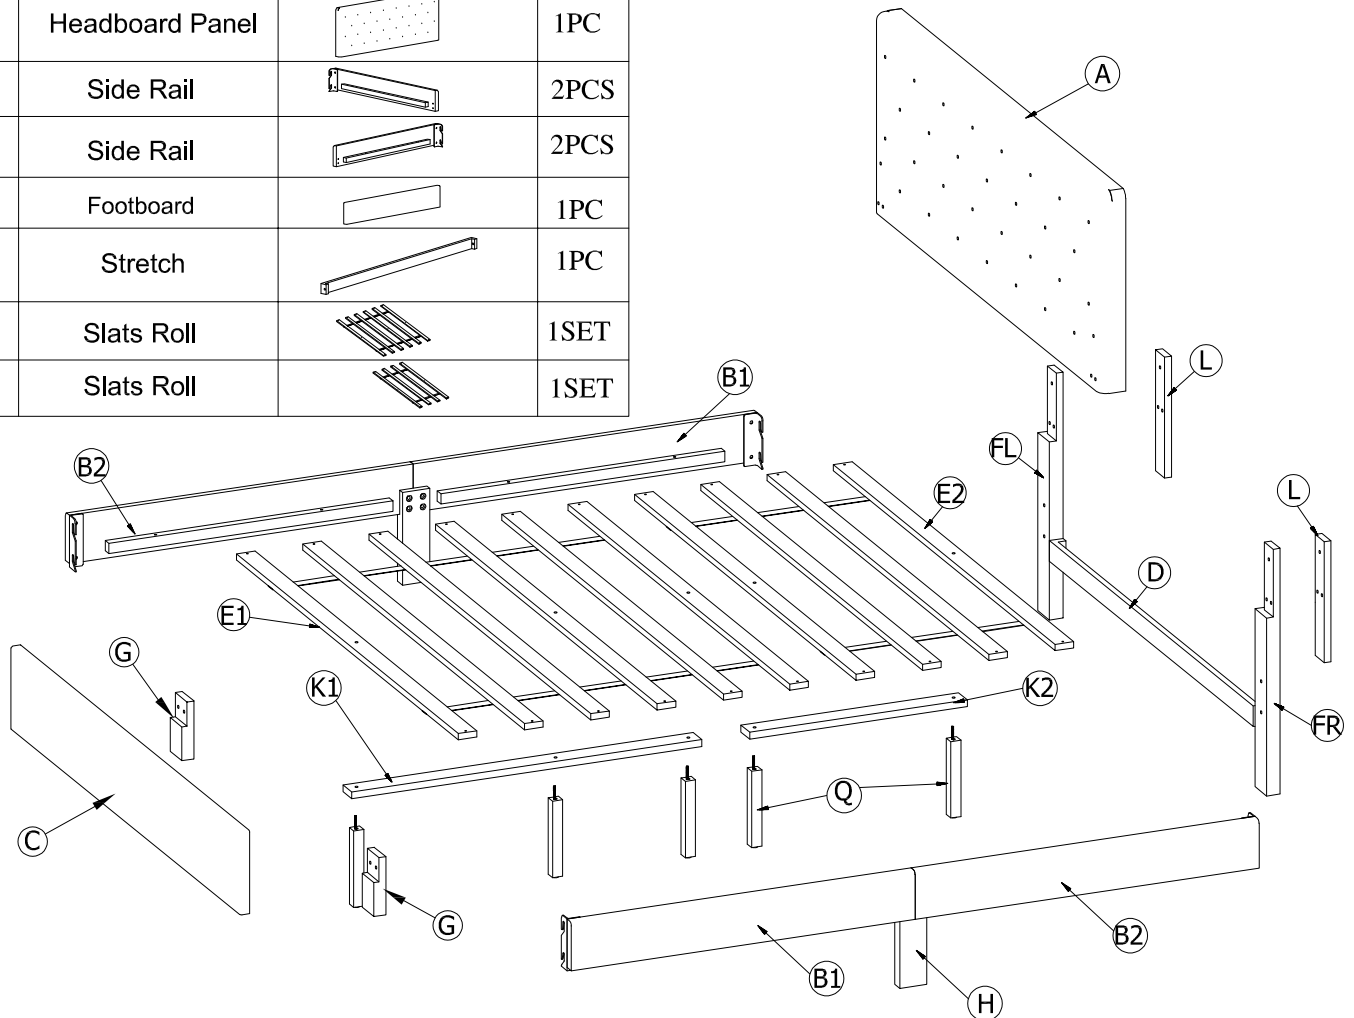
## PART LIST : BF321F-R-VN








No.	Description	Sketch	Quantity
A	Headboard Panel		1PC
B1	Side Rail		2PCS
B2	Side Rail		2PCS
C	Footboard		1PC
D	Stretch		1PC
E1	Slats Roll		1SET
E2	Slats Roll		1SET



## PART LIST :BF321F-R-VN

No.	Description	Sketch	Quantity
FL	HEAD FOOT L		1PC
FR	HEAD FOOT R		1PC
L	Foot transplant L		2PCS
G	Bun Foot		2PCS
H	Side Rail Leg		2PCS
Q	Support Leg		5PCS
K1	Center Support Slat		1PC
K2	Center Support Slat		1PC

## HARDWARE LIST : BF321F-R-VN

No.	Description	Sketch	Size	Quantity
1	Screw		Ø8*30MM	20PCS +2PCS
2	Bolt		Ø $\frac{5}{16}$ *35MM	12PCS
3	Bolt		Ø $\frac{5}{16}$ *45MM	2PCS
4	Bolt		Ø $\frac{5}{16}$ *55MM	6PCS
5	Flat Washer		M4*	20PCS +2PCS
6	Spring Washer		Ø8*	20PCS +2PCS
7	Allen Key		M4	1PC

## TOOLS REQUIRED (Not provided)




Screwdriver/Tournevis

# ASSEMBLY INSTRUCTIONS


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipment.





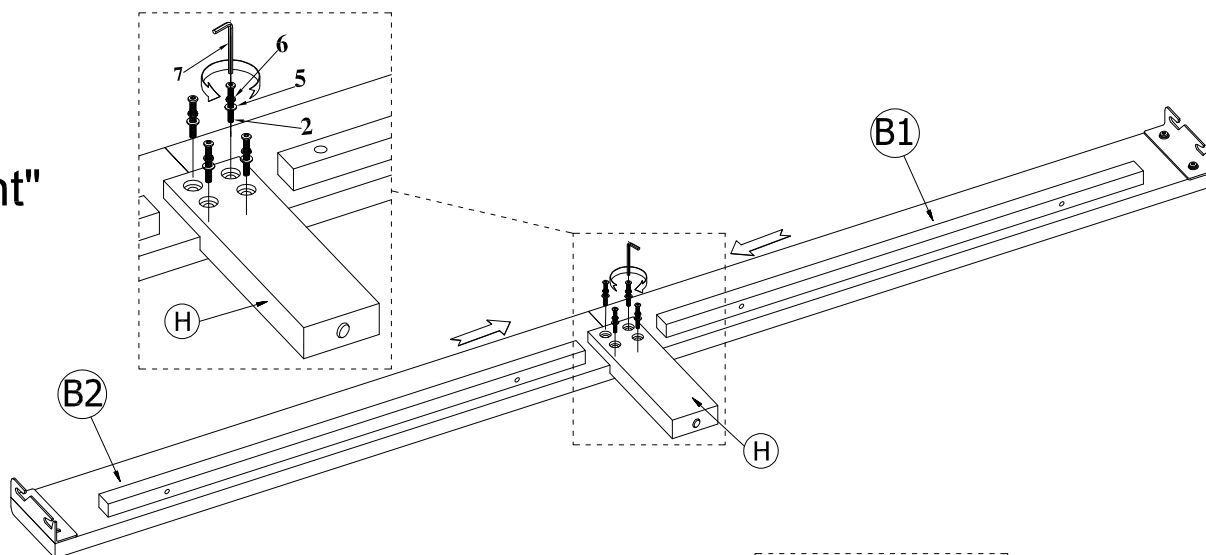

Step 1.

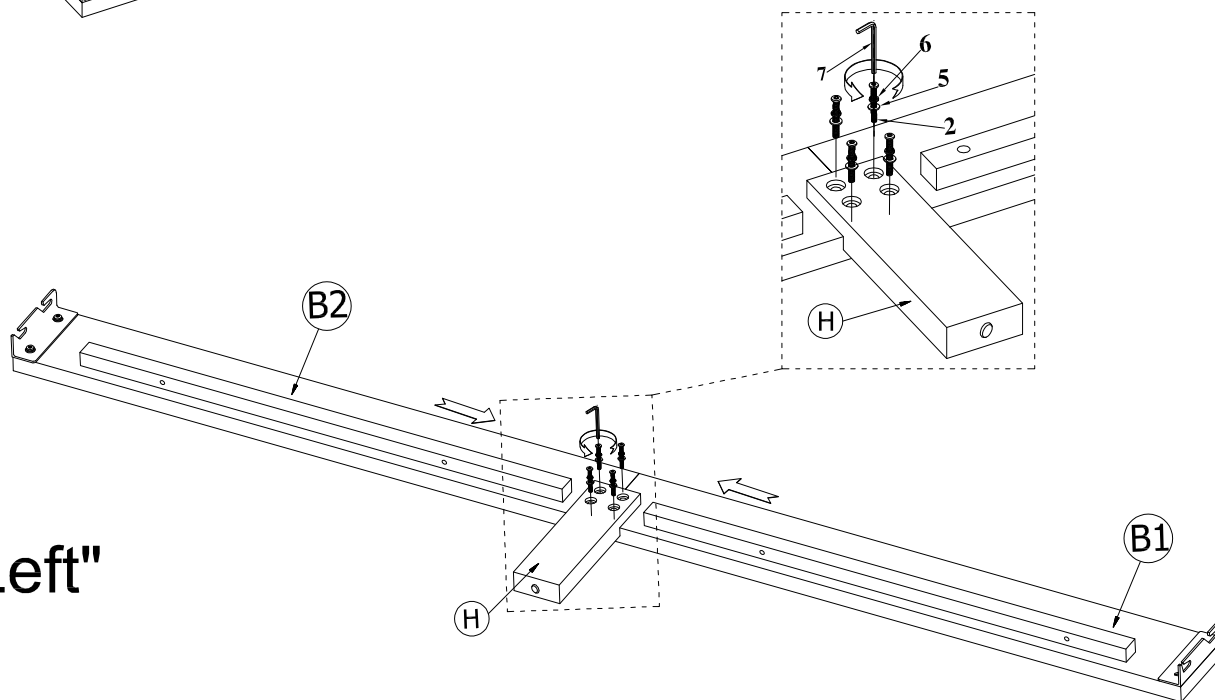"Right"



"Left"











2	Bolt		$\varnothing \frac{5}{16} \times 35\text{MM}$	8PCS
5	Flat Washer		M4*	8PCS
6	Spring Washer		$\varnothing 8^*$	8PCS
7	Allen Key		M4*63MM	1PC
H	Side Rail Leg			2PCS
B1,2	Side Rail			4PCS
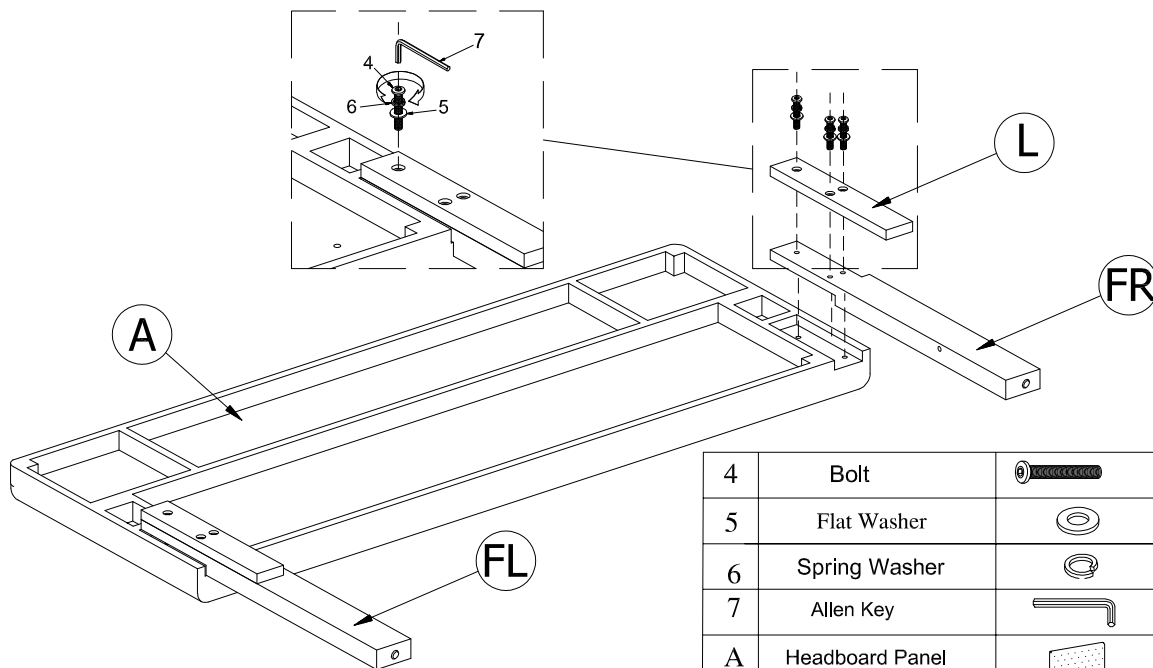
# ASSEMBLY INSTRUCTIONS


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipment.






## Step 3.

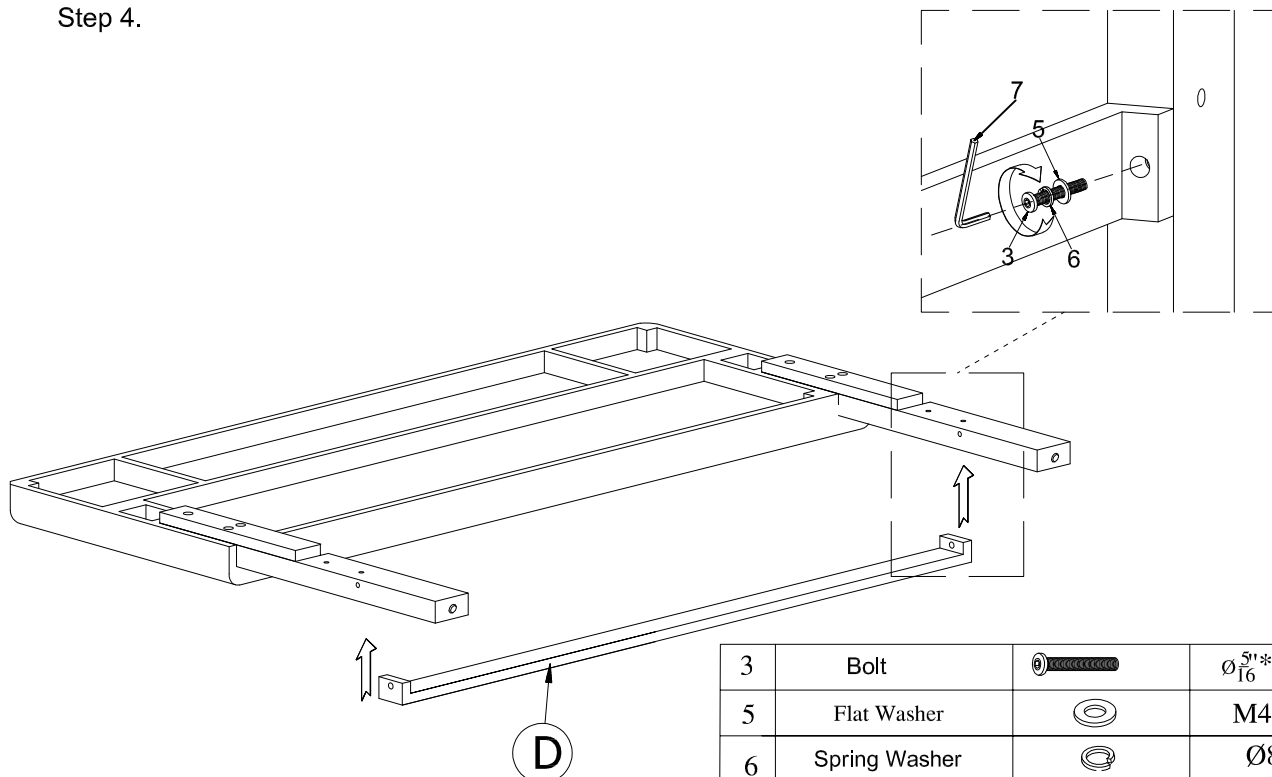

4	Bolt		Ø <sup>5/16</sup> * 55MM	6PCS
5	Flat Washer		M4*	6PCS
6	Spring Washer		Ø8	6PCS
7	Allen Key		M4	1PC
A	Headboard Panel			1PCS
FL/R	HEAD FOOT L/R			2PCS
L	Foot transplant			2PCS

## Step 4.










3	Bolt		Ø <sup>5/16</sup> * 45MM	2PCS
5	Flat Washer		M4*	2PCS
6	Spring Washer		Ø8	2PCS
7	Allen Key		M4	1PC
D	Stretch			1PC
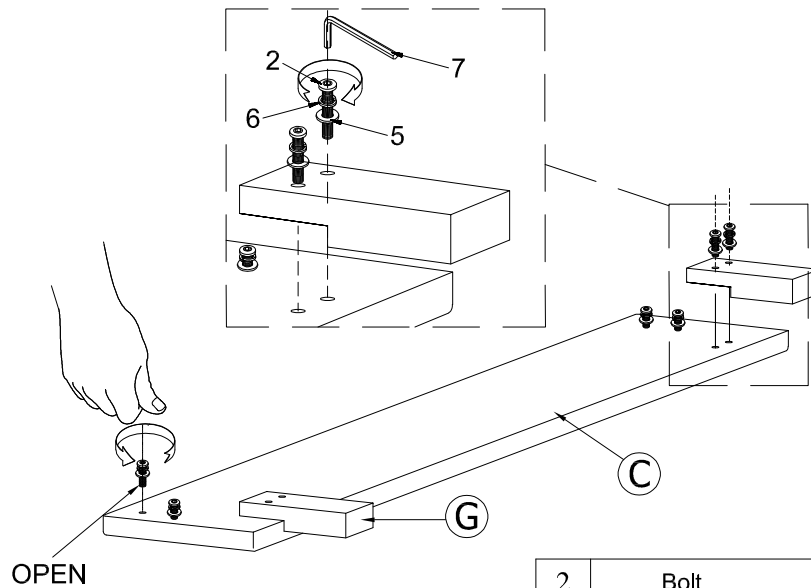
# ASSEMBLY INSTRUCTIONS


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipment.

Step 5 :



2	Bolt		$\varnothing \frac{5}{16}^* 35\text{MM}$	4PCS
5	Flat Washer		M4*	4PCS
6	Spring Washer		$\varnothing 8^*$	4PCS
7	Allen Key		M4*	1PCS
C	Footboard			1PCS
G	Bun Foot			2PCS


Step 6 :

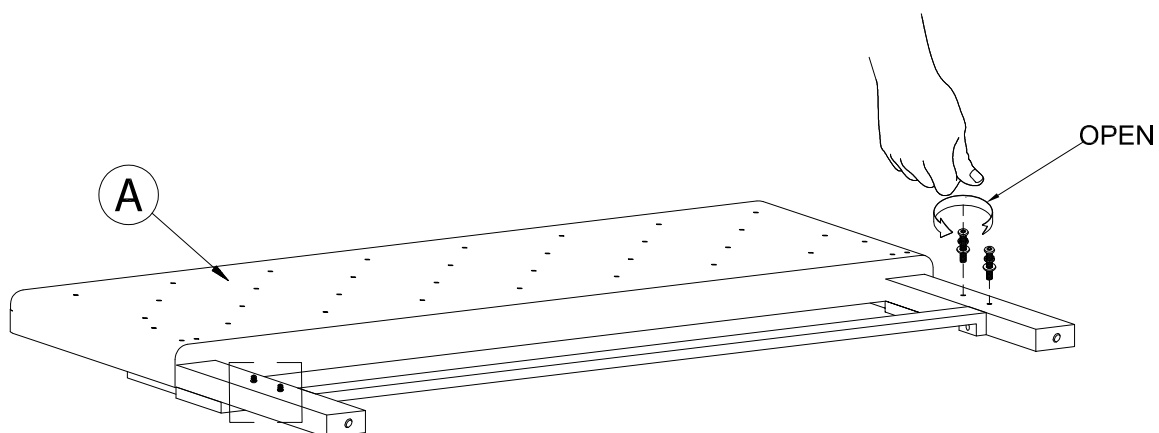

ASSEMBLY INSTRUCTIONS

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipment.

Step 7 :

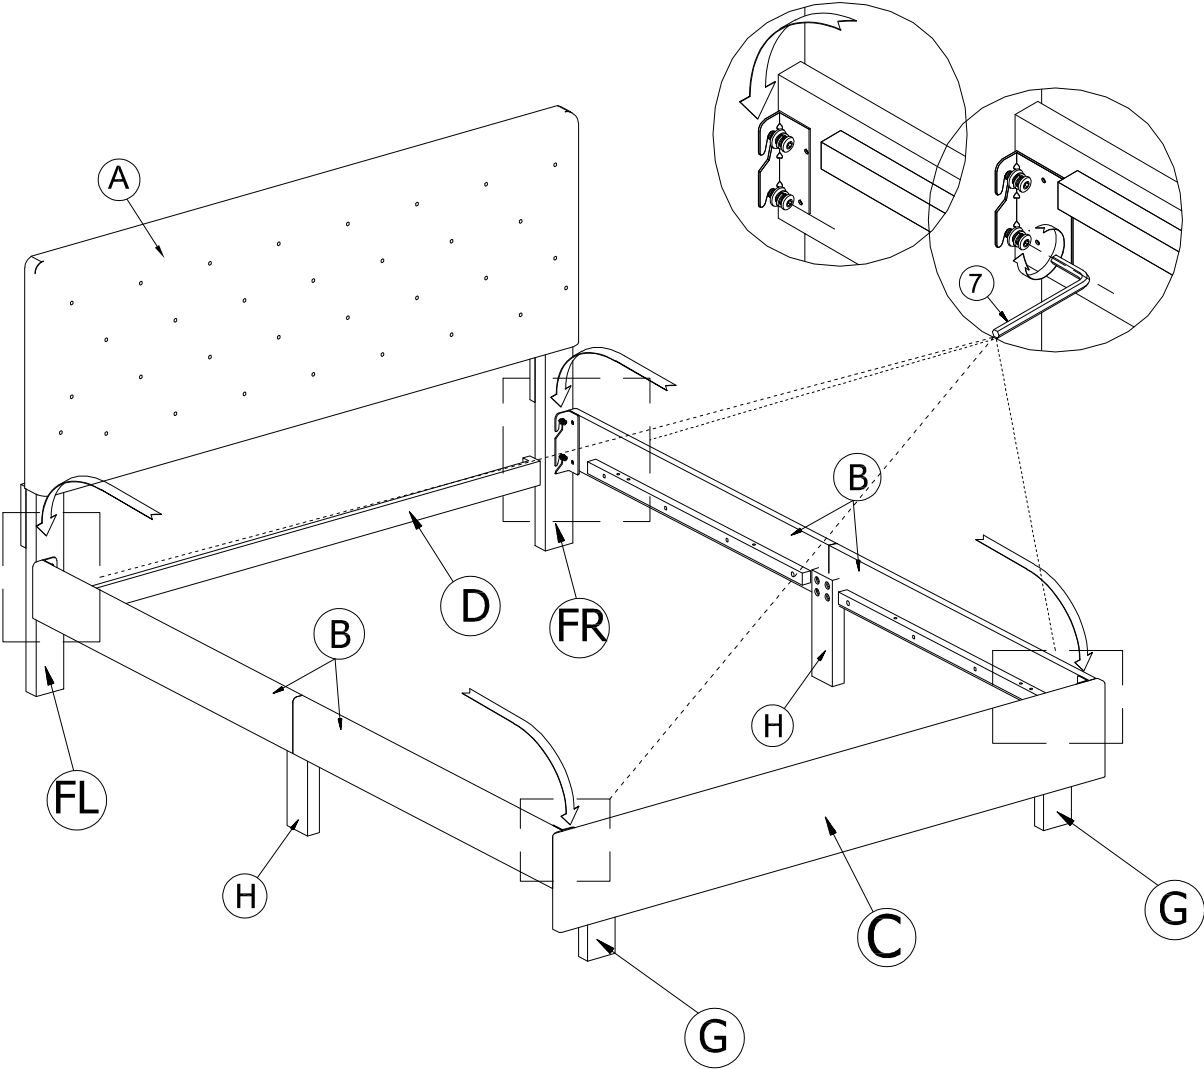


7	Allen Key		M4*	1PC
---	-----------	---	-----	-----

## ASSEMBLY INSTRUCTIONS

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipment.



Step 8.

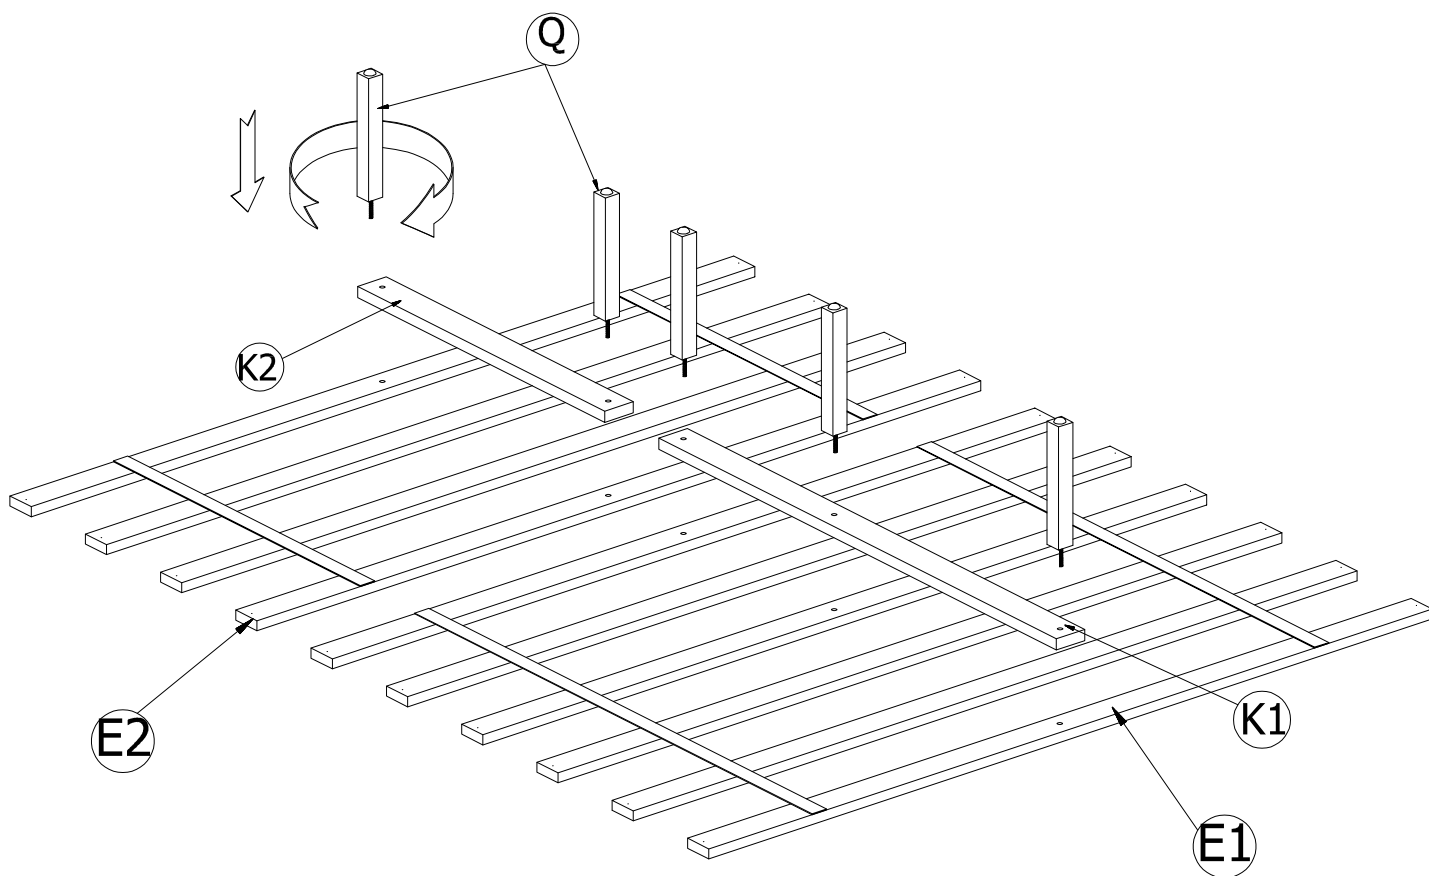

## ASSEMBLY INSTRUCTIONS

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipment.

Step 9.

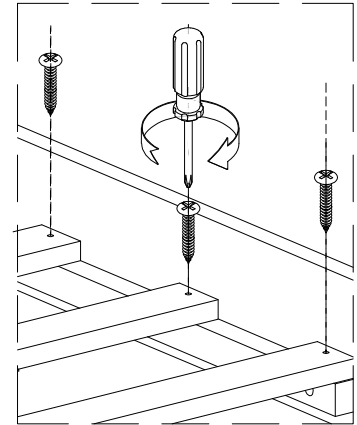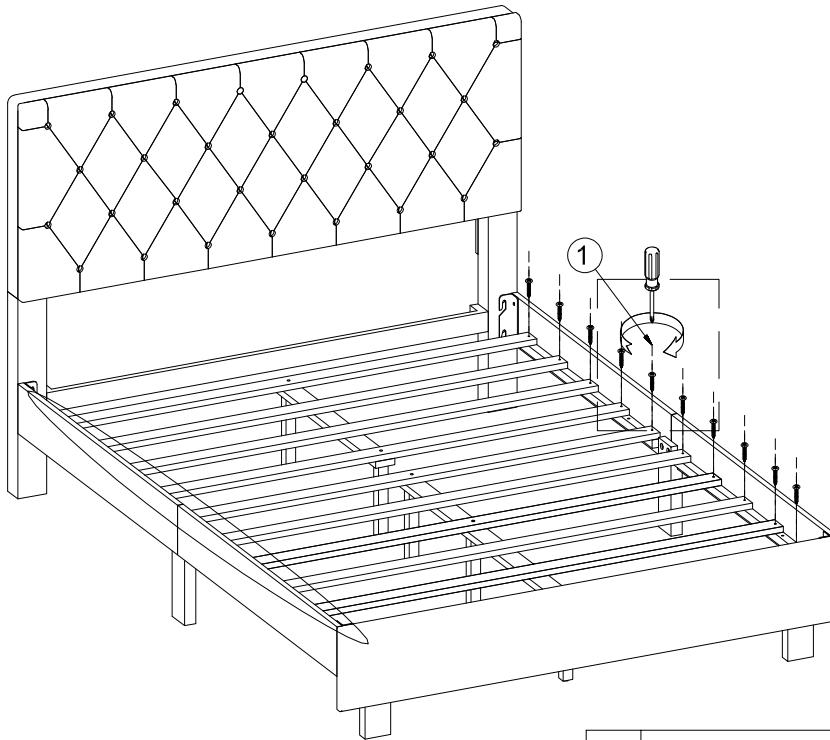

1

Screw



Ø 8\*30MM

20PCS

## Finish

