

ASSEMBLY INSTRUCTIONS


MODEL : B0165-10/11 / B0165-12
QUEEN BED (4+4)

(Box 1)


BOX OF HEADBOARD & FOOTBOARD

No	ITEM	Qty
A	Headboard	1 pc
B	Headboard Leg (L)	1 pc
C	Headboard Leg (R)	1 pc
D	FOOTBOARD	1 pc
E	Bed Slats	4 pcs
F	Bed Slats Support 30x30x225mm	4 pcs

STEP 1 : Attach Head Board Leg (C) & (D) to Head Board (A) as shown using JCBC BOLT (1) with Spring Washer (2), Flat washer (3) and securing with ALLEN KEY (4).

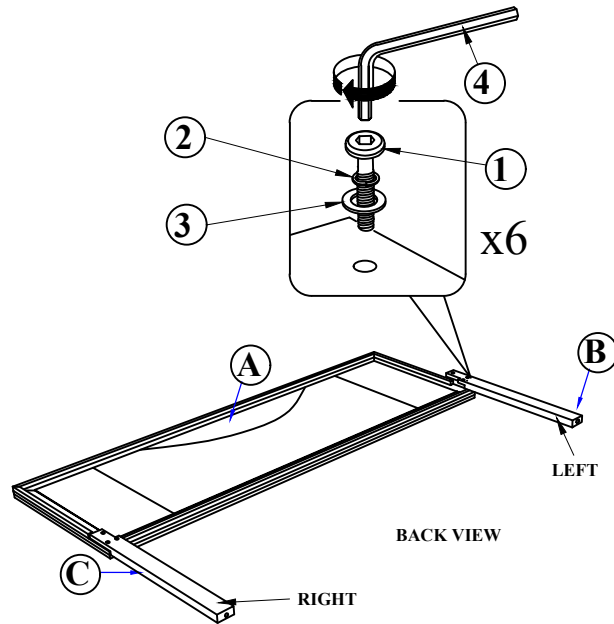

STEP 2 : Hook SIDE RAIL (G) TO HEAD BOARD (A) closely and push down to fit. repeat step 2 with other end of rail to hook onto FOOTBOARD (D).

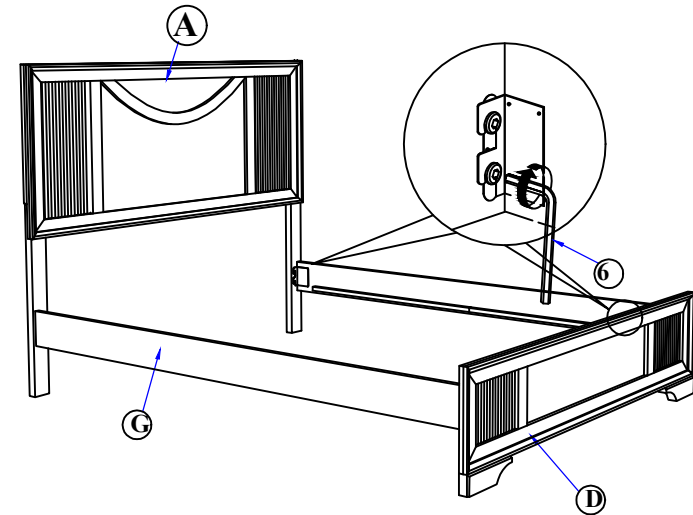

(Box 2)

BOX OF SIDE RAIL

No	ITEM	Qty
G	Side Rail	2 pcs


(Box 1)

BOX OF HEADBOARD & FOOTBOARD

No	ITEM	Qty
1	JCBC M6 x 30mm	6 pcs
2	SPRING WASHER 1/4" Rbw	6 pcs
3	Flat Washer 1/4"TD x 13mmOD Blk	6 pcs
4	ALLEN KEY m4x65mm Blk	1 pc
5	Csk M4 x 32mm	8 pcs
6	ALLEN KEY m5x65mm Blk	1 pc

STEP 3 : Tighten the 4 Corner with Allen Key (6). Fix the Bed Slat Support Leg (F), to Bed Slat (E) as shown . Install the bed slat (E) to side rail (G) and tighten with Csk Screw (5) as per diagram shown. (NOTE: THE SETUP MUST DONE AT THE DECIDED LOCATION FOR THE BED TO OBTAIN PERFECT STABILITY)

STEP 3.2 :

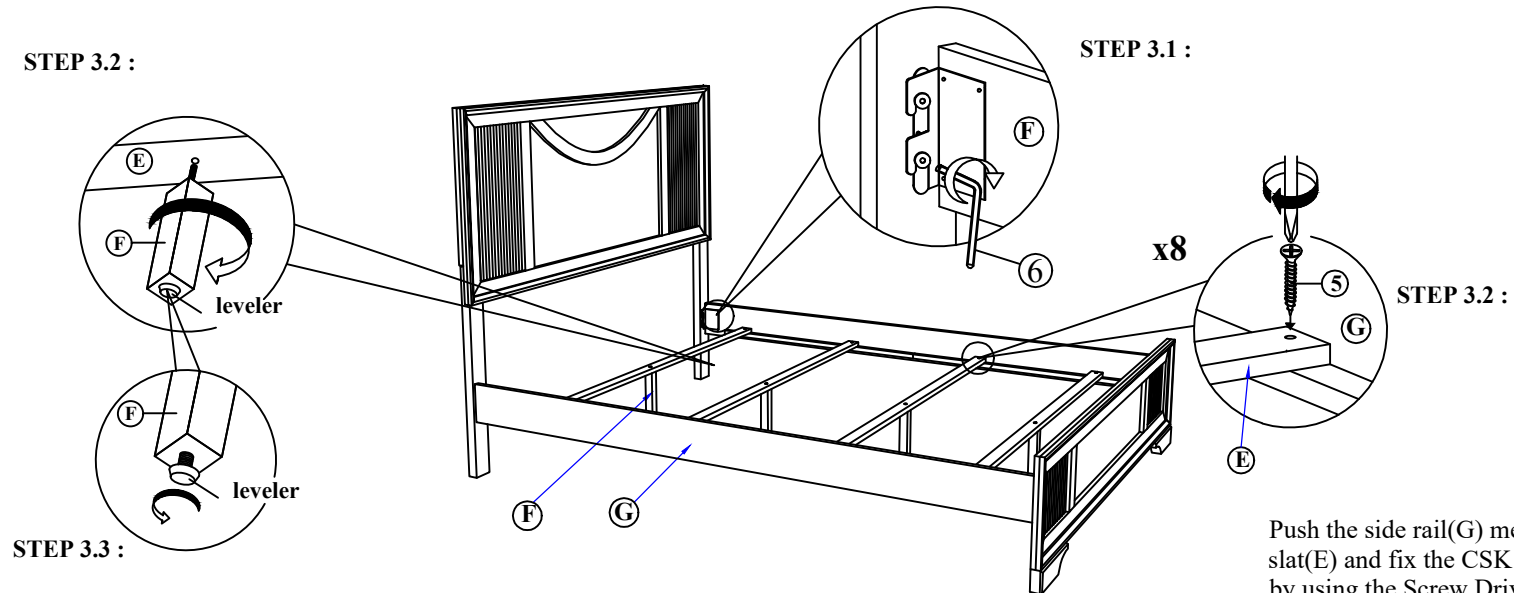

Push the side rail (G) meet with wooden slat (E) and fix the CSK screw (5) by using the Screw Driver.

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.