



ASSEMBLY INSTRUCTION

ITEM#: 13600

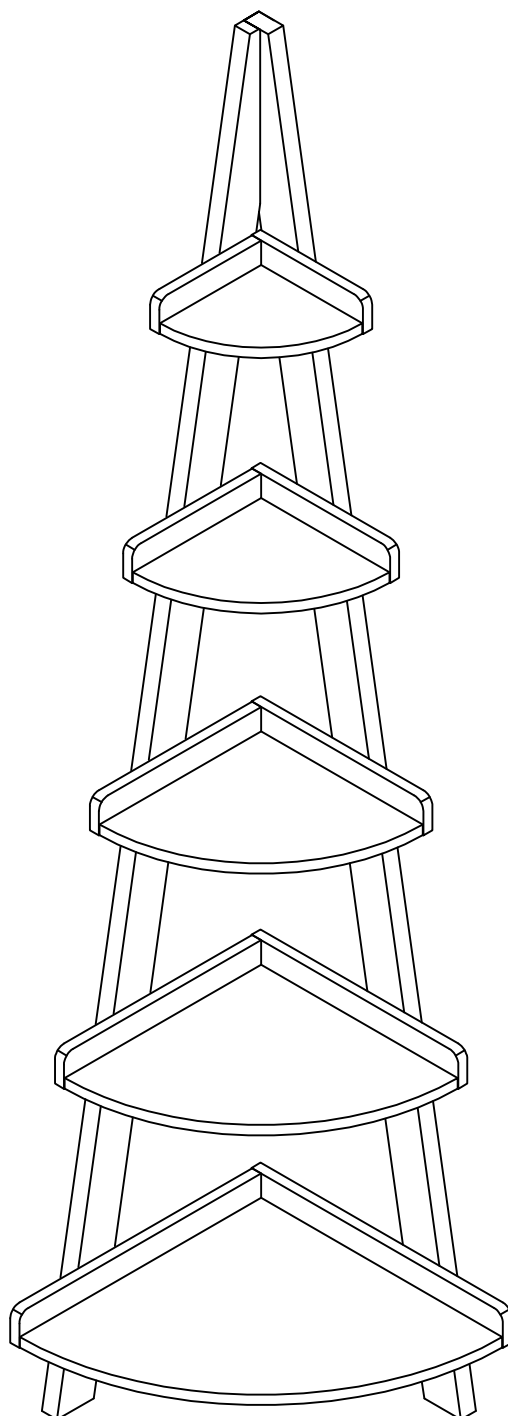

PARTS IDENTIFICATION






ITEM#: 13600

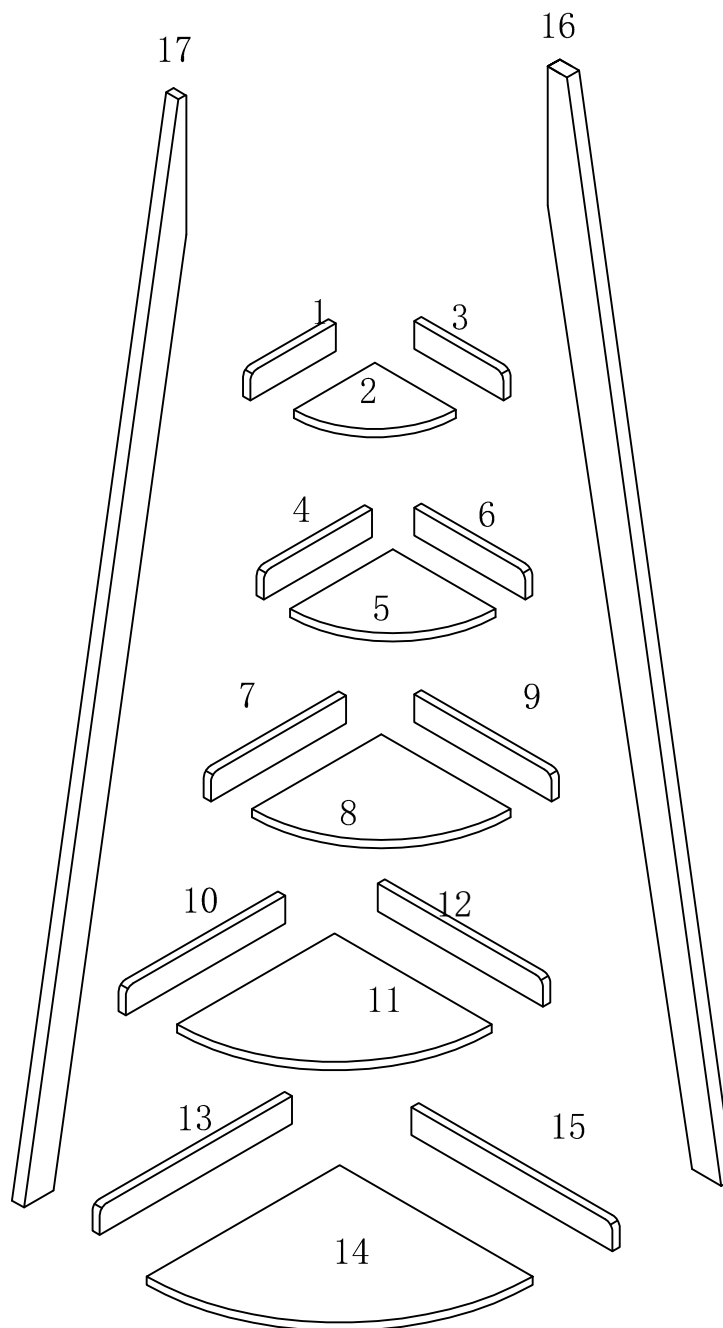

(1)	1pc	(7)	1pc	(13)	1pc
(2)	1pc	(8)	1pc	(14)	1pc
(3)	1pc	(9)	1pc	(15)	1pc
(4)	1pc	(10)	1pc	(16)	1pc
(5)	1pc	(11)	1pc	(17)	1pc
(6)	1pc	(12)	1pc		


HARDWARE IDENTIFICATION

ITEM#: 13600

A		18	1pc
B		6×35	1pc
C		8×25	16pcs
D		4×35	15pcs
E		13	25pcs
F		4.2×65mm	10pcs
G		197×5× 1	1pc
H		12×12× 1	2pcs
I		Φ 4 × 25	1pc
J		Φ 5 × 40	1pc
K		Φ 8 × 40	1pc
L		Φ 16	2pc
M		Glue: For securing please apply to wood dowel first before inserting into panel	1pc


ASSEMBLY INSTRUCTION

ITEM#: 13600

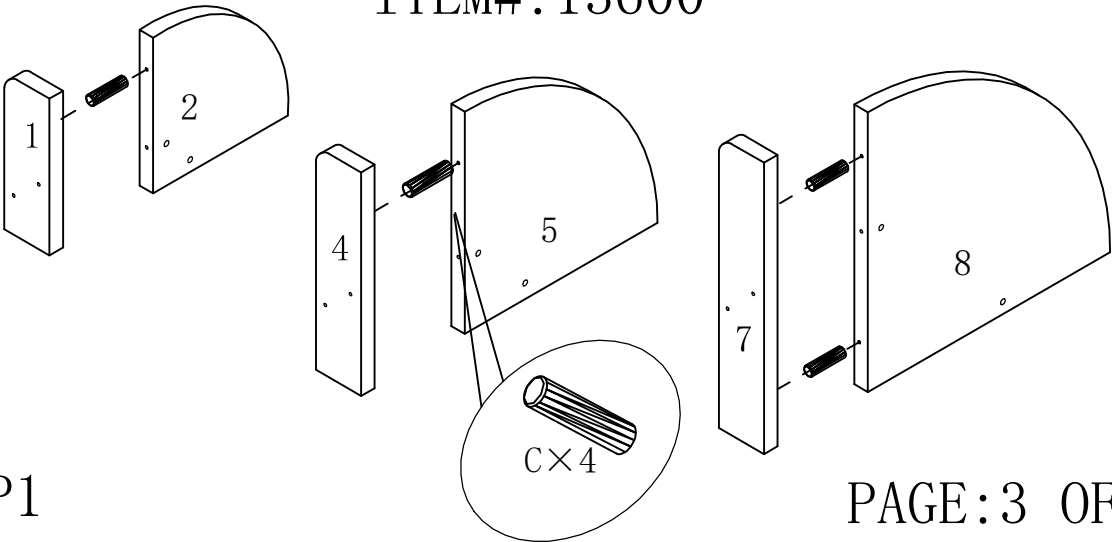


ASSEMBLY INSTRUCTION

ITEM#: 13600

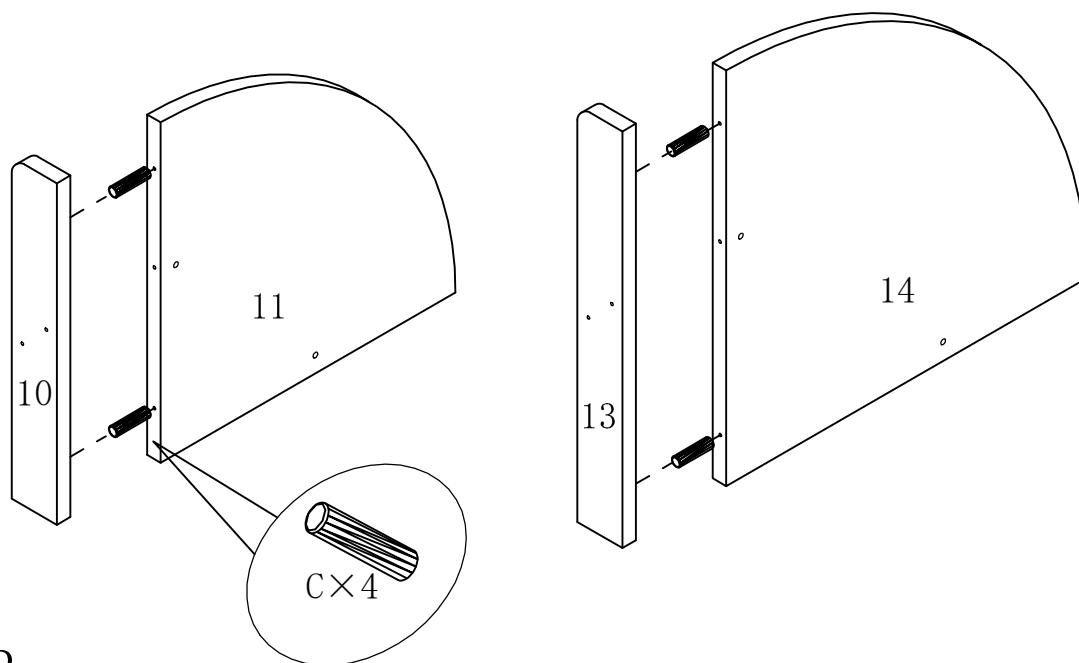


STEP 2

STEP 3

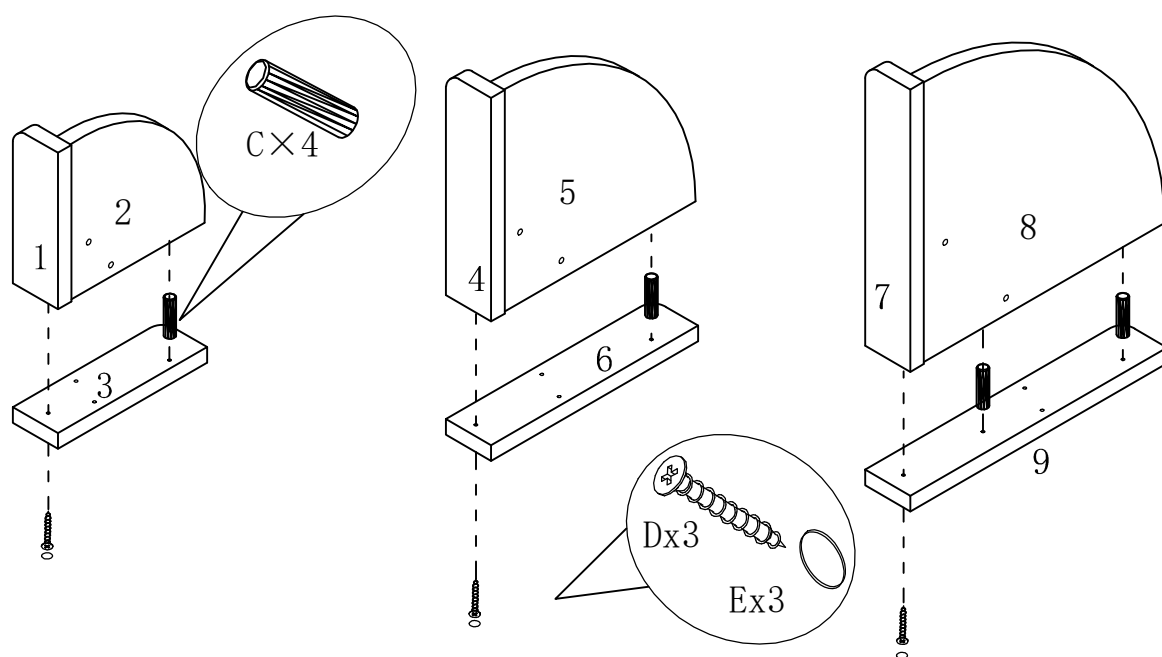


ASSEMBLY INSTRUCTION

ITEM#: 13600

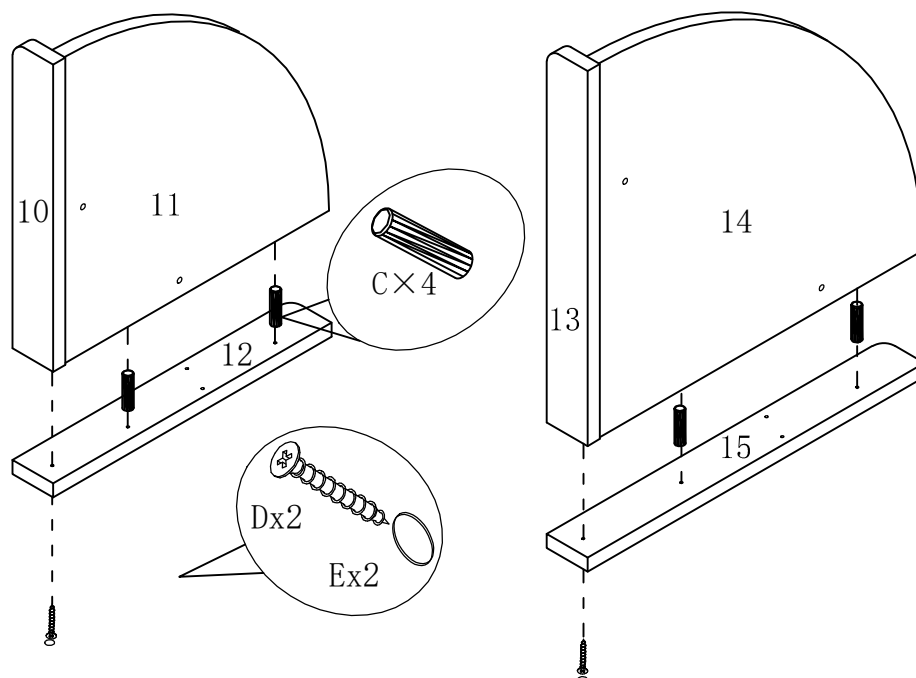


STEP 4

STEP 5

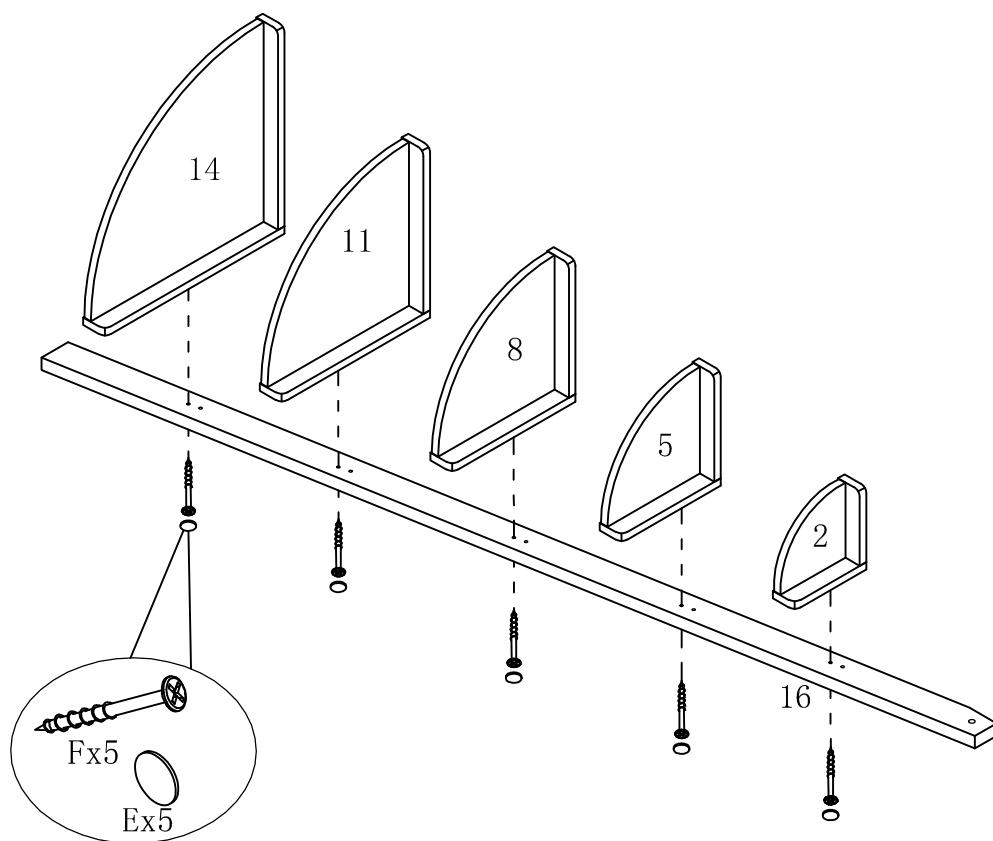


ASSEMBLY INSTRUCTION

ITEM#: 13600

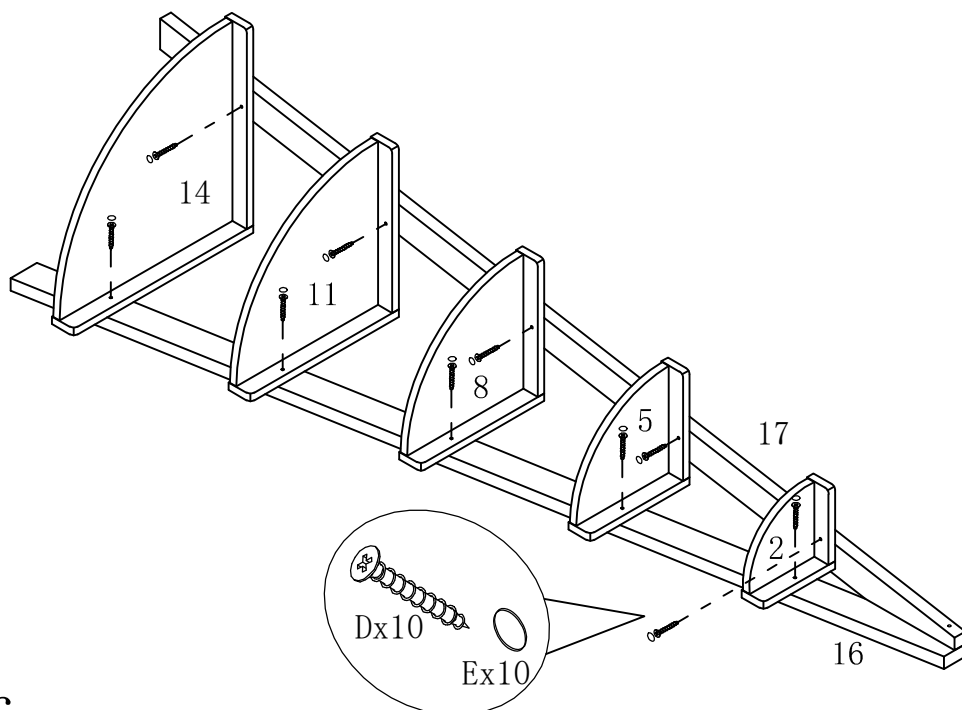

STEP6

STEP7

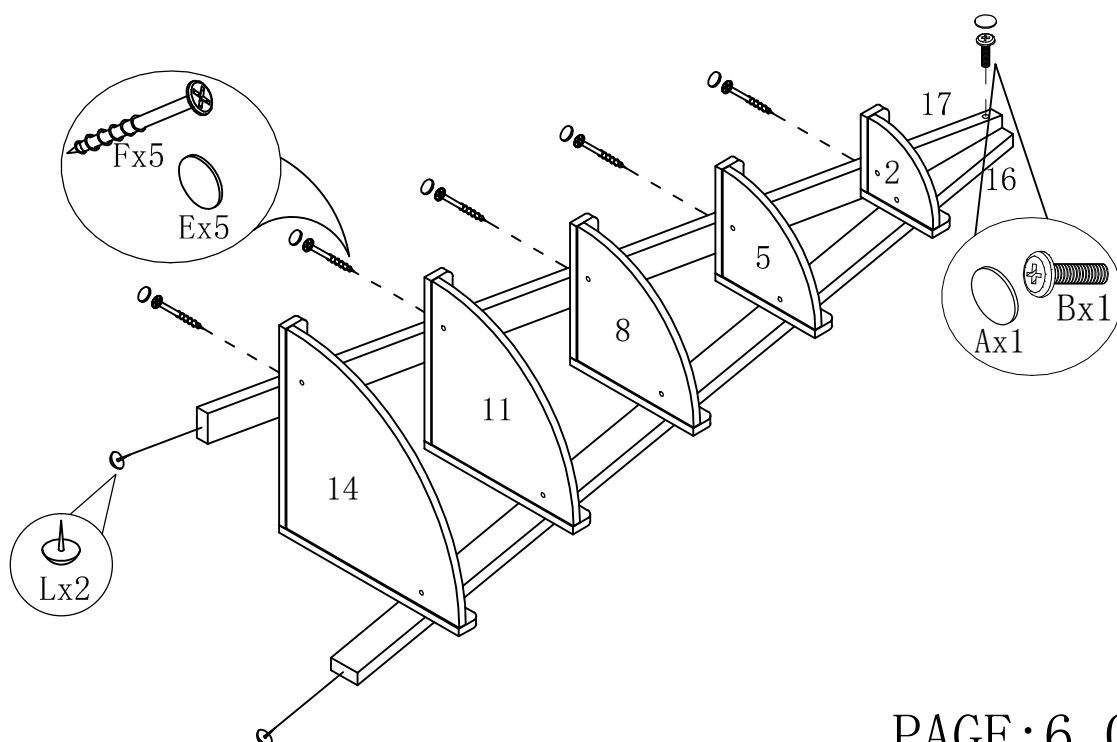

PAGE:6 OF 7

ASSEMBLY INSTRUCTION

ITEM#: 13600

