INSTURCTION MANUAL

ASSEMBLY GUIDE

Before enjoy the comfort chair, you have to put it together. This Assembly Guide will take you through the basic assembly process. To make sure your assembly goes smoothly, please follow the assembly instructions, and especially the important safety information. Also, while it is possible to assemble the chair


on your own, having a second person to help you makes it even easier.

Before you begin, please check if there are any missing parts from the package. Should there be any issues, please don't hesitate to drop us an email and we'll help you out ASAP.

If you run into any difficulty during the assembly, remember to check out the Assembly Video to see if you've missed anything. If you're unable to resolve your problems, drop us an email as well and our support team will assist you.


ASSEMBLY INSTRUCTION STEP 1: Step 1:

Turn the Star Base upside down , then press the Casters into the holes at the end of each base leg.



Step 2: Turn the Star Base upright and insert the Lift into the center hole of the Star Base, the lift Cover should be placed over the Lift.

OC211

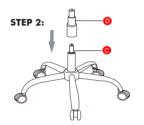

Step 3: Align the seatplate to the bottom of the seat cushion, make sure that the front of the seat plate is facing the front of the seat cushion Attach the seat plate to the seat cushion using four M6x20mm bolts.tighten all the bolts with the T-wrench.



Step 4: Align two control handles of the seat plate over the pre-drilled holes underneath the seat cushion with four M6x20mm Bolts, tighten all the bolts with the T-wrench.



STEP 5:


Step 5: At ach Seat Cushion and with the wrench.



STEP 6:

STEP 8:

Back Cushion, align the Steel Plate over the pre-drilled holes undemeath the back cushion with three M8x20mm Bolts, tighten all the bolts

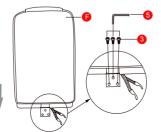

bolts

CAUTION:

Step 6:Turn the seat cushion

uprightand align the center hole of the seat plate over the lift, then

push the seatcushion down onto

the lift firmly until the connection


is secure.

Make sure all bolts and screws are fully tightened before using chair. Lubricate all moving parts and tighten all bolts/screws every 6 month or whenever needed


Step 8: Press the plastic caps into

the adjuster holes to cover the




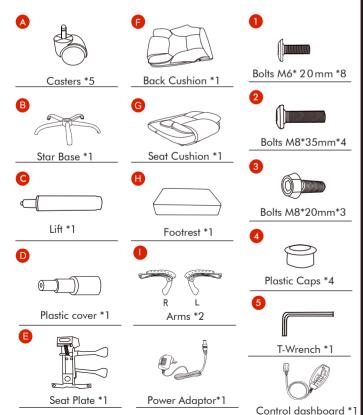


Step 9: The chair comes with remote control to change massage settings, choosing time, intensity, mode, etc

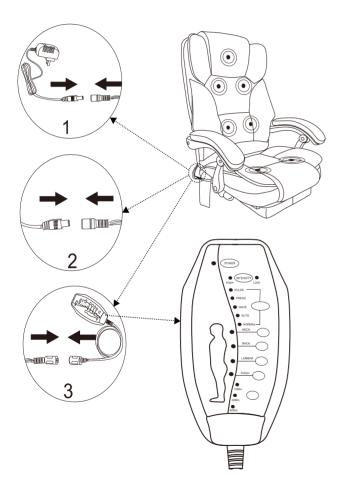

INSTRUCTIONS FOR USE

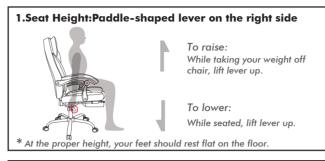

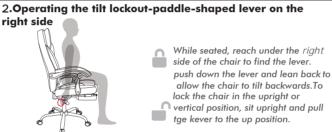

SAFETY AND MAINTENANCE

- Do not stand on the chair, Do not use the chair as stepladder.
- Use this product for seating one person at a time.
- Do not use the chair unless all bolts and screws are frmly secured.
- Avoid contact with sharp objects to prevent puncturing the fabric.
- Every 6 months, check all bolts and screws to ensure they are tight.
- To clean, spot clean only using a damp towel and mild cleaner, frst test on a small, obscure area of fabric.
- Chair weight limit not to exceed 350 lbs.

SAFETY INFORMATION



Sit in the center of the chair.with your back to the backrest



Do not sit at the front edge of the



Do not stand on the







Do not push the chair around when a person is sitting in it



Do not push down on the backrest when a person is



Do not place all your weight on the backrest only